

OCTOBOT

MANUAL



- Robot
- Remote Control
- User Manual

READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.

- 1. Do not use your robot near water. Clean using a soft cloth or paper towel.
- 2. Do not place your robot on any surface other than a hard floor.
- 3. Do not allow children under the age of five to play with robot.
- 4. Do not expose your robot to excessive heat, flames or fire.
- 5. Always press all buttons or switches carefully.
- 6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
- 7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
- 8. Do not drop, puncture or expose your robot to excessive trauma.
- 9. Your robot is not intended for commercial use.

Diagram of the robot's control panel with the following labels:

- Signal indicator
- Forward
- Centre
- Program play
- Pause / Play
- Signal transmitter
- Turn
- Program
- Light control

-1-

Robot

Robot

1. Unscrew to open battery cover, insert 3 X 1.5V AAA batteries.
2. Replace battery cover.


Attention: remove batteries after you have finished using your product.

Remote control

1. Unscrew to open battery cover,
insert 2 X 1.5V AAA batteries.

2. Replace battery cover.

Attention: remove batteries after you
have finished using your product.

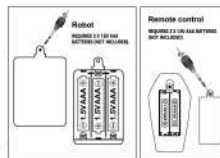

POWERING ON YOUR ROBOT

Once you have inserted batteries into your robot and remote control, you can go ahead and power on your robot. To do so, switch the ON / OFF button to turn on the robot. (The LED light of the robot will be on.) When you do not operate this robot for about 3 minutes, it will make a sound and enter sleep mode; you can restart by switching the ON / OFF button to resume use. When you have finished playing with your robot, switch the ON / OFF button to turn off the robot.

NOTE: When your robot is running low on power, it will emit an audible tone and power down. Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

MOVING YOUR ROBOT

You can use your remote control to move your robot around in different directions.

By pressing the forward button, the robot will walk forwards for a distance.



By pressing the turn button, the robot will turn counterclockwise.



-2-

The robot can be programmed with up to 15 actions. Press the program play button to have your robot carry out the movement program that you created.

MADE IN CHINA
CUSTOMER SERVICE
 HOWARD: 800-455-6243 • HOWARD: 800-455-6243 • HOWARD: 800-455-6243 • HOWARD: 800-455-6243

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
 READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
 PLEASE KEEP THE PACKAGING AND INSTRUCTIONS MANUAL FOR FUTURE REFERENCE.

WARNING: BATTERIES ARE TO BE RECHARGED WITH THE CORRECT POLARITY (+) AND (-) AND DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE NOT TO BE CHARGED IN A FLAMMABLE, COMBUSTIBLE, OR VOLATILE ENVIRONMENT. BATTERIES ARE TO BE REMOVED FROM THE TOOL BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOOL IMMEDIATELY IN CASE OF AN OVERHEAT OR WHEN THE TOOL IS NOT BEING USED FOR AN EXTENDED PERIOD OF TIME. ALWAYS DISPOSE OF BATTERIES RESPONSIBLY. DO NOT GROUND OR INHIBIT.



43-542-437

WARNING: CHOKING HAZARD
ALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.
WARNING: FOR SAFETY REASONS, REMOVE ALL BAGS, LABELS AND
TIE NUTRITION INFORMATION (GIVING THE TOP) TO YOUR DOLL.
WARNING: THIS TOY INCLUDES PLASTIC THAT MAY
BURN & CAUSE INJURY OR DEATH IF MISUSED. ADVISE CHILDREN TO
NOT BURN OR USE IN FIRE.

-3-