





- How to pair
- 1. Turn on the vehicle first, then turn on the transmitter.
- 2. Keep pulling the trigger of the transmitter to match the vehicle
- 3. When the vehicle is functioning, that means they are matched.
- 4.If it doesn't complete the binding process within 8 seconds, please turn off both the vehicle and transmitter and re-start the binding process.
- 5. When the binding process is complete, whenever you switch the vehicle and transmitter on and off, it searches for the memorised code and will only lock onto the transmitter signal containing that code.
- 6.If you have more than two vehicles, please bind them one by one. When the second vehicle is binding, always keep the first vehicle and transmitter on.
- 7.Please turn off both the vehicle and transmitter and re-start the binding process if you are changing to another 2.4GHZ transmitter



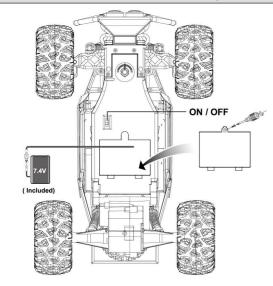




# Replacing batteries of the transmitter

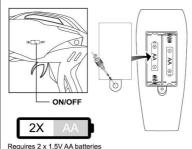

- (Not included) 1. open the battery cover.
- 2. install 2 x1.5V AA batteries.(Pay attention to the polarity of the battery, do not install it in reverse.)
- 3. close the battery cover.

## **Remote Control Operation**

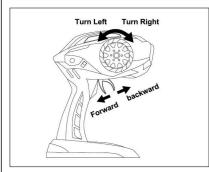















Note: When there is no operation on the remote control for 3 minutes, the car will enter sleep mode, and the car will not be able to be remotely controlled. At this time, you need to turn on the power switch of the car to operate


## How To Operate:

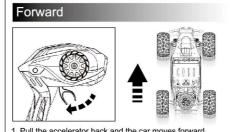


1. Pull the accelerator back and the car moves forward.

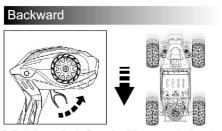


2. Push the accelerator forward and the car goes backward

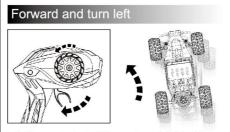


3. Pull the accelerator back, the remote control dial rotates counterclockwise, and the car turns left while moving forward.

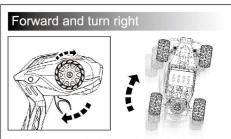

4. Pull the accelerator back, the remote control dial rotates clockwise, and the car turns right while moving forward.

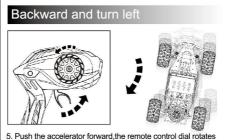

counterclockwise, and the car turns left while moving backwards

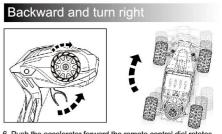

6. Push the accelerator forward, the remote control dial rotates clockwise,and the car turns right while moving backwards.



When the car is in motion, do not touch the wheels by hand to avoid damages to







Do not bend the antenna or point it at Do not play in a place with puddles other people or articles to avoid injury







Do not play on the roads or in any other dangerous places to avoid accidents

- 1. Open battery cover and separate rechargeable battery from connector.
- 2. Connect USB charging cable with rechargeable battery first, then plug the large end of USB cable into a 5Vd.c. 2A charger (not supplied) or USB port only. The red LED light on USB charging cable will light up while charging.

  3. After charging has finished, the LED light will turn off.
- 4. Disconnect USB charging cable from USB port and disconnect the rechargeable battery with USB charging cable.

### **BATTERY SAFETY**

- (1) The placement or replacement of batteries is to be performed by an adult. (2) Remove the rechargeable battery from the chassis before charging.
- (3) Always remove exhausted batteries from the car and the transmitter.
- (4) Make sure the main switch is set to OFF before installing the
- battery pack into the car body.
- (5) Batteries must be inserted with the correct polarity
- (6) Non-chargeable batteries shall not be recharged.
- (7) Do not short-circuit the batteries.
- (8) Always remove the batteries from the car and the transmitter after playing.
- (9) Never throw the batteries into fire to avoid explosion or leakage.
- (10) Do not mix batteries from different producers or new and old
- (11) You should only use batteries of the same or equivalent types as recommended.
- (12) Check the batteries on a regular basis to avoid leakage.
- (13) Keep this manual well for future reference as it contains important information about this product.





Not for children under 3 years.