

| | | | |
|-----------------------------------|--|---|------------------|
| | | Final Output Approval (Hong Kong Office Use only) | |
| | | Signature | Date of approval |
| FF7 | | Art Dept Approved | |
| Description: RC Instruction Sheet | | Engineer Approved | |
| Scale: 7.5" | | QA Engineer Approved | |
| Material Code: J02H4KMR-ISH-EN14 | | Remarks: | |
| Date: 10 Apr 2025 | | | |
| Prepared By: Andy | | | |

FF19 - 7.5" RC
Size: 21mm x 297mm
Front 1C + Back 1C

A

VAPOUR FEATURE:

Flip open refill cap. Use mini water dropper to add water.
CAUTION! Use only tap water or mineral water.
DO NOT USE purified water, distilled, or bottled water.
Only fill with water, do not use any other liquids.
Empty water tank completely after use.
* No actual HEAT



B

CLEANING:

If the atomizer gels clogged,
use white vinegar or alcohol
to clean and remove any
water residue from the
nozzle.



INSTRUCTIONS SHEET MUST BE RETAINED SINCE IT CONTAINS
IMPORTANT INFORMATION.

These operating, installation, and safety instructions are integral parts of the product.

IMPORTANT:
Please read all "CONSUMER INFORMATION" before operating this toy vehicle.

ADULT SUPERVISION REQUIRED.

Note to Adults: To ensure that the child's play is both safe and fun, please read all operating instructions and safety tips in the CONSUMER INFORMATION section with your child.

— CONSUMER INFORMATION —

CONTENTS:

1 x Vehicle, 1 x Transmitter Controller, 1 x Mini Water Dropper

SAFETY TIPS:

- Toy surface may become hot and cause burns if the electronics get wet. DO NOT OPERATE this vehicle near/in/through water, snow, sand, grass or any wet or muddy surfaces.
- Never play this vehicle on streets! The streets are for real cars!
- Do not pick up vehicle while in motion.
- Always place the car gently on the floor by hand. Never throw the car onto the floor.
- Avoid collisions with walls, any hard objects, or human/animal bodies.
- Keep fingers, hair and loose clothing away from tires and wheel hubs.
- To avoid accidental operation, remove all batteries from controller when not in use.
- Do not connect this toy with other power supplies.
- Do not insert any wire into electrical outlets.
- Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operations.
- Stay clear of obstructions and hazards to avoid injury and damage.

THIS VEHICLE IS DESIGNED TO WORK WITH 3 (THREE) STANDARD "AAA" ALKALINE BATTERIES, SOLD SEPARATELY.
CONTROLLER IS DESIGNED TO WORK WITH 2 (TWO) STANDARD "AA" ALKALINE BATTERIES, SOLD SEPARATELY.

INSTALLING BATTERIES IN THE VEHICLE (See Diagram 1)

- Requires 3 (three) "AAA" alkaline batteries (Not included)
- Push the ON/OFF switch to "OFF" position on underneath the vehicle.
- Using a screwdriver (not included), remove the battery compartment door.
- Remove and properly dispose of the used batteries (if any).
- Insert the 3 "AAA" batteries, with polarity (+/-) as shown inside battery compartment.
- Replace the battery compartment door and use a screwdriver to lock the compartment door.

INSTALLING BATTERIES INTO CONTROLLER (See Diagram 2)

Requires 2 (two) "AA" alkaline batteries (not included).

- Using a screwdriver (not included), remove the battery compartment door.
- Remove and properly dispose of the used batteries (if any).
- Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
- Replace the battery compartment door and use a screwdriver to lock the compartment door.

BATTERY SAFETY INFORMATION

- It is recommended to use only alkaline type batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Remove batteries if vehicle will not be used for a long period of time to prevent possible battery leakage.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are to be charged by an adult only.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

QUICK TIPS

- When your vehicle starts to lose power, it may lose function or performance. It's time for fresh batteries. Your vehicle's running time may change depending on your driving style.
- Radio interference can make your vehicle run abnormally. Interference can be caused by other RC vehicles running on the same frequency, electrical wires, large buildings, or CB radios. Try to stay away from these!
- Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
- If the vehicle resets automatically, that means the batteries are weak and need to be changed.

CLEANING INSTRUCTION

To clean, wipe excess dirt from toy. Remove batteries first. Wipe toy clean with damp cloth. Wipe dry. DO NOT IMMERSE IN WATER and DO NOT CLEAN VEHICLE WITH ANY CHEMICALS. Let the toy completely dry before putting batteries back into clean, dry battery compartment.

INSTRUCTION FOR DISPOSAL OF WASTE

- Your batteries and electronic toys should be recycled or disposed per your local waste management guidelines.
- Contact your local waste management officials for information regarding the environmentally sound recycling and disposal of batteries and electronic toys.

TROUBLE SHOOTING

| PROBLEM | SOLUTION |
|--------------------------------------|--|
| Vehicle will not START | 1. Power switch is off. Make sure to turn it on. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned. 3. Batteries are drained. Replace batteries and/or install new batteries. |
| Vehicle does not respond to controls | 1. Transmitter controller battery is drained. Replace the controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space. |
| Vehicle does not drive straight | 1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight / forward. |
| Vehicle does not move | 1. Stop operation, switch off the power and rest your vehicle a few minutes. 2. Check the position of the batteries in the vehicle, they may have been knocked loose during play. |
| Vehicle does not respond properly | Major reason is out of range. Bring controller closer to the vehicle. If problem still happen, remove the controller batteries and replace with new batteries and restart (ON/OFF) the vehicle. |
| Transmitter controller does not work | The controller light is off, its battery is drained. Replace the controller battery. |

Industry Canada Warning:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.
Products with batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



We reserve the right to improve or amend product specifications. Colors may vary.
Jada oval mark is a registered trademark of Jada Toys, Inc.

©2025 JADA TOYS, INC. CITY OF INDUSTRY, CA 91748, USA

MADE IN CHINA

The product uses 2.4GHz remote control technology.

RF frequency band: 2411-2472 MHz
Transmitter power: 2.8dBm


Steering Dial

TO ADJUST STEERING ALIGNMENT


Adjust the steering alignment lever on the underside of the vehicle when the vehicle doesn't run straight / forward.




steering alignment lever

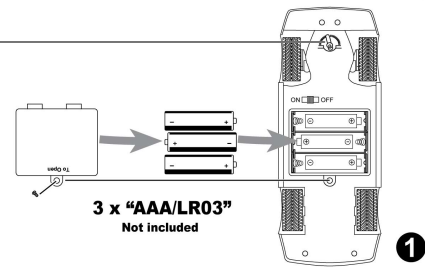

2 x "AA/LR6"
Not included

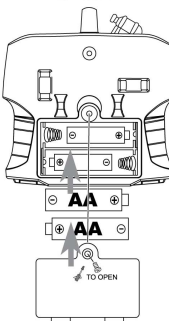

2 TO OPEN

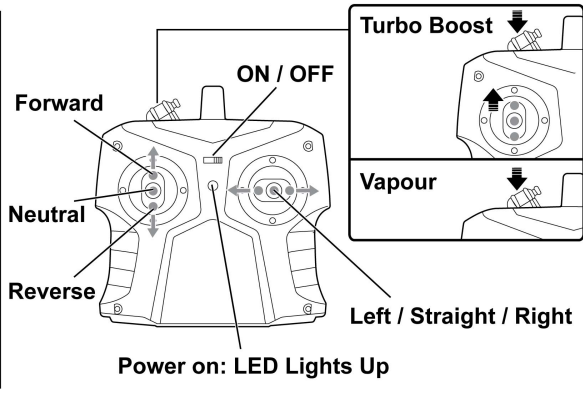

HOW TO PLAY:

- Turn the vehicle ON, then turn the transmitter controller ON within 30 seconds.
 - * Do not press any buttons or switches on the controller while pairing, this may cause interference.
- The LED on controller will start blinking.
- Once the pairing is successful, the LED on controller will stop blinking and stay on.
- If pairing is unsuccessful, turn the vehicle and controller OFF and try again.

- * If your controller LED is blinking or losing brightness, please replace the battery.
- * When playing with multiple vehicles, only pair one controller to one vehicle at a time in order to avoid interference.

TURBO BOOST FEATURE:

- Press down the Turbo Button to increase the speed of the vehicle
- The light on the controller will flash quickly to indicate that the Turbo Boost is in use
- Release the Turbo Button to resume back to normal speed