



Accessories remove from the frame by consumers

Assembly drawing for front side

- 1 Install the accessories on the corresponding card slot



Assembly Steps for back side

- 1 Put the cardboard on the back and bottom



Assembly part I

- 2 Assembly completed



- 2 Install window sills, stairs, indoor furniture, garden floor and other accessories



- 3 Install stairs, right door and other accessories



- 5 Assembly completed




- 4 Install the bottom support clip and fence



Assembly part II

- 1

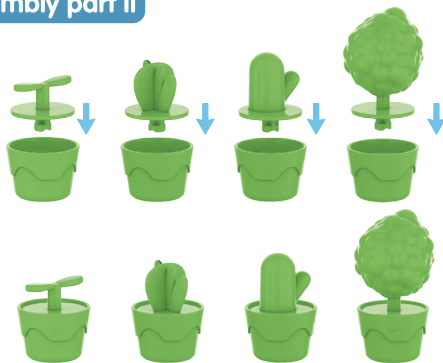

- 2



WARNING: CHOKING HAZARD AND STRANGULATION HAZARD.
SMALL PARTS AND LONG CORD. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

CAUTION: ASSEMBLY AND DISASSEMBLY MUST BE CARRIED OUT BY ADULTS ONLY.

THIS IS A TOY, INTENDED FOR ROLE PLAY ONLY.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

43543649

Instruction

3+
Years

Disney
FROZEN



3in1

©Disney