



Instruction manual

K: 43-545-056 | T: 70-969-399

Model No: DY2410169

LED SUNSET LIGHT

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using this product, and save them for future reference or new users.

WARNING: FOR INDOOR USE ONLY. READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.

Operating manual:

1. Rotate the bottom cover according to the "open" indication.
2. Open the bottom cover, insert 3 x 1.5V AAA battery.
3. Rotate the bottom cover back.

4. You can turn the light on by press the top button switch, default in high brightness mode, press the top button switch again, it will change to low brightness mode, press the top button switch again to turn off the light.
5. Peel off the tape on the bottom and stick on a smooth, tidy surface.
6. Wipe the dust before stick.

Battery installation:

Product: Each light requires 3 x 1.5V AAA batteries (not included).
Battery installation by an adult is required.

Battery Warning:

- Batteries are to be inserted with correct polarity.
- Do not mix different types of batteries or new and used batteries.
- The supply terminals are not to be short-circuited.
- Remove batteries from the product when not in use for extended time or when batteries become exhausted.
- Dispose of batteries responsibly.
- Do not dispose of in fire.

**WARNING: ENSURE SECURE
ATTACHMENT TO WALL. CONSULT
A DIY EXPERT IF REQUIRED.**