

Assembly Instructions

K: 43545148 | T: 70969719 SWIVEL STORAGE STAND

 
 
 
CARE INSTRUCTIONS:



Check and tighten all parts regularly. Wipe clean with a soft damp cloth. For indoor and domestic use.


Warning: Do not drag and lean on the product. Only use on firm and flat surface. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.

MAXIMUM SAFE LOAD: EACH TIER 1.5KGS.


Hardware list

	A	Pad	4PCS
	B	Bracket	1PC
	C	Strap	1PC

	D	Wall Plug	2PCS
	E	Screw	2PCS


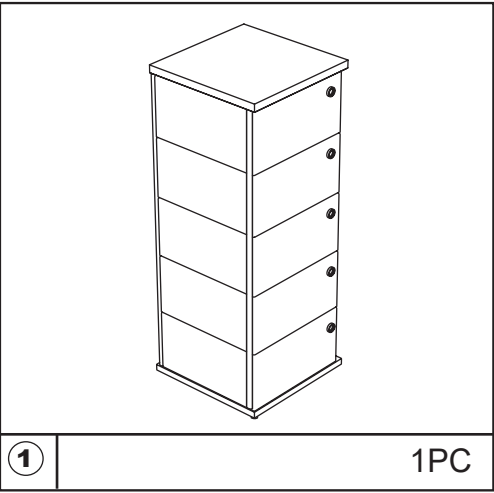


STEP 1

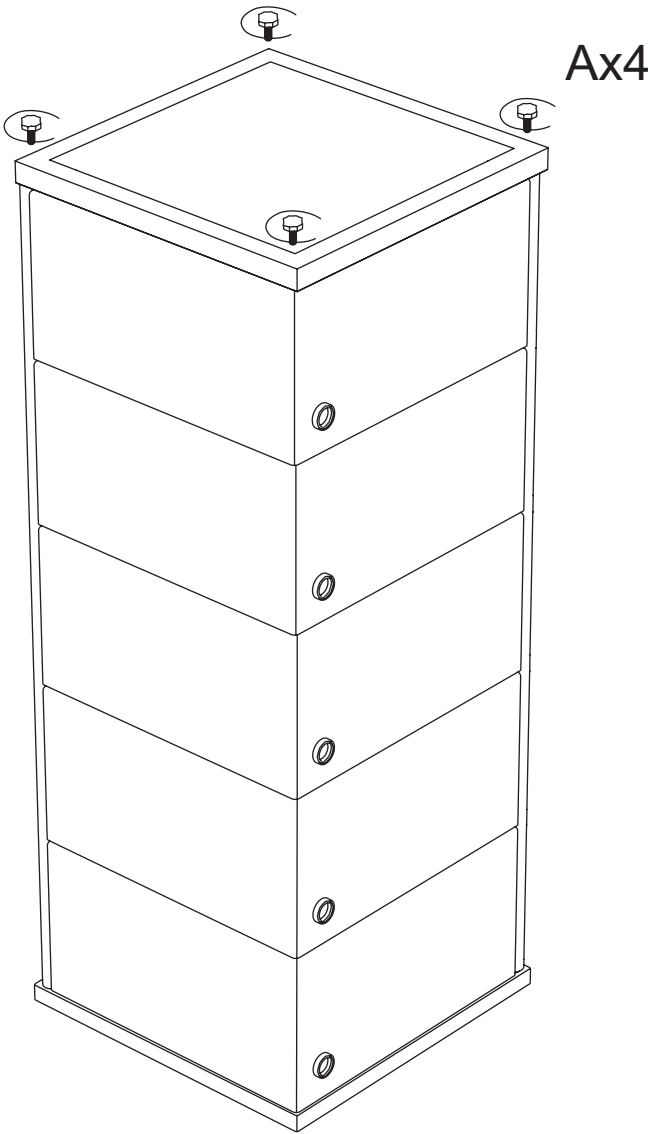

STEP 2

Wall

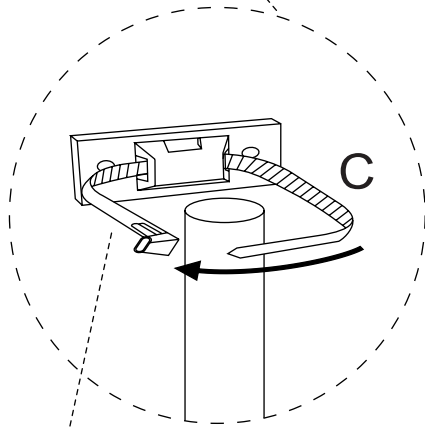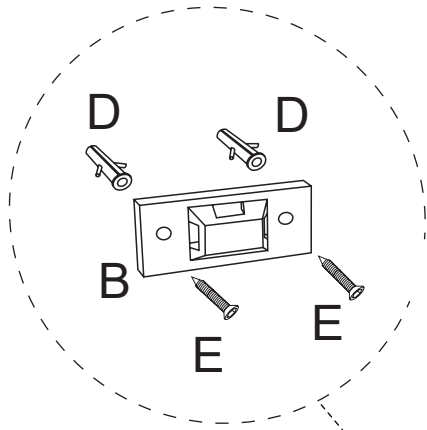

Fasten the strap to the bracket:
put the smooth face outside,
put the rough face inside.



Warning:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution:

for your safety when attaching the anchor fixings, please note the following:


- Check any electrical wires or plumbing inside the wall before drilling any holes.(if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



⚠ WARNING

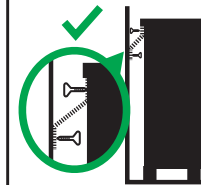

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!