


**3+**  
YEARS

# MEMORY GAME



## INSTALLING THE BATTERIES:

- 1 - Open the battery compartment.
- 2 - Insert 3 x 1.5V AA batteries with the correct + and - polarities.
- 3 - Close the cover.

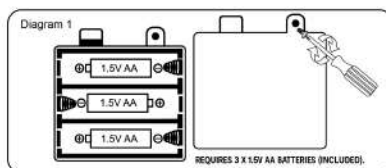

## HOW TO PLAY

Slide the ON/OFF switch of the product to the ON position. Press and hold the switch mode button to select one of the following 4 game modes, press the start button to start the game.

Note: The game will start at level 1 by default, and you can select the corresponding difficulty level by pressing the level button before starting the game.

(Only Memory and Whack-a-mole games can be leveled)



### Memory game

1. The outer 6 coloured buttons will play a sound and light up randomly.
2. Follow the correct order and press the relevant button accordingly. You have 8 seconds to complete the game.
3. If the coloured button is selected in the incorrect sequence or not played in required time then the player will receive a warning sign and the game is over.
4. Press the start button to commence a new game as required.

### Whack-a-mole

1. The outer 6 coloured buttons will play a sound and light up randomly.
2. Follow and press the buttons as fast as you can.

### Follow the light

1. The outer 6 coloured buttons will light up randomly.
2. Follow and press the buttons.

### Music play

Press the buttons to create your own music.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

THE BATTERIES INCLUDED ARE FOR DEMONSTRATION PURPOSES ONLY. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

K: 43-545-292 | T: 70-989-809

**WARNING: CHOKING HAZARD**  
(SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS)

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

MADE IN CHINA

**CUSTOMER SERVICE:**  
KMART AU: 1800 124 125  
KMART NZ: 0800 945 995  
TARGET AU: 1300 753 567

