


Jada		Final Output Approval (Hong Kong Office use only)	
Art Dept Approved	Signature	Date of approval	
Engineering Approved			
QA Engineer Approved			
Remarks:			
Description: RC Instruction Sheet	Scale: 1:16	Material Code:	
Date: Feb 05, 2021	Prepared By: eddy		

Jurassic World Jeep RC - 1:16 RC_EN

Size: A4

Front 1C + Back 1C

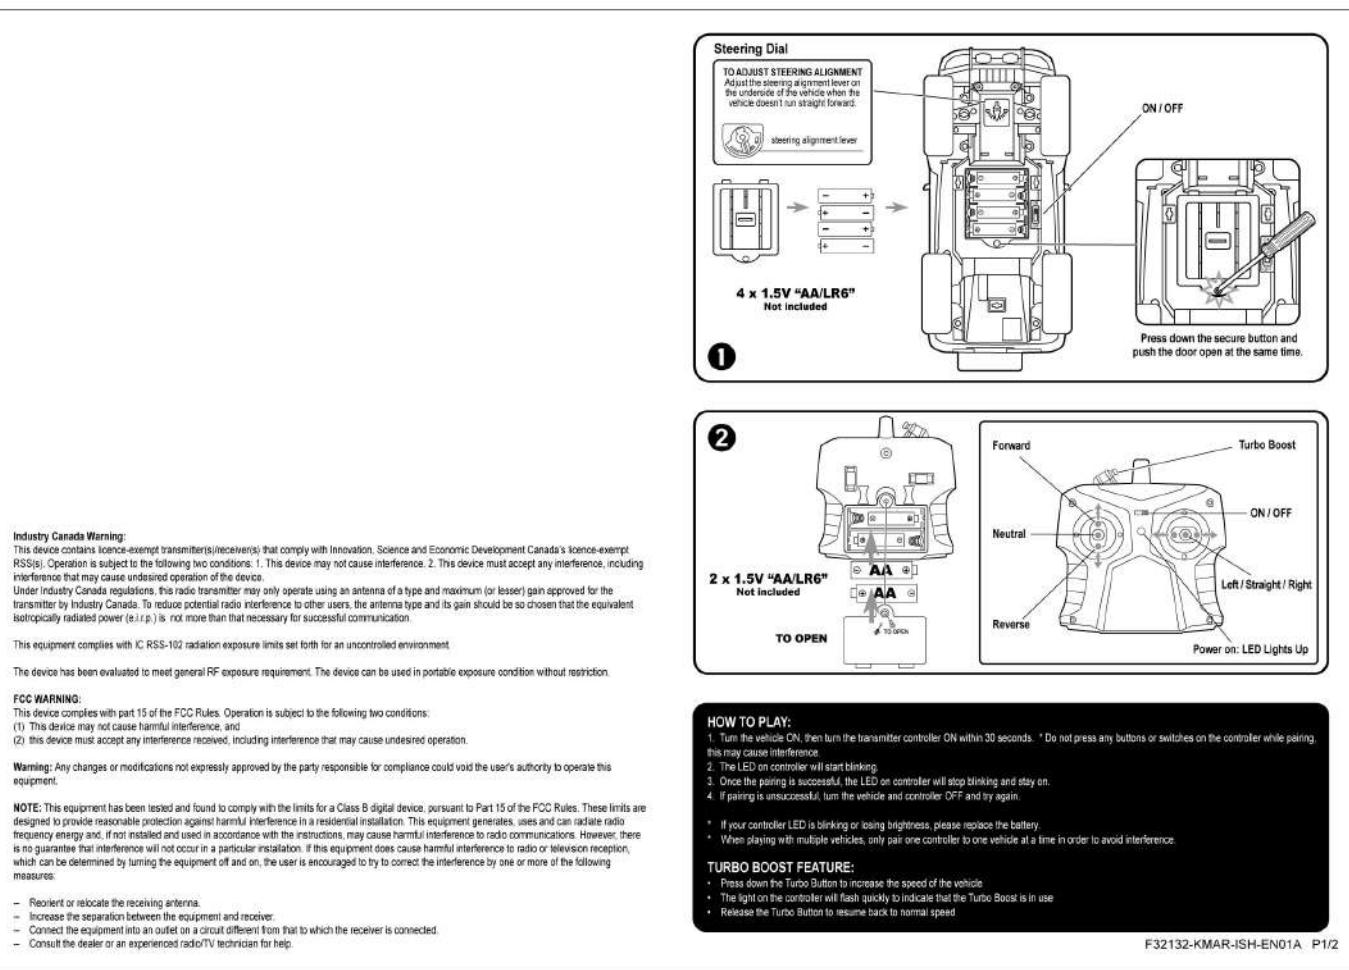

Industry Canada Warning:

This device contains licence-exempt transmitters/receivers that comply with Innovation, Science and Economic Development Canada's licence-exempt RSSs. Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INSTRUCTIONS SHEET MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION.

These operating, installation, and safety instructions are integral parts of the product.

IMPORTANT:

Please read all "CONSUMER INFORMATION" before operating this toy vehicle.

ADULT SUPERVISION REQUIRED.

Note to Adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety tips in the CONSUMER INFORMATION section of this owner's manual.

-- CONSUMER INFORMATION --

CONTENTS:

- 1 x Vehicle
- 1 x Transmitter Controller

SAFETY TIPS:

- * Toy surface may become hot and cause burns if the electronics get wet. DO NOT OPERATE this vehicle near/in/through water, snow, sand, grass or any wet or moist surfaces.
- * Never play this vehicle on streets! The streets are for real cars!
- * Do not pick up this vehicle while in motion.
- * Always place the car gently on the floor by hand. Never throw the car onto the floor.
- * Avoid collisions with walls, any hard objects, or human/animal bodies.
- * Keep fingers, hair and loose clothing away from tires and wheel hubs.
- * To avoid accidental operation, remove all batteries from controller when not in use.
- * Do not allow children to play with electrical outlets.
- * Do not insert any wire into electrical outlets.
- * Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operations.
- * Stay clear of obstructions and hazards to avoid injury and damage.

THIS VEHICLE IS DESIGNED TO WORK WITH 4 (FOUR) STANDARD "AA" BATTERIES.

CONTROLLER IS DESIGNED TO WORK WITH 2 (TWO) STANDARD "AA" BATTERIES.

INSTALLING BATTERIES IN THE VEHICLE (See Diagram 1)

Requires 4 (four) "AA" batteries.

1. Push the ON/OFF switch to "OFF" position underneath the vehicle.
2. Press down the secure button and push the battery compartment door open at the same time.
3. Remove the old batteries (if any).
4. Insert the 4 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
5. Replace the battery compartment door and use a screwdriver to lock the compartment door.

INSTALLING BATTERIES INTO CONTROLLER (See Diagram 2)

Requires 2 (two) "AA" batteries.

1. Using a Phillips head (not included), remove the battery compartment door.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door and use a screwdriver to lock the compartment door.

BATTERY SAFETY INFORMATION

- * It is recommended to use only Alkaline type batteries.
- * Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- * Remove batteries if vehicle will not be used for a long period of time to prevent possible battery leakage.
- * Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
- * Rechargeable batteries are to be removed from the toy before being charged.
- * Rechargeable batteries are not to be disposed of in an adult only.
- * Non-rechargeable batteries are not to be recharged.
- * Different types of batteries or new and used batteries are not to be mixed.
- * Batteries are to be inserted with the correct polarity.
- * Exhausted batteries are to be removed from the toy.
- * The supply terminals are not to be short-circuited.

QUICK TIPS

- * When your vehicle starts to lose power, it may lose function or performance. It's time for fresh batteries. Your vehicle's running time may change depending on your driving style.
- * Radio interference can make your vehicle run abnormally. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings, or CB radios. Try to stay away from these!
- * Point your transmitter controller antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- * Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
- * If the vehicle rests automatically, that means the batteries are weak and need to be changed.

CLEANING INSTRUCTION

To clean, wipe excess dirt from toy. Remove batteries first. Wipe toy clean with damp cloth. Wipe dry. DO NOT IMMERSIVE IN WATER AND DO NOT CLEAN VEHICLE WITH ANY CHEMICALS. Let the toy completely dry before putting batteries back into clean, dry battery compartment.

INSTRUCTION FOR DISPOSAL OF WASTE

- * Your batteries and electronic toys should be recycled or disposed per your local waste management guidelines.
- * Contact your local waste management officials for information regarding the environmentally sound recycling and disposal of batteries and electronic toys.

TROUBLE SHOOTING

PROBLEM	SOLUTION
Vehicle will not START	1. Power switch is off. Make sure to turn it on. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned. 3. Batteries are drained. Charge batteries and/or install new batteries.
Vehicle does not respond to controls.	1. Transmitter controller battery is drained. Replace the controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space.
Vehicle does not drive straight.	Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.
Vehicle does not move.	1. Stop operation, switch off the power and rest your vehicle a few minutes. 2. Check the position of the batteries in the vehicle, they may have been knocked loose during play.
Vehicle does not respond properly	Major reason is out of range. Bring controller closer to the vehicle. If problem still happens, remove the controller batteries and replace with new batteries and restart (ON/OFF) the vehicle.
Transmitter controller does not work	The controller light is off, its battery is drained. Replace the controller battery.



R-NZ

Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Products with batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

6+



We reserve the right to improve or amend product specifications. Colors may vary.
Jada oval mark is a registered trademark of Jada Toys, Inc.

©2025 JADA TOYS, INC. CITY OF INDUSTRY, CA 91748, USA

MADE IN CHINA

F32132-KMAR-ISH-EN01A P2/2

