

Circus Light Up Tent Instruction Manual


3+
years

Parts List:

Tent pole x 4pc (when fully assembled)
Tent x 1pc
String light x 1pc (3 x AA Battery not included)
Carry bag x 1pc
Net bag x 4pc

Assembly Instructions:


- Step 1. Connect each of the short poles together to form four long poles. Slide net into the pole from the red side and tie a knot.
- Step 2. Unfold the tent to form a round shape.
- Step 3. Insert the red end of the poles into the pockets located at the tip of the tent and insert the other black end of the poles into the pockets located at the bottom of tent. Tie the straps and the string light together with the poles. Put battery box into the bag at the roof of tent, slide light string into net bag along the arrow indicated path, then tie a knot with the loop on the end.

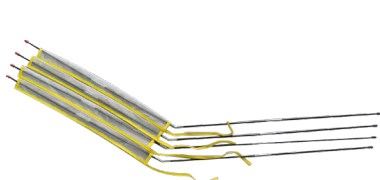

Step 1



Step 2

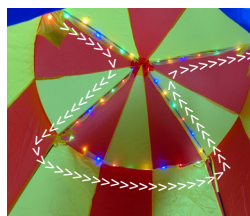

Step 3

Folding Instructions for Tent:

Remove the string light and all the poles first, and fold the tent to form a round shape (Fig.1), then fold it from C, D point (Fig.2) Attach A point on the floor and fix it with foot (Fig.3), twist B point clockwise and let D point to move inside to form two smaller loops (Fig.4), overlap C point on B point, you can see a round folded shape (Fig.5). Wrap the folded tent with elastic belt to keep it compressed (Fig.6). Now it is easy to put it into the carry bag.

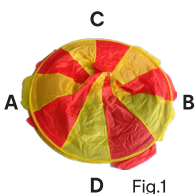


Fig.1

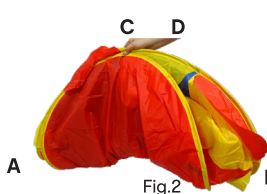


Fig.2

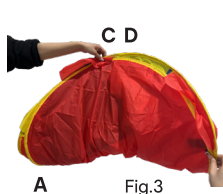


Fig.3

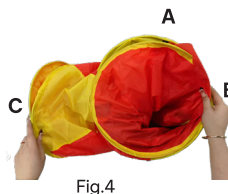


Fig.4

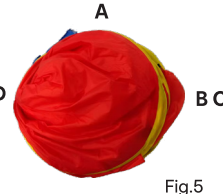


Fig.5



Fig.6

WARNING!

1. Read instructions carefully before assembly.
2. Adult assembly required. Bags are packages, not toys. Remove bags before giving the toy to your child.
3. The string light has ON/FLASH/OFF functions.
4. This toy produces flashes that may trigger epilepsy in sensitized individuals.
5. Keep away from fire. Never allow a naked flame near this product, the fabric will burn if left in continuous contact with flame and heat sources.
6. This product has an internal spring frame that will pop open with some force when opened. Never let small children unfold or fold this product. Caution must be used in the handling of this product.
7. For indoor use only.
8. Take out the batteries from battery box when not in use for an extended time. Exhausted batteries are to be removed from the toy.
9. Please keep these instructions for future reference.

Care Instructions:

1. Wipe clean with damp cloth, do not use abrasive material or solvents.
2. Ensure the tent is clean and dry thoroughly before storage.
3. Always turn off the light and store in a dry place when not in use.

Battery Replacement

The string light uses 3 x AA batteries. If the light is becoming weak, it's suggested to change the batteries. Use screw driver to unscrew the bolt on the lid of battery box and replace the batteries as the image shows, then put the lid back on the box and screw the bolt into the hole firmly. Please note: Batteries are to be inserted with the correct polarity (+ and -). Different types of batteries or new and used batteries are not to be mixed. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Rechargeable batteries should be charged under adult supervision.

