

# Assembly Instructions

**K: 43548071 | T: 70979725 LEON ENTRY SHOE CABINET**

 






## WARNING:


 




THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES. **C MAX SAFE LOADING: FOR TOP: 10KGS FOR DRAWER: 7 KGS.** IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.














IT IS RECOMMENDED FOR 2 PEOPLE TO ASSEMBLE/MOVE THIS ITEM TO AVOID ANY POTENTIAL INJURY AND/OR DAMAGE.


**CARE INSTRUCTION:** WIPE CLEAN WITH A SOFT DRY OR DAMP CLOTH. CHECK AND TIGHTEN ALL PARTS REGULARLY.

## Hardware List

             
	a	M6X35mm	16pcs
	b	M15X10mm	16pcs
	c	M3X12mm	24pcs
	d	M6X30mm	24pcs
	e	M4X35mm	10pcs
	f		4pcs
	g	M8X30mm	4pcs

	i		4pcs
	j		1pc
	k		8pcs
	l	M3X14mm	8pcs
	m		2set
	n		2set

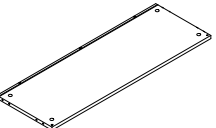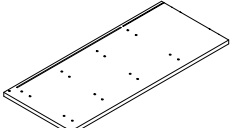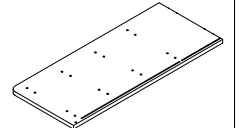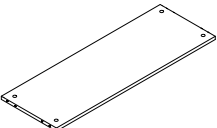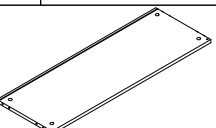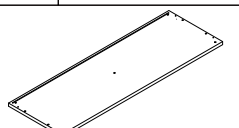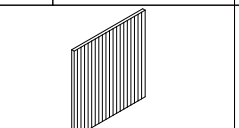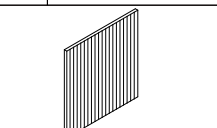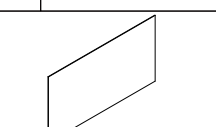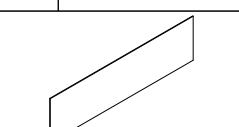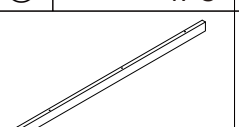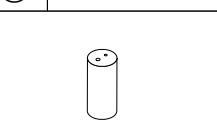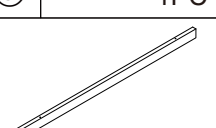			
① 1PC	② 1PC	③ 1PC	④ 2PCS
			
⑤ 1PC	⑥ 1PC	⑦ 1PC	⑧ 1PC
			
⑨ 1PC	⑩ 1PC	⑪ 1PC	⑫ 4PCS
			
⑬ 1PC			

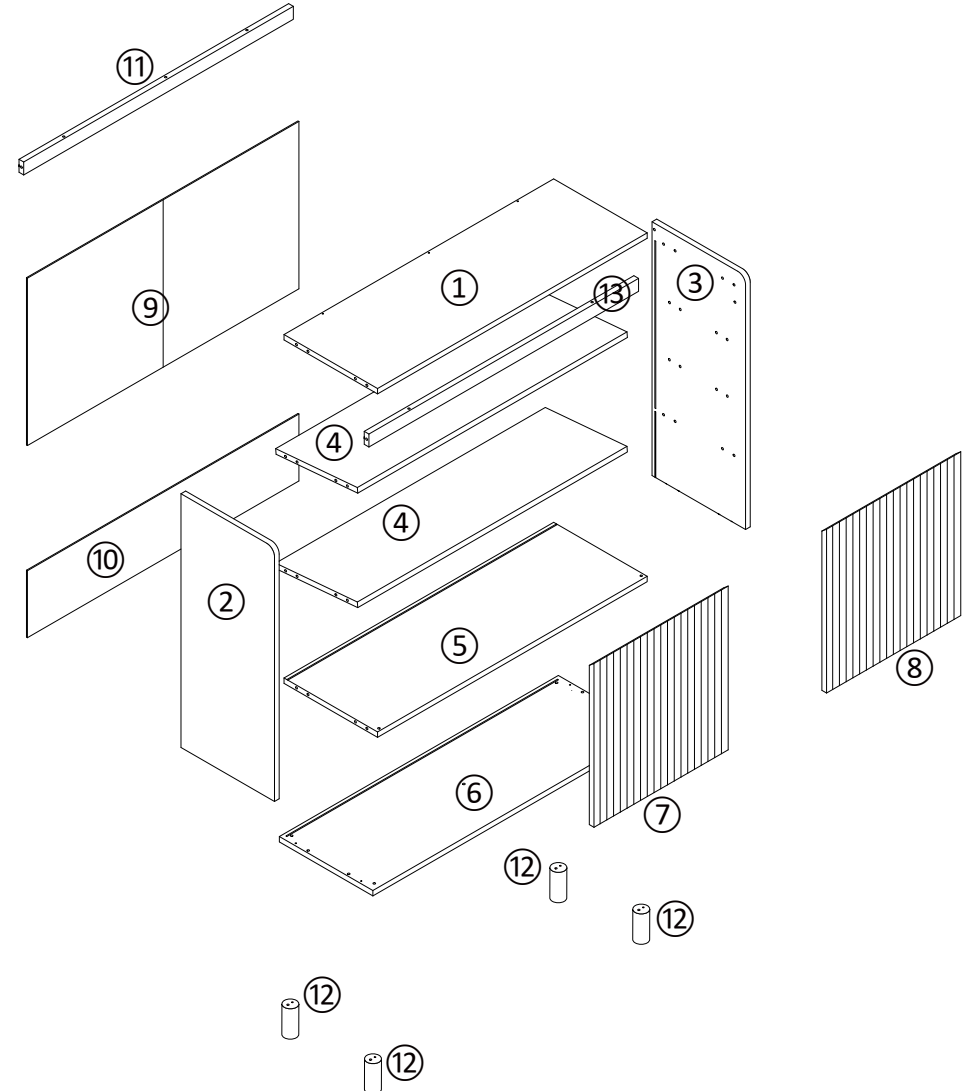 


 step 1

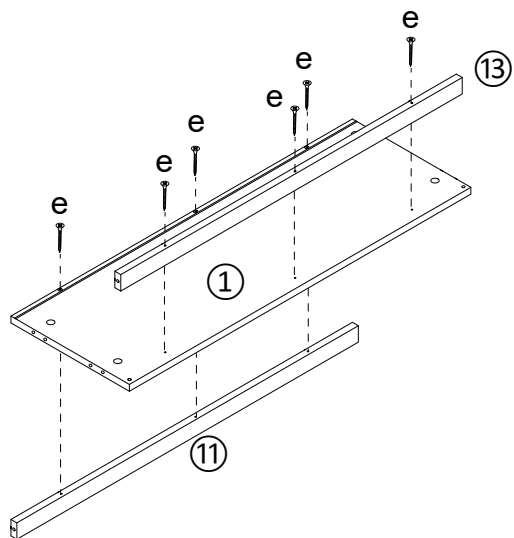


ex6

 step 2

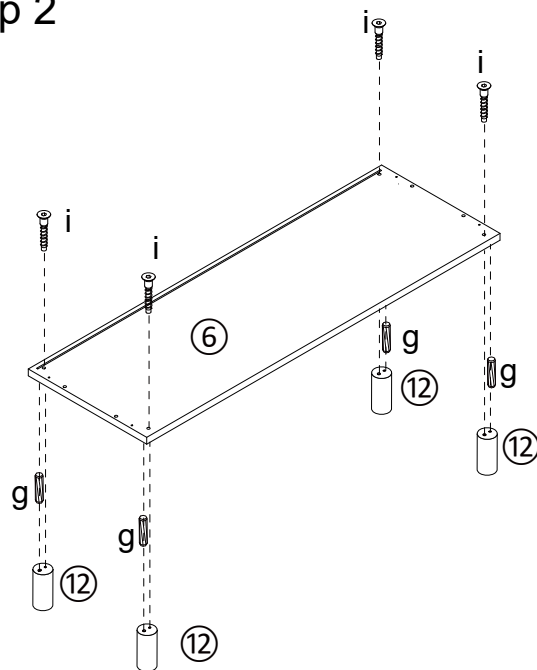


ix4 gx4

 step 3

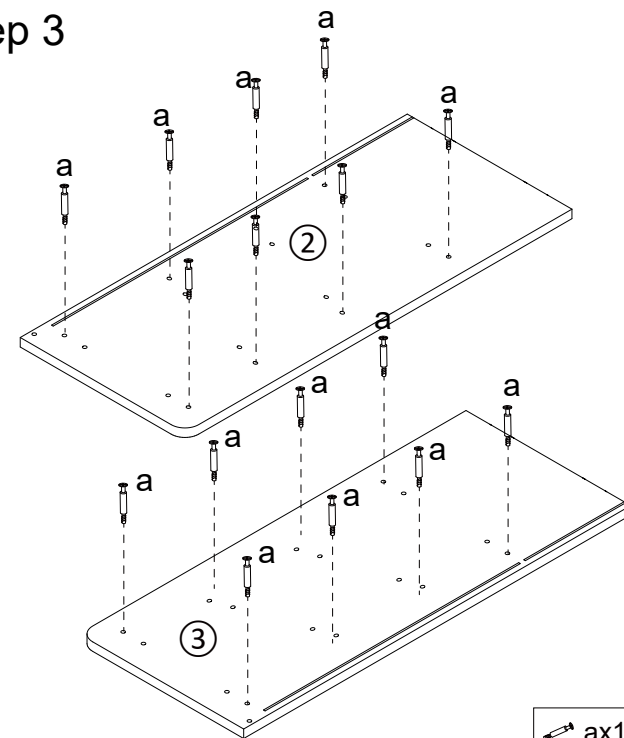


ax16

 step 4

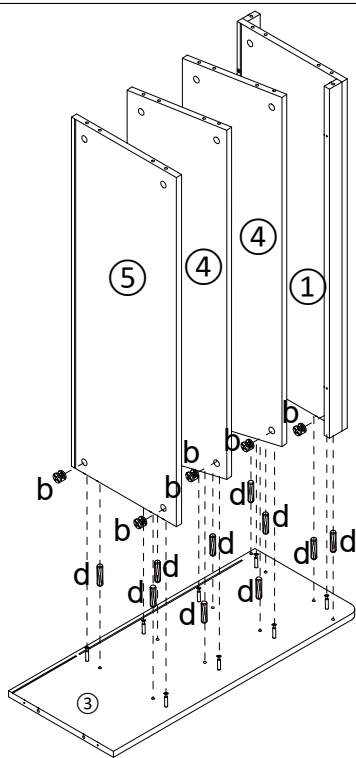


bx8 dx10

 step 5

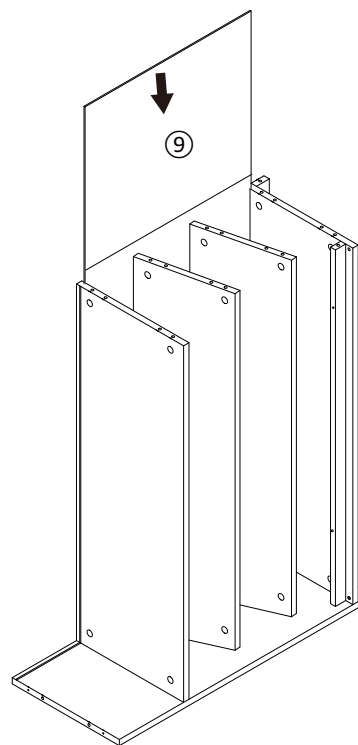


 step 6

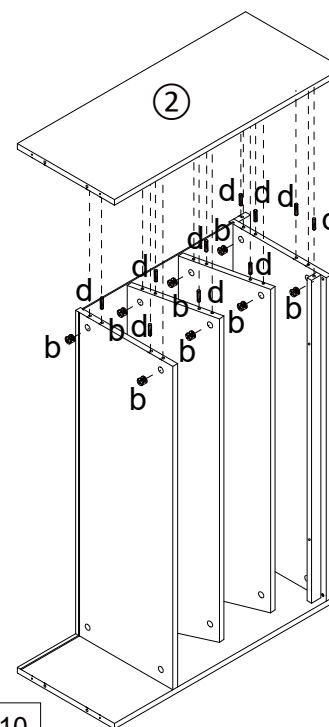


bx8 dx10

 step 7

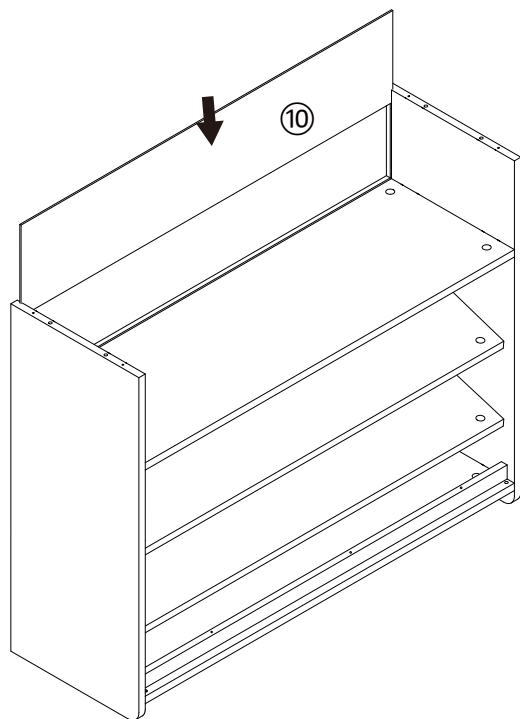


 step 8

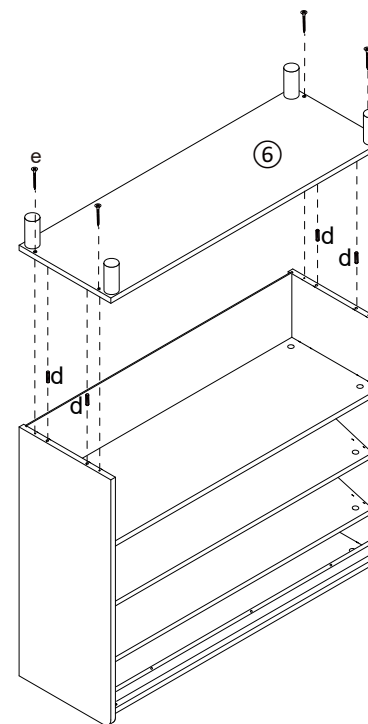


ex4 dx4

 step 9

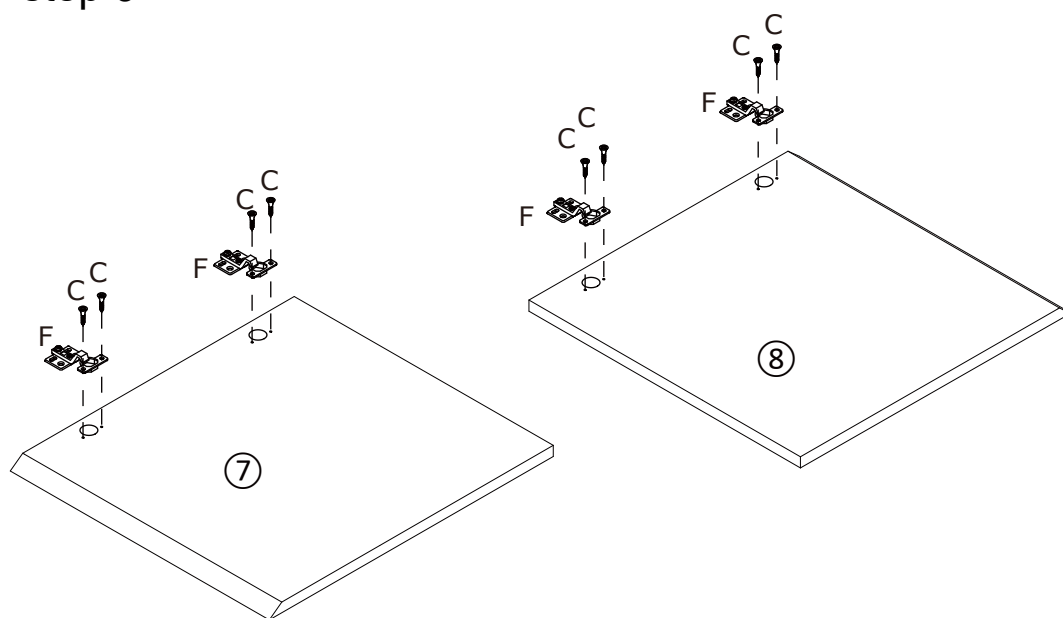


fx4 cx8

 step 10

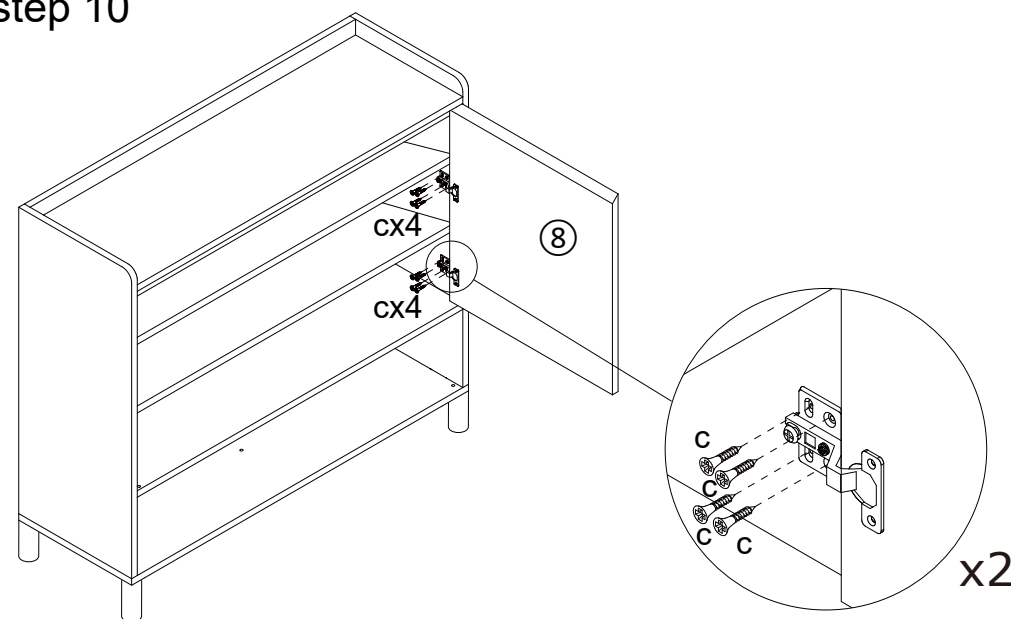


cx8

## step 11

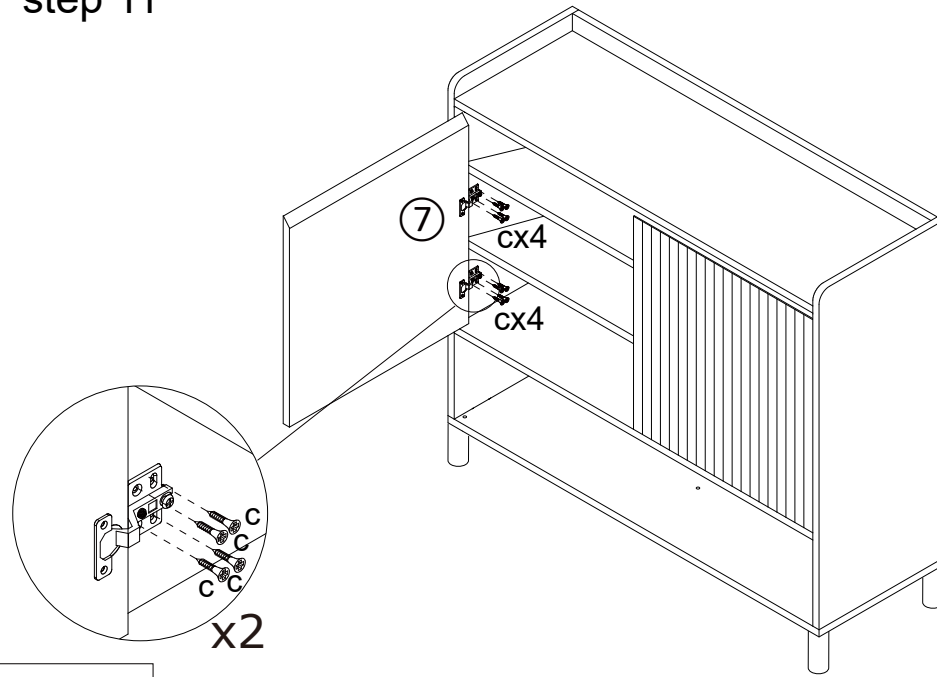 


cx8

## step 12

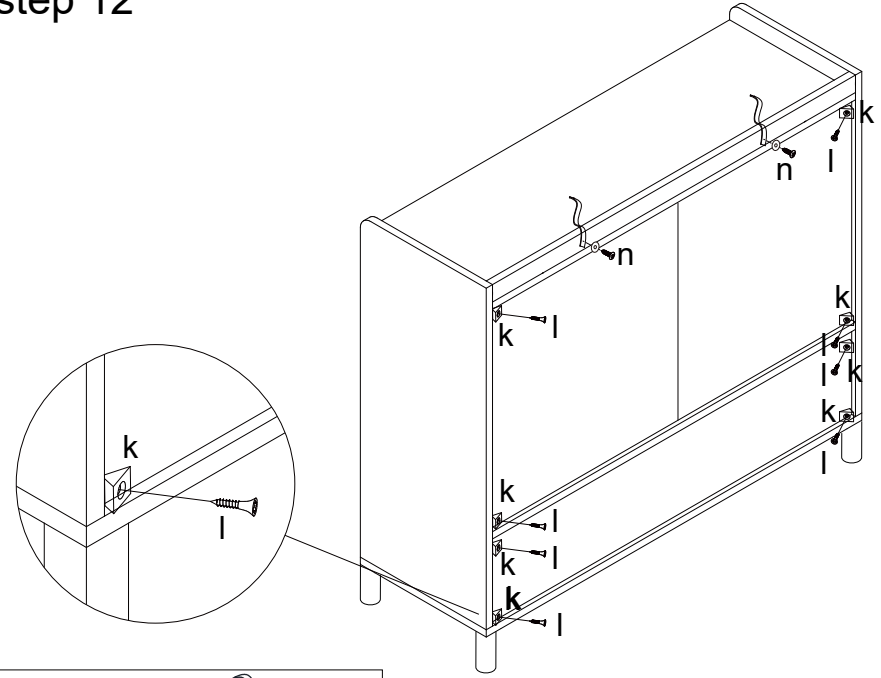 

kx8 lx8 nx8

## step 13

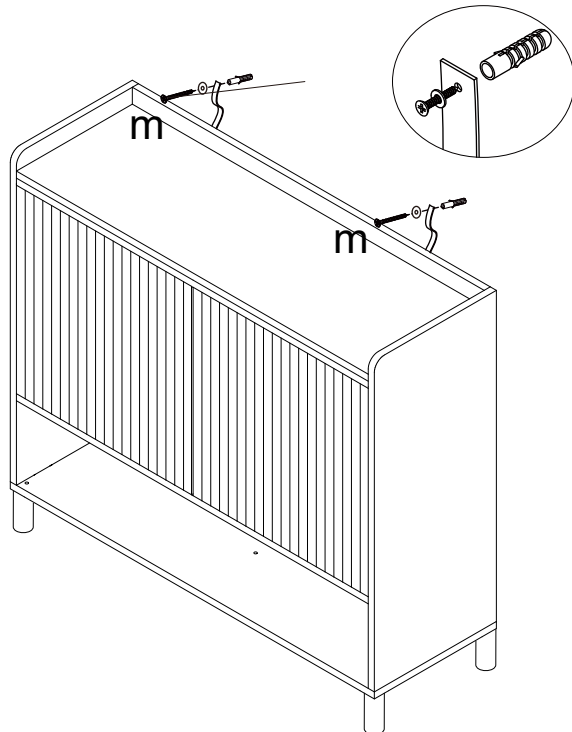 

### TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

 
- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



## WARNING

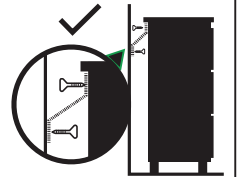

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!