


anko

Aero Urban Stroller

Instruction Manual



MAXIMUM WEIGHT
OF CHILD

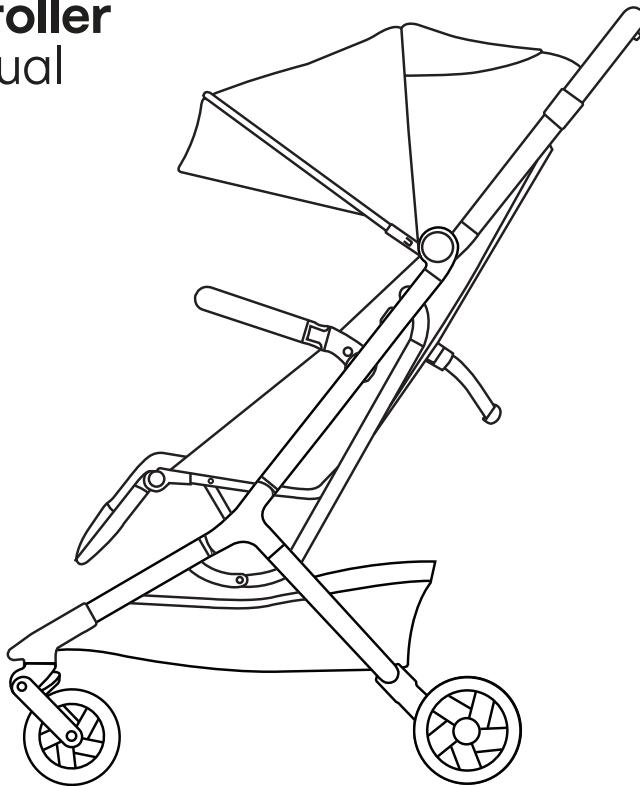

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

THIS PAGE HAS BEEN PURPOSELY LEFT BLANK.

Safety Instructions

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE. FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

- › Adult assembly required. CAUTION: Keep small parts away from children during assembly.
- › To avoid serious injury from sliding or falling out, always use complete 5-point harness. Check frequently to ensure it is secure.

WARNING! NEVER LEAVE CHILD UNATTENDED.

Always keep child in view when in stroller.



- › **WARNING!** Never leave the harness buckled when not fitted to a child. Doing so may create loops that pose a risk of strangulation.
- › **WARNING!** DO NOT use this product for unsupervised sleeping.
- › **WARNING!** The stroller may become unstable if manufacturer's recommended load is exceeded. Any load attached to the handlebar affects the stability of the stroller.
- › **WARNING!** Keep children away from the stroller when making adjustments. Damage to finger or extremities may occur when opening or closing the frame.
- › **WARNING!** To avoid injuries from finger entrapment, keep child away from this product when unfolding and folding it.
- › This stroller is suitable for newborn babies up to 22kg and maximum height of 101.6cm.
- › Maximum weight for the storage basket is 6kg of items evenly distributed.
- › **ALWAYS** use the stroller in the fully reclined position for babies who have not yet developed good head and neck control.
- › **WARNING!** DO NOT let your child play with or hang from the stroller.
- › **YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY.**
- › **WARNING!** DO NOT overload this stroller with additional children, goods or accessories.
- › **WARNING!** This product is not suitable for running or skating.

Safety Instructions

- › **WARNING!** PUT ON ALL THE BRAKES WHENEVER YOU PARK THE PRAM OR STROLLER.
- › **WARNING!** DO NOT use with more than one child at a time.
- › **WARNING!** DO NOT carry or lift the stroller with child in it.
- › **WARNING!** DO NOT use the basket as a child or pet carrier.
- › Audible "click" must be heard to confirm that each attachment is connected properly.
- › **WARNING!** ALWAYS ensure the stroller is fully open and locks engaged before use.
- › **WARNING!** The brake must be locked while taking the child in or out of the stroller, and when parked.
- › **WARNING!** Use the safety wrist strap at all times. This helps prevent the stroller from rolling away unexpectedly.
- › Keep away from fire. DO NOT use this product near open fire or exposed flame.
- › NEVER leave child in the stroller while ascending or descending stairs, or using an escalator.
- › DO NOT use the stroller if any part is damaged, broken, torn or missing. Use only replacement parts and accessories supplied and approved by the manufacturer. If you need replacement parts or assistance, see the contact information included with this product.
- › DO NOT make any alterations or modifications to the stroller with products not supplied by the manufacturer as this may cause instability or structural damage not covered under warranty.
- › NEVER leave the stroller unattended on a hill or incline even when the parking brake is locked.
- › Use caution when pushing stroller on uneven terrain or hills.
- › When using a raincover (not included), ensure it does not come into contact with the child's face.
- › Constantly monitor child when using a raincover.
- › DO NOT use a raincover in warm weather conditions. Remove the raincover if the child starts to feel uncomfortable or perspire (if applicable).
- › DO NOT place anything on top of the raincover (if applicable).
- › To prevent your child overheating, always fold or remove raincover when indoors or in warm environments (if applicable).


Parts list



B



C

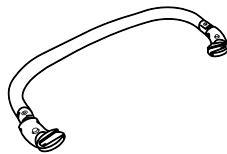

D



Contained in your carton are:




Nº	Part	Qty
A	Stroller	1
B	Front wheel	2
C	Bumper bar	1
D	Cup holder	1

Unfolding

Unpack all contents and check that all parts are present before starting assembly.

Please refer to the parts list.


1. Located on the stroller (A), hold the handlebar and press the lock buttons (a) and (b) simultaneously (1).
2. Lift up the frame (2) until you hear a 'click'. The stroller is now fully open and secure (3).

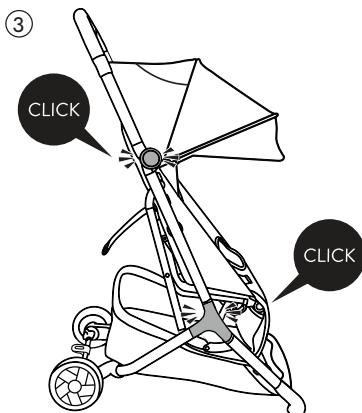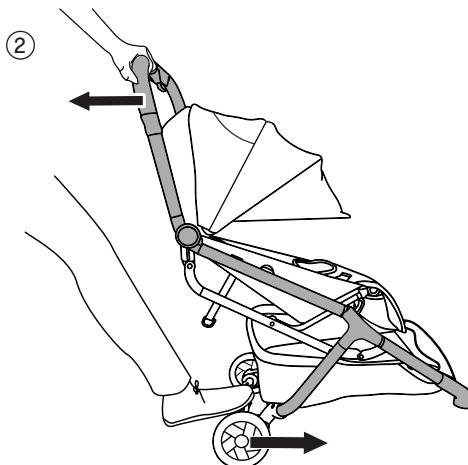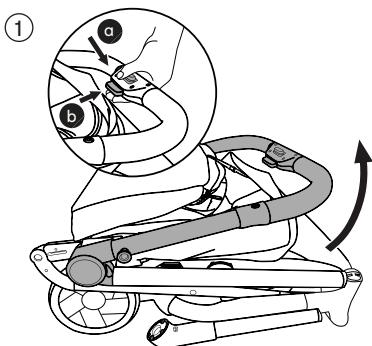

Wheel assembly

To assemble the front wheels:

Press the front wheel (B) steel pin into the frame hub of the front leg until it "clicks" into place. Repeat to assemble the second wheel.

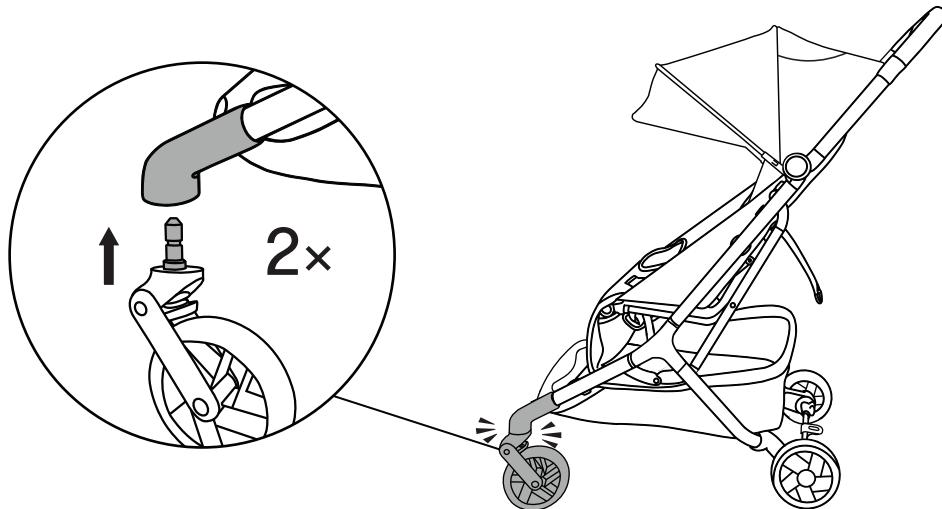


Note:


1. Front wheels are detachable using the quick-releasing pin on the back of each front wheel housing.
2. Rear wheels are assembled however may be detached by using a screwdriver (not included) to remove the fixed screw on each wheel.

Bumper bar assembly

1. Insert the ends of the bumper bar (C) into the attachment points on the stroller frame.

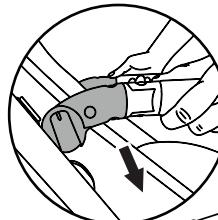


2. Ensure they "click" into position. Lift gently to ensure the bumper bar is locked into place.

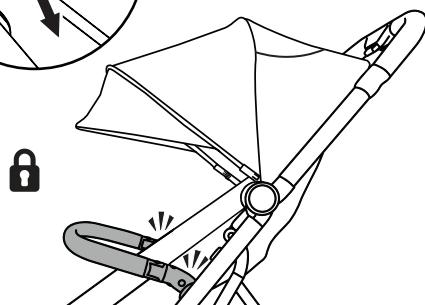


3. To remove, simultaneously press the buttons located on either side of the bumper bar housing.



Lift to remove bumper bar from stroller.

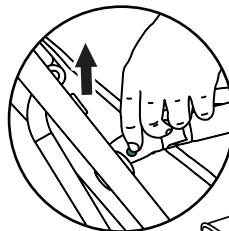

WARNING! To prevent accidental injury, do not remove the front bumper bar when child is in the stroller.

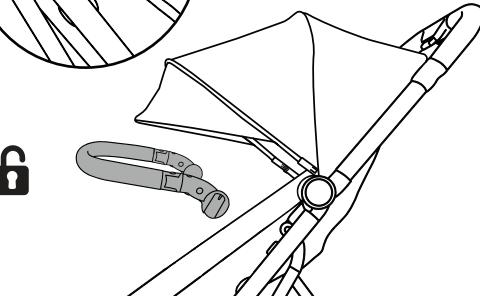


Backrest adjustment

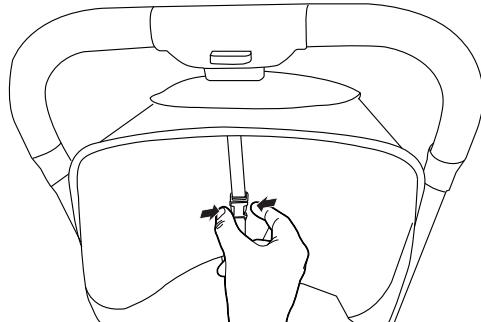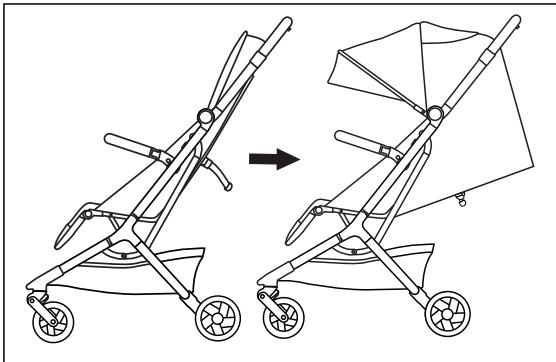




1. Locate the backrest adjustment mechanism at the rear of the seat. Squeeze the clip on the reclining harness and gently lower the backrest. Alternatively, squeeze the clip on the reclining harness and gently pull up the backrest to the desired height.

WARNING! Always ensure that the seat is securely fixed in position before use.

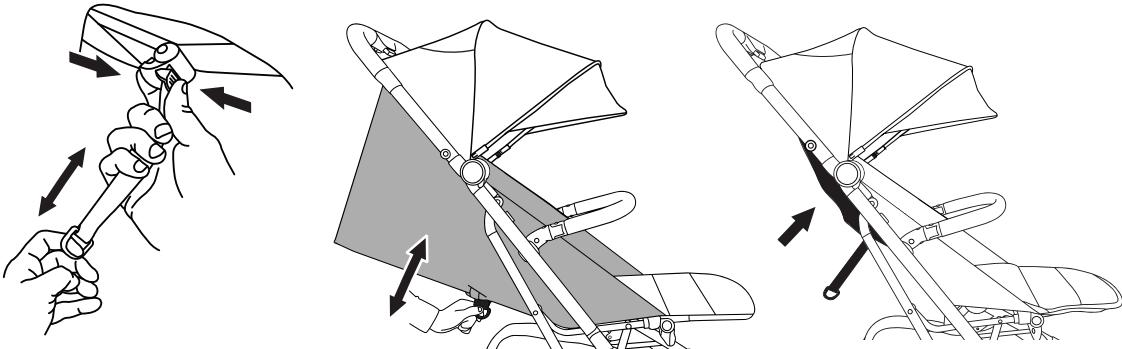


Cool-climate backrest

The backrest is equipped with a cool-climate feature. Unzip the zipper, roll up the fabric and secure it with the strap located at the top of the stroller. The Cool-climate roll-up backrest exposes a mesh backrest for increased air circulation for use during warmer weather.

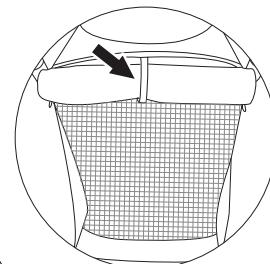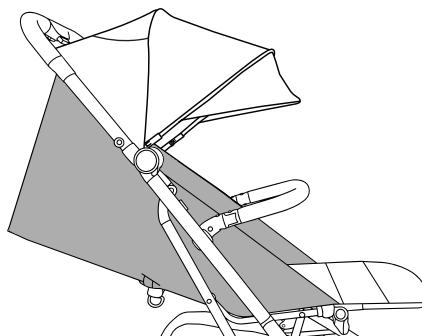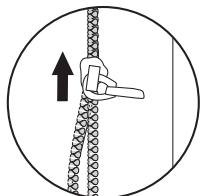


Canopy adjustment

1. The canopy can be opened or closed by pulling the canopy rim forward or backward. A mesh air vent can be exposed under the canopy flap.

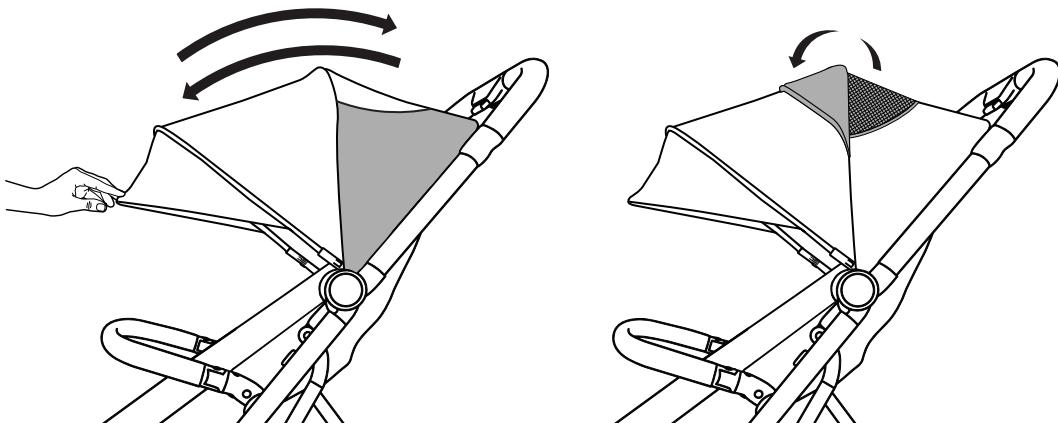


2. Open the zip to release the additional panel and extend the canopy.

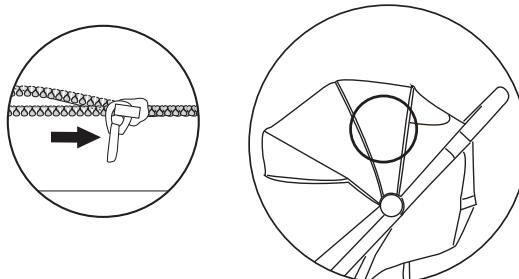


Harness


1. Slide the shoulder strap buckles into the housing of the waist strap buckles.

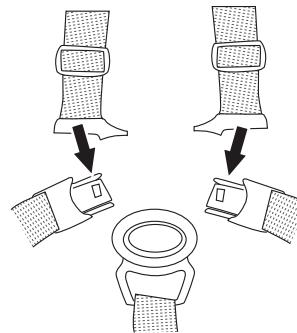

2. Insert the assembled buckles into the buckle housing until they engage securely in place. Listen for the "click".

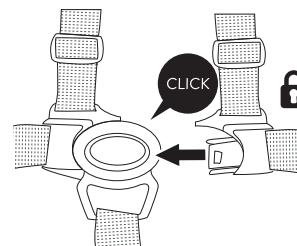

3. Press the centre button to release the harness.

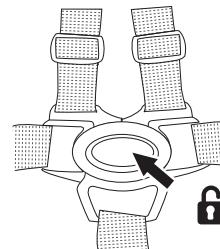


Harness

4. To adjust the length of the shoulder, crotch and waist straps, slide the plastic slides up, down or across as shown.


WARNING! Always adjust the harness to fit your child correctly for their comfort and safety.

A loose fitting harness can be very dangerous.

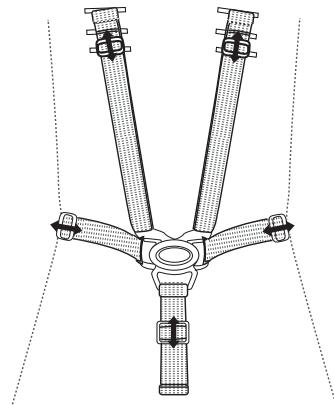


5. The stroller has 3 shoulder height positions.

WARNING! Always adjust the shoulder harness length according to the baby's height. This may require using a different shoulder height slot position. Pull out the harness straps from the current shoulder height slots. Feed the harness straps through the desired harness slots (1, 2 or 3) height position for both shoulders.

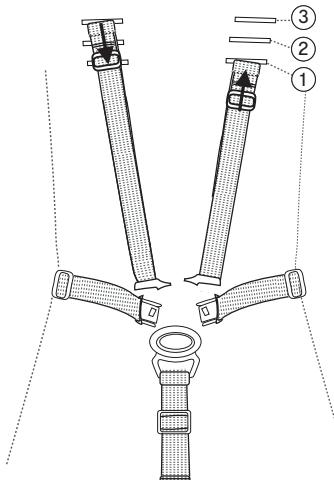



! WARNING!

Always adjust the shoulder strap height according to baby's height.

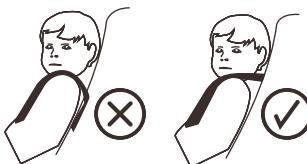

Legrest adjustment


Press both legrest buttons simultaneously and adjust the legrest to the desired position. Listen for the “click” signalling that the legrest is locked into position.

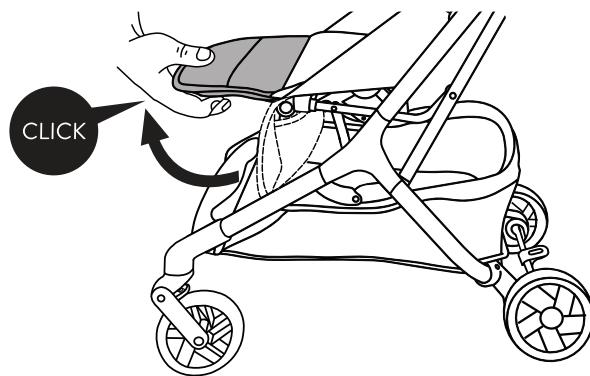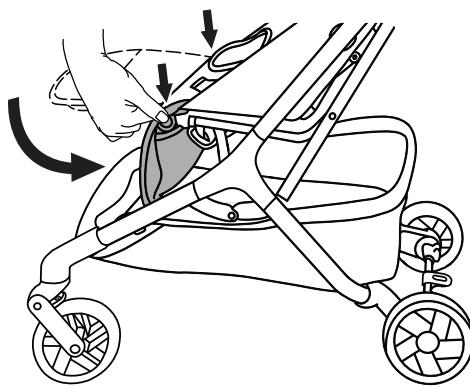

WARNING! DO NOT attempt to force the legrest position, as damage may result.


Brake

To engage the brake, push down the brake locking pedal.
The brake will “click” when locked into position.
Lift up the pedal to release the brake.

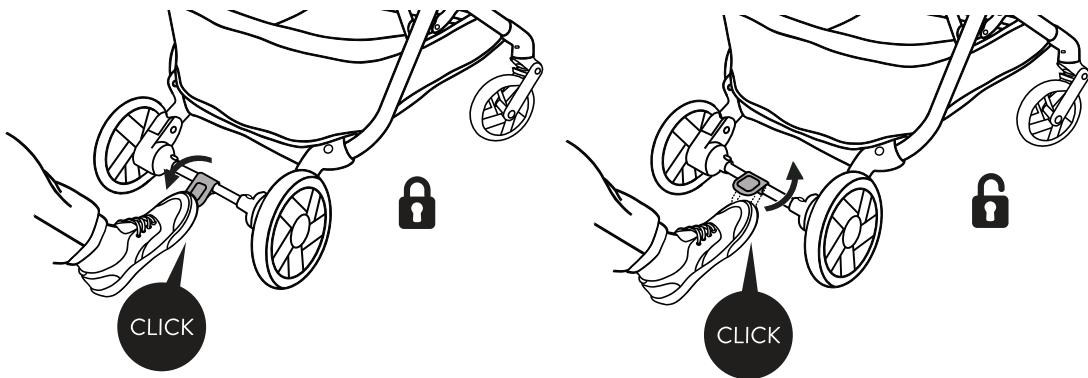

Cup holder


Attach the cup holder (D) to the plastic pin located at the right side of the stroller handlebar.

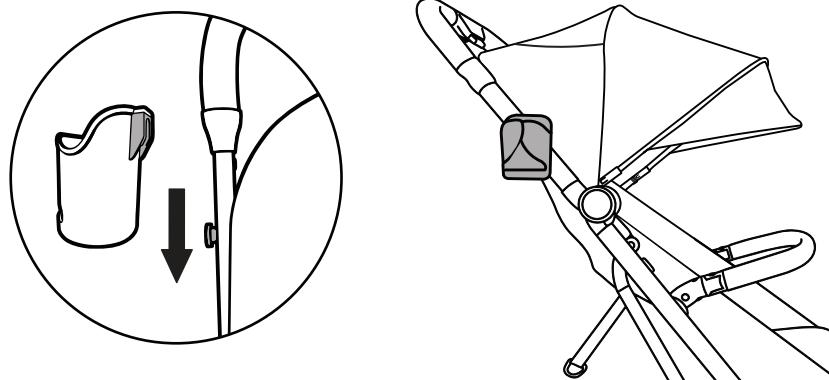


Folding

1. Fold the canopy back and apply the brake.

2. Hold the handlebar and press both buttons 1 and 2 simultaneously to collapse the stroller.

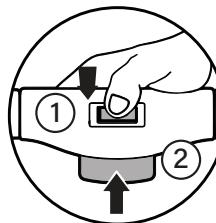


Note: The stroller automatically locks once folded.

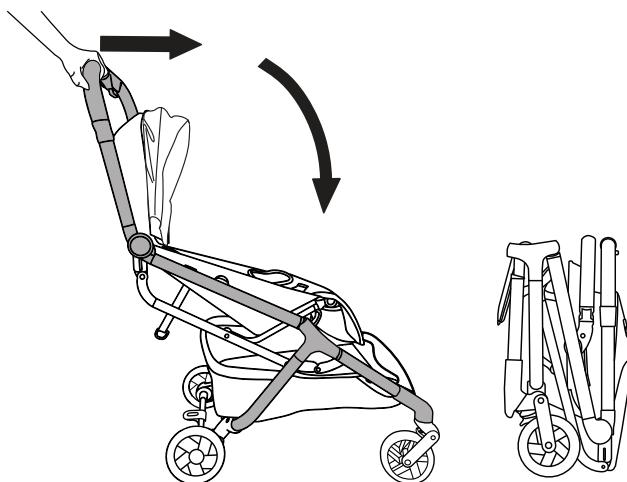




Carry strap

Locate the carry strap below the legrest. Unlock the buttons on either side of the carry strap pad and unfold the strap.

①

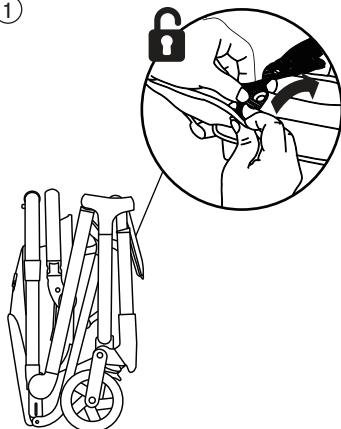


②

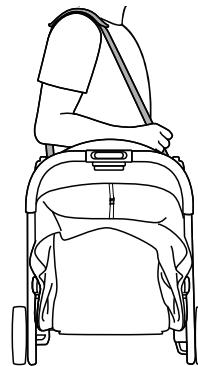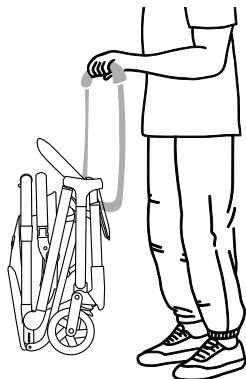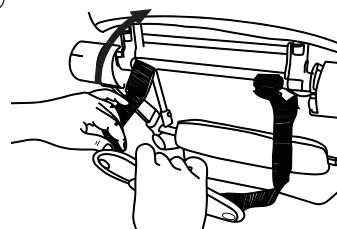

Carry strap

To fold the carry strap away, button up the carry strap back in the shoulder pad pocket.

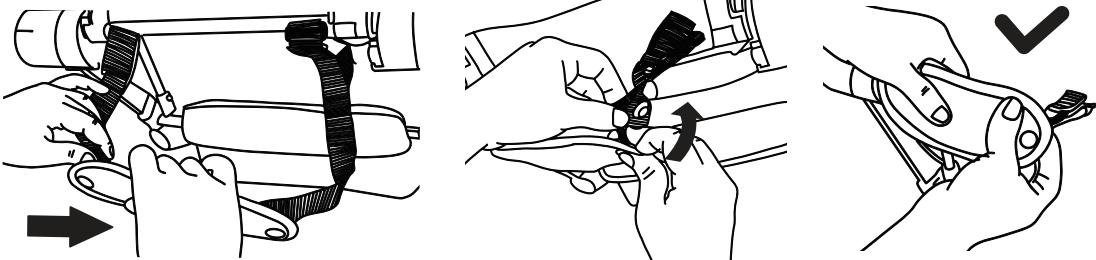

Care and Maintenance

- › This product requires regular maintenance to ensure correct and safe performance.
- › All assembly fittings are to be tightened properly.
- › Always check your stroller for loose screws, worn parts, torn material or stitching.
- › Keep the handlebar and folding mechanisms free of grime and moisture.
- › If wet, use a soft cloth to dry.
- › Regularly check all rivets, screws and safety devices for tightness and security.
- › All plastic and metal parts may be wiped clean with a damp cloth.
- › Never use bleach or detergents to clean the plastic or metal parts.
- › Do not submerge or use running water on any plastic or metal parts of the stroller.
- › Upholstered parts can be hand washed or spot cleaned with cold water using a mild detergent. Dry in shade thoroughly before re-use or storage and avoid direct heat and sunlight.
- › Do not bleach.
- › Do not iron.
- › Do not dry clean. 
- › Do not use abrasive pads, bleach or strong household cleaners.

THIS PAGE HAS BEEN PURPOSELY LEFT BLANK.

K: 43-552-610 | T: 70-995-800

MADE IN CHINA

CUSTOMER SERVICE

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567