LED Remote Pool Light Instructions

K: 43-559-473 | T: 71-037-004





















Features

LED	10 LEDs
Color	RGB(16 Colors)
Dynamic Mode	Flash, Strobe, Fade, Smooth
Light Battery	3x AAA(Not included)
Remote Battery	1x CR2025 Button Cell (Included)
Remote Range	<8m

Tips for Battery



- 1. Please prepare 3 good-quality AAA batteries; otherwise, it will affect the brightness and usage
- 2. Press the "W" button to check if all LED bulbs are showing white light. If any bulb appears dimmer, it indicates that the batteries are low. Low battery power will reduce the sensitivity of the remote control. Please replace them with new batteries.
- 3. If you do not plan to use the device for a long time, please remove the batteries. This will help save power and protect the lights.

How to install and replace the 3 AAA batteries?



1. Open the Battery Compartment - Rotate the base cover of the lamp counterclockwise to open it, revealing

the battery compartment.



2. Install the Batteries

- Insert each battery with the positive end (marked "+") aligned with the positive terminal (+) in the compartm ent, and the negative end (marked "-") aligned with the negative terminal(-). Repeat until all 3 batteries are securely installed.



3. Close the Base Cover - Tighten the base cover clockwise until fully sealed.

3

Tips for Waterproof



- Please make sure the sealing ring is properly placed in the groove.
- 2. Tightly screw the cap until it cannot be twisted any further to ensure the light is fully waterproof before placing it in water.
- 3. Avoid using the light in hot water, as steam may enter the unit, damage the internal components. and cause it to stop working.
- 4. When changing the batteries, please wipe off any water inside the light to keep the battery compartment dry.

Tips for Remote Control

- 1. Please remove the plastic insulating film from the bottom of the remote before using it.
- 2. Keep the remote dry, as it is not waterproof. Water may cause it to stop working.
- 3. Press and hold the ON button for 2 seconds to activate the light before setting it. This will make all lights turn on together. If some lights do not respond immediately, press and hold the button a
- 4. Since water significantly absorbs signals, the remote control works up to 3.3 ft (1 m) underwater. For best results, use the remote within 26 ft (8 m) in



ING:BUTTON CELL BATTERIES ARE HAZARDOUS(NEWORUSED), KEEP AWAY FROM CHILDREN.BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE

How to Replace the Remote Control's Button Battery?



Remove the Insulating Film - Locate and pull out the transparent insulating film from the remote control.



2. Unscrew the Compartment - Use a 3mm cross-head screwdriver to turn the screw counterclockwise until fully loosened.



3. Access and Replace the Battery - Push the battery tray firmly to the right with your thumb while pulling it outward with your index finger. - Replace the old button battery with a new one, ensuring the positive side (+) faces upward.

7

IR Remote

4

Brightness+/-Power ON/OFF 4 Flashing Colors Modes

MADE IN CHINA CUSTOMER SERVICE: KMART AU:1800124125 KMART NZ:0800 945 995 TARGET AU:1300753567

8

5

6

