



**Foil Shaver  
AD-1001  
Instruction Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFETYGUARDS

### PLEASE READ CAREFULLY BEFORE USING THIS APPLIANCE

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



**WARNING: READ ALL INSTRUCTIONS; FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY.**

1. Only use the appliance as described in this manual.
2. Do not immerse the appliance in water or any other liquid.
3. Do not allow the appliance to be exposed to rain or moisture during use or storage.
4. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
5. The appliance is intended for indoor use only.
6. Always switch the appliance OFF after use.
7. This appliance has no user serviceable parts. Do not attempt to access the appliance covers.
8. This appliance is for personal use only, not designed for commercial use.
9. Do not use it outdoors.
10. **Do not use** the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
11. Before using the appliance, ensure that the foil head is securely fitted and not damaged.
12. Do not use the appliance on children.
13. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
14. Children being supervised to ensure that they do not play with the appliance.
15. Only charge the appliance with the USB cable that was supplied with the appliance.
16. Only Charge the appliance with Extra Low Voltage Battery Charger (not supplied) with an output rating 5Vd.c. 1A, same as indicated on the appliance's rating label.
17. Check that your supply voltage is the same as that stated on the charger.
18. When charging the appliance, the power switch must be set to OFF.
19. It is normal for the charger to become warm to touch when charging.
20. Use only the attachments provided with the product.
21. Do not replace the batteries with non-rechargeable batteries.
22. Please put the protective cap on the shaver every time to prevent damage on the shaving foil. **To avoid personal injury, do not use the shaver if it has a damaged shaving foil or inner cutter.**
23. Do not use salt water or boiling water. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances



**WARNING: Do not recharge non-rechargeable batteries.**



**WARNING: Before charging the product, please make sure your hands are dry.**



**WARNING: Only use with the charger supplied with the appliance. Use of other chargers may cause electrical failure and/or fire.**

## PERSONAL SAFETY

- Never use the appliance on any part of the body other than shaving the face and beard.
- **CAUTION! Do not use the appliance if the rotary head is split or broken.**
- Never leave the appliance unattended while switched ON.
- Do not touch the blades as they are very sharp.
- Always ensure that the hands are dry before operating or when switching it ON or OFF.



### WARNING

Only use the USB cable that was supplied with this Appliance.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to charge non-rechargeable batteries as they may explode or catch on fire or cause personal injury and/or damage to property.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the appliance.
- Do not use or store in temperatures above 40°C.



At the end of the appliance's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.



 
## Read and Save These Instructions

## PARTS



- |                               |                               |
|-------------------------------|-------------------------------|
| 1. Shaving blade head         | 4. Pop-up trimmer             |
| 2. Shaver head release button | 5. Release button for trimmer |
| 3. On/Off switch              | 6. Digital display            |

### Digital display

<b>00/10/20/...../100</b> <b>Number display</b>	The number shows the percentage of remaining battery capacity and charged capacity during charging.
 <b>Water Tap Icon</b>	The water tap icon will appear to remind you to clean the shaver head.
 <b>Plug Icon</b>	The plug icon illuminates red when the shaver is charging.
 <b>Battery Icon</b>	The battery icon illuminates when battery level is low

## CHARGING

**IMPORTANT:** This Appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable.

Always switch off and unplug the USB cable when charging is completed or when not in use.

**DO NOT allow appliance to charge for more than 2 hours.**

**Normal charge takes approximately 1.5 hours.**

If any abnormality occurs during charging, (such as burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable.

**IMPORTANT: The Appliance must be fully charged before first use.**

- Take the USB Cable and fully unravel it before using it to charge the Appliance.
- Plug the small end of the USB cable directly into the bottom of the appliance.

- Plug the large end of the USB cable into your 5Vd.c. 1A USB charger (not supplied).
- Whilst charging, the display will illuminate with scrolling numbers where the numbers increase as the battery charges, indicating the percentage of charge.
- When display reaches “10” and below, the charging indicator will flash, indicating low battery and reminding user to charge the shaver.
- When fully charged, the display will show “100”.
- Unplug the USB charging cable from the appliance.

## OPERATING INSTRUCTIONS

### Foil Shaver

1. Remove the protective cap.
  2. Turn ON the shaver.
  3. Hold the shaver at right angles (90°) to your skin.
  4. Stretch your skin and shave against the direction of your beard growth.
- NOTE: Applying excessive pressure does not provide a closer shave.**
5. Turn OFF the shaver after use.
  6. Put the protective cap on the shaver every time after use to prevent damage.

### Using the trimmer

1. Press the trimmer release button to release the pop-up trimmer.
2. Turn ON the shaver.
3. Slowly guide the trimmer up to the hair you intend to cut.
4. Always use short stroke to cut your hair.
5. Turn OFF the shaver after use.

**NOTE:** The trimmer always generates a straight cutting edge. If you do not want a straight cutting edge, you must hold the shaver at an angle. For hard-to-reach areas or for very precise cuts, use a comb to check the cut length.

## CLEANING AND MAINTENANCE

1. Make sure the shaver is disconnected from USB power and shaver is set to OFF.
2. Push the shaver head release buttons at both sides to release the shaving foil.
3. Wash the shaving foil with running water. Wipe off any drops of water with a dry cloth and allow it dry completely.

**Caution! Do not touch the metal parts of the shaving blade to prevent injury.**

4. Rinse-off the top part of the shaver with running water.
5. Switch the shaver ON with the foil frame open for approx. 5-10 seconds to dispel any drops of water from the shaver blades.
6. Turn OFF the shaver, wipe off any drops of water on the shaver with a lint-free cloth or paper towel and allow it dry completely.
7. Close the foil frame and fix the shaving foil on to the frame.
8. Place the protective cap on the shaver.
9. The shaver is now ready for use.

**Note:** For daily cleaning after dry shave, just clean the shaving foil and shaving blade with a soft brush. Switch ON the shaver for approx. 5-10seconds to dispel any debris from the shaver blades with the foil frame open. Fix all the parts in place after cleaning.

## STORAGE

1. Switch the shaver OFF and clean all components. Make sure that all parts are dry before you pack them up.
2. Store the shaver in a clean, dry area.
3. Make sure that the shaver and the accessories are out of the reach of children and animals.

## TECHNICAL SPECIFICATIONS

Working time	Approx. 1 hour
Charging time	Approx. 1.5 hour
Input voltage	5V = 1.0A
Battery type	Li-ion, 600mAh, 3.7V x1 cell
Water resistance	IPX5

## 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>