

anko

Rechargeable Haircut Kit

AD-6001A

Instruction Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFETYGUARDS

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



WARNING: READ ALL INSTRUCTIONS; FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY.

1. Only use the appliance as described in this manual.
2. Do not immerse the appliance in water or any other liquid.
Warning: For electrical safety, keep the appliance dry
3. Do not allow the appliance to be exposed to rain or moisture during use or storage.
4. Unplug this appliance before cleaning it.
5. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
6. The appliance is intended for indoor use only.
7. Always switch the appliance OFF after use.
8. This appliance has no user serviceable parts.
9. This appliance is for household use only, not designed for commercial use.
10. **Do not** use it outdoors.
11. **Do not** use the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
12. Do not leave the appliance unattended when it is plugged in.
13. Before using the appliance, ensure that the clipper blade are securely fitted.
14. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
15. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
16. Only charge the appliance with the USB cable that was supplied with the appliance.
17. Only Charge the appliance with Extra Low Voltage Battery Charger (not supplied) with an output rating 5Vd.c. 1A, same as indicated on the appliance's rating label.
18. When charging the appliance, make sure it is switched OFF.
19. Check that your supply voltage is the same as that stated on the clipper.
20. Use this appliance only for its intended use as described in this manual.
21. Use only attachments provided.
22. This product contains sharp blades, please take the utmost care in handling and use.
23. **To avoid personal injury, do not use the hair clipper if it has a damaged blade.**
24. **Always make sure blades are aligned properly.**
25. Do not submerge the appliance, nor make it flow under water-tap.
26. Do not use salt water or boiling water when cleaning. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances.
27. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

CAUTION: Electric Shock Hazard. Never operate this appliance if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.



WARNING: Do not recharge non-rechargeable batteries.



WARNING: Before charging the product, please make sure your hands are dry.



WARNING: Only use the USB charging cable supplied with the appliance. Use of other cable may cause electrical failure and/or fire.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



WARNING

Only use the USB cable that was supplied with this Appliance.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to charge non-rechargeable batteries as they may explode or catch on fire or cause personal injury and/or damage to property.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the appliance.
- Do not use or store in temperatures above 40°C.



At the end of the appliance's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

Read and Save These Instructions

PARTS



- | | |
|-------------------|-------------------------------|
| 1. Blade Set | 5. 3/6/9/12mm Comb attachment |
| 2. Taper lever | 6. Cleaning brush |
| 3. On/Off Switch | 7. USB Charging cable |
| 4. Indicator lamp | |

CHARGING

IMPORTANT: This Appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable. Always switch off and unplug the USB cable when charging is completed or when not in use.

DO NOT allow to charge for more than 3 hours.

Normal charge takes approximately 2.5 hours.

If any abnormality occurs during charging, (such as burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable.

IMPORTANT: The Appliance must be fully charged before first use.

- Take the USB Cable and fully unravel it before using it to charge the Appliance.
- Plug the small end of the USB cable directly into the bottom of the appliance.
- Plug the large end of the USB cable into your 5Vd.c. 1A USB charger (not supplied) and switch on.
- The Charging Indicator will illuminate RED, indicating the battery is charging.
- When full charged, the Charging indicator will show WHITE.
- Unplug the USB charging cable from the appliance.

OPERATING INSTRUCTIONS



WARNING:

Switch off the clipper before replacing or changing the attachments



NOTES:

The hair to be dressed must be dry.

 


NOTES:

The cutting length may deviate depending on the cutting angle. Please start with a comb attachment with a longer cutting length and then, in the course of cutting process, use shorter cutting lengths step by step.


KNOW YOUR HAIR CLIPPER

This clipper has an adjustable blade. To adjust: move the taper lever down for **coarse (B)** cutting and up for **fine (A)** cutting.

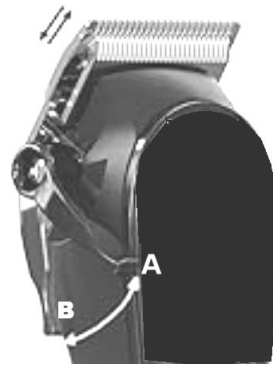

OPERATING THE CLIPPER

 1. Remove the blade cover from the unit.
2. Select the comb attachment with the desired comb length.
3. Attach the attachment to the main unit. Hold the comb with teeth up, slide the attachment firmly onto the bottom clipper blade until it audibly and firmly locks into place.

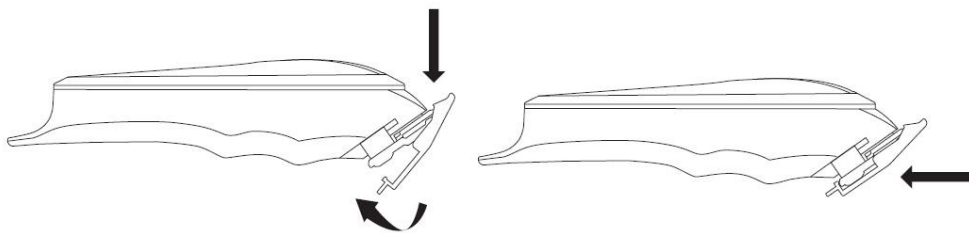


4. Turn on the hair clipper and start cutting hair.
5. Always hold the clipper with blade running parallel to the skin. Never cut into loose skin.
6. Clean clippings from the blades using the cleaning brush. Wipe the housing with a clean, dry cloth.
7. Before replacing the blade cover for storage, spread one or two drops of lubrication oil over the blades to prevent rusting.

CLENING AND MAINTENANCE

To ensure long lasting performance, clean the blades and unit regularly.

 - Ensure the clipper is switched off and wait until it is completely cool.
- Before cleaning, remove the accessory.
- Brush the accumulated hair from the blades with the aid of the cleaning supplied with the product. Do not submerge the clipper in water
- To clean the unit, wipe with a damp cloth and then dry it.

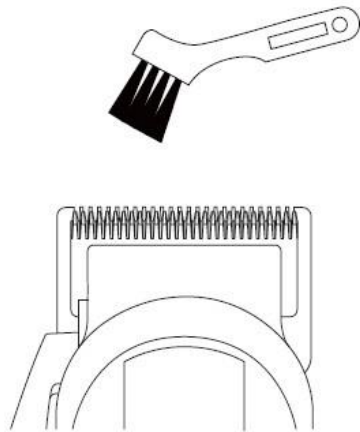

TECHNICAL SPECIFICATIONS

Working time	Approximately 3hr
Charging time	Approximately 2.5hr
Input voltage	5V == 1.0A
Battery type	li-ion, 2000mAh, 3.7V x1 cell

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us