



Beard Trimmer
AD-2062
Instruction Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFETGUARDS

PLEASE READ CAREFULLY BEFORE USING THIS APPLIANCE

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



WARNING: READ ALL INSTRUCTIONS; FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK OR SERIOUS PERSONAL INJURY.

1. For hygienic reasons, do not share this appliance with other people.
2. This appliance contains batteries that are non-replaceable.
3. Only use the appliance as described in this manual.
4. Do not immerse the appliance in water or any other liquid.

Warning: Keep the appliance dry.

5. Do not allow the appliance to be exposed to rain or moisture during use or storage.
6. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
7. The appliance is intended for indoor use only.
8. Always switch the appliance OFF after use.
9. This appliance has no user serviceable parts. Do not attempt to access the internal components in the appliance.
10. This appliance is for personal use only, not designed for commercial use.
11. Do not use it outdoors.
12. **Do not use** the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
13. Before using the appliance, ensure that the trimmer head is securely fitted.
14. Do not use it on children or allow children to play with the appliance.
15. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
16. Children must be supervised to ensure that they do not play with the appliance.
17. Only charge the appliance with the USB cable that was supplied with the appliance.
18. Only Charge the appliance with Extra Low Voltage Battery Charger (not supplied) with an output rating 5Vd.c. 1A, same as indicated on the appliance's rating label.
19. Check that your supply voltage is the same as that stated on the charger.
20. When charging the appliance, the power switch must be OFF.
21. Use only attachments provided.
22. This product contains sharp blades, please take utmost care during handling and use.
23. Do not attempt to replace the batteries with non-rechargeable batteries.

CAUTION: To avoid personal injury, do not use the trimer if it has a damaged blade.

24. Do not use salt water or boiling water. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances.



WARNING: Do not recharge non-rechargeable batteries.



WARNING: Before charging the product, please make sure your hands are dry.



WARNING: Only use with the charger supplied with the appliance. Use of other chargers may cause electrical failure and/or fire.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

PERSONAL SAFETY

- Never use the appliance on any part of the body other than shaving the face and beard.
- **CAUTION! Do not use the appliance if the trimming head is split or broken.**
- Never leave the appliance unattended while switched ON.
- Do not touch the blades as they are very sharp.
- Always ensure that the hands are dry before operating or when switching it ON or OFF.



WARNING

Only use the USB cable that was supplied with this Appliance.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to charge non-rechargeable batteries as they may explode or catch on fire or cause personal injury and/or damage to property.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the appliance.
- Do not use or store in temperatures above 40°C.



 
At the end of the appliance's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

Read and Save These Instructions

PARTS

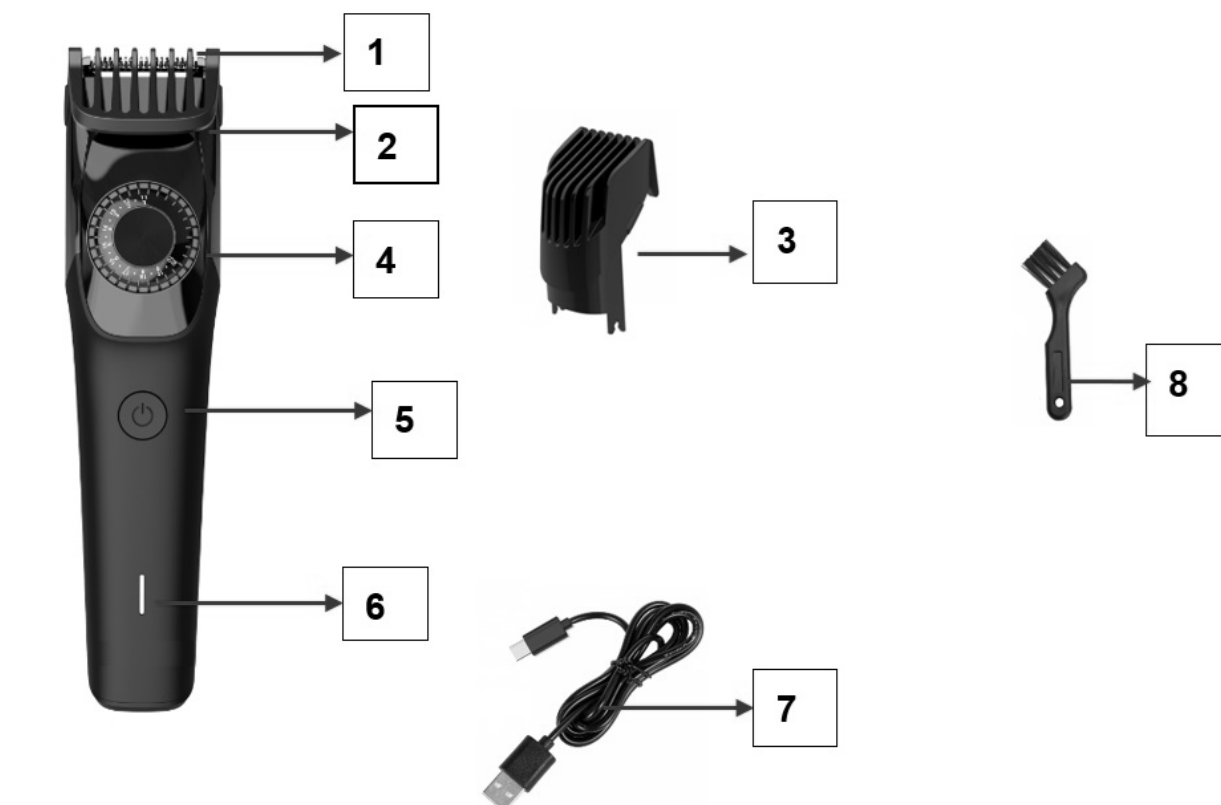

- | | | | |
|----|------------------------------|----|----------------|
| 1 | Trimming blade | 5 | On/Off switch |
| 2 | Comb attachment #1 (1-10mm) | 6 | Indicator |
| 3 | Comb attachment #2 (11-20mm) | 7 | USB cable |
| 4. | Cut length selector dial | 8. | Cleaning brush |

CHARGING

IMPORTANT: This Appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable.

Always switch off and unplug the USB cable when charging is completed or when not in use.

DO NOT allow appliance to charge for more than 2 hours.

Normal charge takes approximately 1.5 hours.

If any abnormality occurs during charging, (such as burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable.

IMPORTANT: The Appliance must be fully charged before first use.

- Take the USB Cable and fully unravel it before using it to charge the Appliance.
- Plug the small end of the USB cable directly into the bottom of the appliance.
- Plug the large end of the USB cable into your 5Vd.c. 1A USB charger (not supplied) and switch on.
- The Indicator will illuminate RED, indicating the battery is charging.
- When full charged, the indicator will show WHITE.
- Unplug the USB charging cable from the appliance.

OPERATING INSTRUCTIONS



 
WARNING:

Switch OFF the device before replacing or changing the attachments

1. Mount the comb attachment and adjust the length setting to give the desired trimming length.
2. Press the power switch to turn ON the trimmer.
3. Trim against hair growth by guiding the flat comb part over the skin.
4. Avoid clogging the comb with hair, remove and clean it periodically.

Installing the comb attachment

1. Make sure the trimmer is turned OFF before installing the comb.
2. Align the length selector to indicator "10".
3. Mount the comb attachment to main body as shown below.
4. You may adjust the cut length by turning the dial.

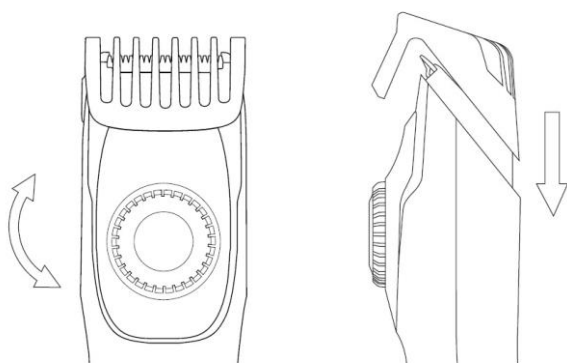

NOTE: DO Not turn the dial when the trimmer is switched ON.

Installing the blade

CAUTION!

Risk of injury! Handle the beard trimmer improperly may result in injury.

The Blade assembly can be removed for deep cleaning.

To remove the blade assembly, hold the appliance and press the blade assembly away from the unit. The blade assembly will pop out.

 


To install the blade assembly, align the bottom of the blade with main unit, swing closed and push towards the main unit until it locks in place.



CLEANING AND MAINTENANCE

- Make sure the trimmer is disconnected from USB power and is set to OFF.
- Remove the comb attachment and blade.
- Brush off any hair trimmings around the blade and main body.
- Rinse off any hair trimmings that are sticking to the blades with running water.
- Gently shake the cutting blade then wipe off the water.

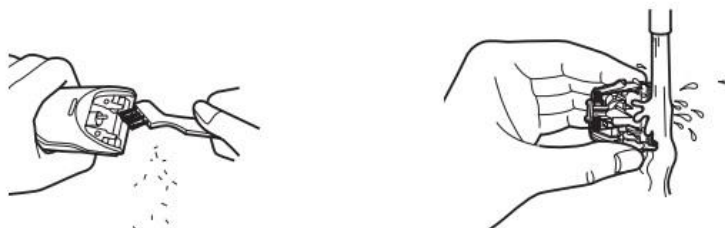

TECHNICAL SPECIFICATIONS

Working time	Approx. 1.5 hour
Charging time	Approx. 1.5 hour
Input voltage	5V = 1.0A
Battery type	Li-ion, 600mAh, 3.7V x1 cell

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us