K:43587780 | T:71273686 Hurricane LED Candle Set

OPERATING INSTRUCTIONS:


- 1. Remove the candles from the packaging.
- 2. Insert 2 AA batteries (not included) into the battery compartment on the bottom of each candle.
- 3. Turn ON/OFF switch to activate/deactivate light.
- 4. Once the switch is in the "ON" position, use remote to activate/deactivate the light.

FOR REMOTE CONTROL:

- 1. Insert 2 AAA batteries (not included) into the battery compartment on the back of remote.
- 2. Use remote to activate/deactivate the light by using the ON/OFF button.
- 3. Timer can be set for 2, 4, 6 or 8 hours.
- 4. Candle button has a function to make the LED light flicker similar to real flame.
- 5. Light button has a function to make LED light steady.
- 6. " " button has a function to darken the light, " + " button has a function to brighten the light.

MAINTENANCE, TROUBLESHOOTING AND BATTERY REPLACEMENT

- 1. 2 x "AA" 1.5V batteries are required for each candle (not included).
- 2. 2 x "AAA" 1.5V batteries are required for each remote (not included).
- 3. Be sure to install the battery to its correct polarity.
- 4. Exercise caution when replacing batteries. Open the compartment carefully.
- 5. Close the lid back and make sure it is properly sealed.

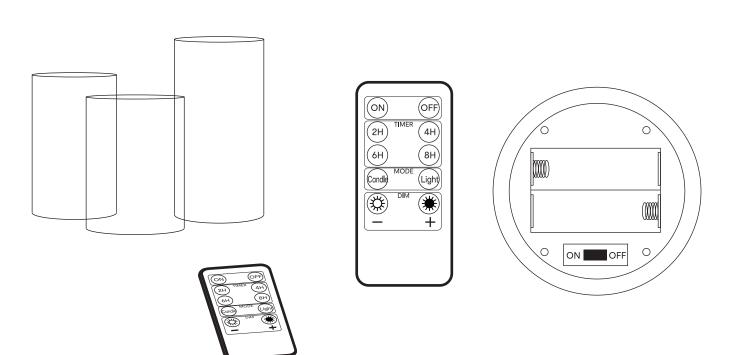

BATTERY WARNING:

- Removal and replacement of batteries should be carried out by an adult or under adult supervision.
- > Remove exhausted batteries from product.
- > Remove batteries from product if storing for long periods of time.
- > Only use batteries of the same or equivalent type to those recommended.
- > Do not mix old (used) and new batteries or batteries of different types, eg. Rechargeable and alkaline.

WARNING: CHOKING HAZARD – Keep batteries away from children and pets.

WARNING: FRAGILE, HANDLE WITH CARE. FOR DECORATION ONLY, THIS IS NOT A TOY.



CAUTION: INSTALL BATTERIES TO CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF NEW OR USED BATTERIES. INSTALLATION BY AN ADULT IS RECOMMENDED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. Remote range is up to 3m