

 


**Instruction Manual**

**K: 43591183 | T: 71332727**

**Model: EB500009**

**Kids smart watch**

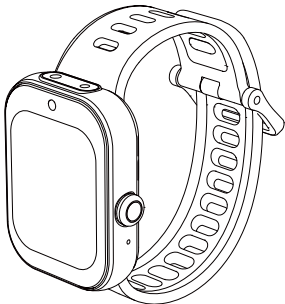

**Please read user manual carefully before use**

**Includes**

Kids smart watch

4-pin magnetic charging cable

# SAFETY AND WARNINGS

Misuse of batteries lead to them bursting, causing a fire or chemical burns. Please read the below precautions:

- Do not disassemble.
- Do not crush and expose the battery to shock or force. Such as hammering, dropping, or stepping on it.
- Do not short circuit.
- Do not be exposed to high temperatures or place near a heat source.
- Do not leave in direct sunlight for any length of time.
- Do not dispose of it in fire.
- Do not handle damaged or leaking batteries. Keep the battery out of the reach of children. Keep the battery dry.
- If you notice any signs of damage, cease use, and contact supplier support.
- Dispose of the item at a suitable waste station, as the battery cannot be added to normal waste.
- Keep the watch clean by wiping it with a slightly damp cloth.
- Keep the watch out of direct sunlight and away from any direct heat source.
- Do not drop the watch on a hard surface. Do not expose it to moisture or immerse it in water.
- Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by:
  - Blowing on the lens.
  - Gently wipe the lens with a dry cloth.
- Charging should only be completed by an adult.


# OVERVIEW

## Introduction

This smart watch is a great wearable gadget for children! In addition to show the time, you can also take photos, shoot videos, record voice and play games!

The watch may come with a small amount of charge, but we recommend a full charge before use. A full charge will take about 2 hours.

## Components

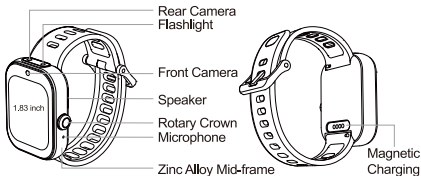

### Note:

1. If the watch cannot be turned on, please charge it with a 5V voltage for 2-5 minutes to start up the watch.

# OPERATION

## Power on

Press and hold the rotary crown on the right side to turn on the watch.

Note: Please fully charge the battery before using the watch.

## Power off & Restart

Press and hold the right rotary crown to enter the selection screen.

Tap [⏻] to turn off the watch.

Tap [⌚] to restart.

## Charging instructions

Turn the watch over, align and attach the charging pins to the charging contacts. You will see the charging icon on the watch screen after 5s.

Charging fully may take 2 hours. you will see the battery icon is full if the watch have been fully charged.

Before charging, please ensure the charging contacts are clean and free from any residue. Residual sweat can corrode the metal charging contacts, leading to potential risks. Charging should be supervised by a parent or guardian.

Low battery reminder:

If the battery is too low, the low battery warning screen is displayed. After the battery charge reminder, only the analog dial and digital can be seen. At this time, it needs to be charged immediately.

## Battery Life

The time of the battery lasts between charges depends on usage. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding

on the battery, such as taking photos and videos. The expected battery life is shown below. This is based on the assumption that the screen is turned off when not in use.

Note: Please do not use fast charge, charge at least once a week.

Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2 ~ 3 days
Heavy Usage	1 day

## Low Battery Reminder

There will be a reminder when the battery is below 30%, and you will not be able to play games when the battery is below 10%.

## How To Operate Your Watch

Long press rotary crown to power on the watch.

Press the rotary crown to wake the watch up. Press the rotary crown for 3 seconds to wake up the watch from standby.

When the clock is displayed on screen, press the rotary crown to go to the home menu.

If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging.

When the battery level is low, only the clock display function is available.

We recommend recharging the battery as soon as possible before further use.

## Shortcut keys

Swipe down from the top of the screen to access the shortcut menu.

Tap the corresponding icon to toggle the function status.

Turn the **flashlight** on or off.



On



Off

Access the watch communication function.



On



Off

Voice broadcast of the current time.



Tell the time



Not telling the time

Toggle between default volume and silent mode.



Mute



Default volume

Slide to adjust the screen brightness.



## Automatic Screen Off

To preserve battery life, the screen will automatically shut off after a short period when in clock mode.

The auto screen off time can be set to 15 sec, 30 sec, 45 sec, 60 sec and Never. Please refer to the Setting section in this manual.

## Clock Display

When the rotary crown is pressed, the clock will be displayed.

Tap the center of the screen to switch the clock face between analog and digital.

Swipe left or right on the screen to see more clock faces.

Press the rotary crown to display the home menu for other activities.



## Home Menu

Press the rotary crown to display the home menu, the following functions are available:

- Camera
- Video
- Pedometer
- Sport Mode
- Watch Link
- Audio
- Common Sense Card
- Puzzle Games (5)
  - 2048
  - Shoot the ball
  - Cut fruits
  - Shake Fun
  - Puzzle Solver
- The Formation of Good Behavior Habits(28)
- GUBI Interactive Pet

- Screen Light
- Instrumental music
- Musical Instruments Simulation
- Sound Simulation
- Alarm Clock
- Tool
  - Countdown
  - Stopwatch
- Photo Album / Video Gallery
- Recording
- Calculator
- Background
- Calendar
- Setting

Tap the icon to enter the activity.

Swipe left or right to scroll through the menu pages.

## Emergency Alarm:




When the watch is in standby, quickly pressing the rotary crown three times will activate the emergency alarm function. A warning icon will appear on the display and an audible alarm will sound.



## Camera


Press the camera button  on the screen to take a photo.

Tap the icon , there are interesting photo frames for option.

Tap the photo gallery  button to view photos.

Tap the arrow icons or swipe the screen to see the previous or next photo.

To delete a file, tap the  icon on screen and follow prompts.

Tap  to switch to a different camera lens.




## Video

Press the camera button  on the screen to take a video.

Tap the video gallery  button to view videos.

Tap the arrow icons or swipe the screen to see the previous or next video. To delete a file, follow prompts.


Tap  to switch to a different camera lens.



## Pedometer

Tap  to access the pedometer feature and start counting steps.

Tap  to view the number of trophies earned.

Tap  to view the pedometer Leader board (displays data for the top four positions only).




## Sport Mode

Tap  to enter Sport Mode. Swipe up or down to select the sport type.



Before starting the timer, swipe up or down to select a constellation badge. Complete 30 minutes of exercise to earn the selected badge.




Tap  to view exercise records.

Tap  to check constellation badge status (reset at the end of each month).



## Watch Link

Two watches of the same model support a connection within 10 meters to initiate a chat by Watch Link function. Can view and select the watch name in the Settings for the display name used in the connection. There are a total of 19 character names to choose from, and the watch default name is policeman.

Tap the  icon in the top-right corner to enter the device search screen.

- Toggle the switch in the top-left corner to broadcast your connection signal (making the device discoverable to others).
- Toggle the switch in the top-right corner to search for other watches.




Tap the desired device to start a connection.

## Send emoji, photos, or voice messages (within a 10-meter range between devices).

Swipe left or right in the bottom bar to select an emoji for sending.



Tap  to enter the photo selection, swipe to choose the photo you want to send, and press Ok to confirm.

Tap  to access the voice message function.



Tap  to start recording, and tap  again to stop recording. After recording is complete, tap  to send.



## Audio

### Music Player



To play the music transferred to your watch, select the music player  icon, and then press play  to start playing the file.



 Play

 Volume Up

 Next



 Pause

 
 Volume down

 Back

### Storybook



To play a story from your watch, select the story player  icon from the Music/Story function and press play  to play the story.



 Play

 Volume Up

 Next

 Pause

 Volume down

 Back

## Common Sense Card

There are 6 categories of common sense things learned through cards.



Animal



Food



Fruits



 
Nation



Vegetable



Vehicle



Tap the card to play the content;  
Slide left and right to switch cards.



## Puzzle Games

There are 5 built-in games on the smart watch. Swipe the screen to see the game icons, then tap one to play.

### 2048

Game Instruction: Swipe up, down, left or right to move the tiles across the board. The tiles will slide in the swipe direction, meanwhile a new tile will emerge randomly in the board. When the tiles with the same number meet, they will merge into one tile.

### Shoot the ball

Game Instruction: Tap the screen to play this game. Shoot, break through Gubi's defense, throw the basketball into the moving basket, and get higher points.


### Cut fruits


Game description: Slice the fruits that appear on the screen to earn points, while carefully avoiding any bombs.

### Shake Fun

Game Instruction: Shake the watch to roll three dice with randomized outcomes.




### Puzzle Solver

Game Instruction: Tap  to start the game and select either the 4-grid or 9-grid mode.

Once in the game, drag and drop puzzle pieces to assemble them. Tap  to access the puzzle gallery, and swipe left or right to view completed puzzles.

# The Formation of Good Behavior Habits



- In this interface , tap the icon  in the upper bar, then to select different items. 

- Swipe left and right to select the item you want to set, there are total 28 items.





- Slide up or down to set the reminder time. The initial time is 08:00.



- Tap the icon in the bottom middle to set the ringtone, to ring once, every day, and not ring.



- Tap the delete icon  in the bottom left to delete the item, and return to the previous last interface.
- Tap the icon  in the bottom right to complete the setting of item.
- The schedules will be sorted one by one by the setting time ( the time can be set as the same), there will display the quantity of the items in the upper right corner, there are five color background labels for a cycle.



- You can click the set reminder picture area to modify the time or status.



- When the time is up, a bell will be sounded, the popup will last for 30 seconds.



Tap and slide the watch screen or press the rotary crown, will return back. If the reminders are set at the same time, the icon is switched every 1 second within 30 seconds of the reminder.

## GUBI Interactive Pet

There is a perfect friend named Gubi. You can interact by sliding in different directions on the screen, clicking on different positions, etc. It will display different expressions and make interesting sounds.



## Screen Light

Here you can select a screen light style and adjust the brightness.



- Tap the arrow icons or swipe left or right to scroll through the light styles.
- Tap to increase the brightness level.
- Tap to decrease the brightness level.
- Tap to make the screen light flash. Tap it again to stop flashing.



## Instrumental Music



Here you can listen to more than 10 built-in melodies. In the Album Selection Menu:

- Tap an album icon to start playing that album.
- Tap  or  to go to the previous or next song.



## Musical Instruments Simulation



Watch comes with 9 kinds of Musical Instruments Simulation. They are Piano, Violin, Triangle, Rattle drum, Snare Drum, Taiko, Bass Guitar and Ukulele. Tap on the corresponding instruments, or shake the watch it will produce the corresponding sound.



## Sound Simulation



Tap the icon to enter the simulation interface, and select the simulation object by select the icon.


Watch comes with 8 kinds of sound simulation. They are Light Saber, Hammer, Basketball, Tennis, Ka Me Ha, Clap, Magic and Wand.


After entering the simulation interface, when you tap the screen, or shake the watch the sound will be emitted every time.





## Alarm Clock



Tap  the clock icon on screen to change the alarm time.

Tap  the tick icon on screen to turn on / off the alarm.

Swipe left  or  right to change the alarm clock screen background.



How to set an alarm ?

Select the hour and minute by swiping up or down on the hours and minutes. Tap < ok > to confirm the chosen time.



**Note:** If the battery level is too low, the alarm will need to be set again.

## Tool

### Countdown

Tap  to set the countdown time.

Tap the play icon  to start the timer.



While the timer is running, tap  to pause the count down, then tap  again to resume.


Tap  to stop the countdown and reset the timer.

Swipe left  or  right to change the countdown screen background.

### Stopwatch

Tap the play icon  to start the stopwatch.

While the stopwatch is running, tap  to pause the timer, tap  again to resume.

Tap  to stop the timer and reset the stopwatch to zero.

Swipe left  or  right to change the stopwatch screen background.



## Photo Album / Video Gallery


Tap the photo icon  to view the photo taken.

Tap the video icon  to view the video taken.






## Recording

Tap  to start voice recording.

Tap  to play the last recording.

Tap  to pause recording playback.

Use the arrows to select previous or next recording.



## Calculator

Calculator function is for basic mathematical calculations. Do not use this to cheat on tests, or you will never learn how to work out the answers by yourself.




## Background

Swipe the Wallpaper to set the built-in wallpaper you like.



## Calendar

Use the calendar to view the date. If the date shown is incorrect, please go to the Settings  menu to reset the date and time information.


## Setting

In settings, swipe left or right on the screen to scroll through different setting submenus. Here you can adjust the following items:


- Volume
- Brightness
- Brightness Time

- Date
- Parental Control
- Watch Name
- Theme
- Time Format
- Language
- Storage Location
- Factory Reset

## Parental Control

Set time-limits for how long games can be played per day to use, go to the Settings  menu and open the Parental Control submenu.

Tap and hold on the screen for three seconds. Then, you will be asked to identify a colour on the screen and tap three times to confirm. Once this has been completed, you will gain access to the parental control.

Select between a daily limit of 15, 30, 60 or 90minutes, or no limit. You can also choose to disable the games completely. Tap the  icon to confirm the selection.

### Tips

- When you touch the screen, ensure your entire finger is pressing the screen and hold for a second.
- Do not use your fingernails.

# SPECIFICATIONS

Screen size: 1.83 inch

Battery capacity: 310mAh

Input: DC 5V  1A

IP Rating: IP65

## TROUBLESHOOTING

Please check the troubleshooting steps outlined below, and if you still have any issues, contact supplier for support.

Problem	Solution
The watch is not turning on	<ul style="list-style-type: none"><li>● Hold the rotary crown for 3 seconds to turn off, then hold the rotary crown again to turn back on.</li><li>● Press and hold the rotary crown for 8 seconds to force restart the watch. Note: This action will reset the watch's time and date, requiring you to set them again.</li></ul>
The watch is not charging	<ul style="list-style-type: none"><li>● Try to charge the watch with a different magnetic charging cable.</li><li>● Check if the computer's USB port or adapter you are using to charge the device (not supplied) is working with other electronic devices.</li><li>● If still not working, perform the hard reset method as described above.</li></ul>

Screen display is abnormal	Hold the rotary crown for 3 seconds to turn off, then wait 30 seconds. Hold the rotary crown again turn back on.
Cannot connect to computer	Ensure the cable is securely connected at both ends. Hold the rotary crown for 3 seconds to turn off. Then wait 30 seconds. Hold the rotary crown again turn back on. Unplug from the computer and reconnect.
Image taken is not clear	Make sure the lighting conditions of the shooting environment are good. Check to see if the camera lens are clean. If you find some dust or dirt on it, please try blowing on the lens, and gently wiping the lens with a dry cloth.
Not enough memory/storage space	Try manually deleting data from the watch, or use the included data cable to transfer photos and audio files from the watch to your computer.
How to reset the watch	Settings > Factory Reset Note: This action will restore all watch settings to their factory defaults.

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## **MADE IN CHINA**

### **CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567