


Portable CD Player

Instruction Manual

K: 43598892 | T: 71413259 (Model: JLR-80877)

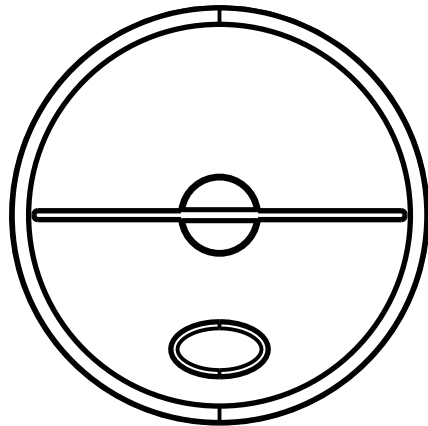

Please read this entire manual carefully before using the product and retain it for future reference.

Package Contents:

- 1 x CD Player
- 1 x Headphones
- 1 x User Manual


Important Safety Information

Read all instructions: Before using your CD player.

- › Use 2 X AA(LR6) alkaline batteries (not included)
- › Do not use rechargeable (NiMH, Ni-cd), lithium, carbon-zinc, or any other battery type unless explicitly stated as compatible in this manual. **Using incorrect batteries may cause leakage, overheating, fire, or explosion.**
- › **Polarity is Vital:** Insert batteries with the correct polarity (+ and -) as marked inside the battery compartment. Incorrect installation can cause short-circuiting, leakage, overheating, fire, or explosion.
- › **Do Not Mix:** NEVER mix old and new batteries, or batteries of different types, brands, or chemistries. Replace all batteries at the same time with new ones of the same type and brand. Mixing batteries can cause leakage, overheating, fire, or explosion.
- › **Remove Exhausted/Unused Batteries:** Remove batteries if they are exhausted or if the player will not be used for an extended period. Old or leaking batteries can cause damage to the player.
- › **Adult Use Only:** Battery installation and replacement should be performed only by an adult.
- › **Choking & Poisoning Hazard:** Batteries are small parts. KEEP BATTERIES OUT OF REACH OF CHILDREN AND PETS. If swallowed, seek immediate medical attention. Battery fluid is corrosive and toxic. If battery fluid contacts skin or eyes, rinse immediately with plenty of water and seek medical advice.
- › **Disposal:** Do not dispose of batteries in fire or water. Do not put batteries in regular household waste. Dispose of used batteries promptly and properly according to local regulations for battery recycling. Contact your local council for safe disposal/recycling options.
- › **Extreme Conditions:** Do not expose batteries to excessive heat (e.g., direct sunlight, fire, heaters) or extremely low air pressure. Do not crush, puncture, short-circuit, or immerse batteries in water. These actions can cause leakage, overheating, fire, or explosion.
- › **Use Correct Adapter ONLY:** If using an AC/DC power adapter (**not included**), it **MUST** be rated at 4.5VDC, 1A (1000mA) output and have the correct polarity. **Using an incorrect or unapproved adapter can damage the player, cause overheating, fire, or electric shock.**
- › **Check Before Use:** Inspect the adapter and cable regularly for damage. Do not use a damaged adapter.
- › **Do not dispose of this unit in fire or water.**
- › **Never attempt to disassemble the unit.** There are no user-serviceable parts inside. Opening the unit may expose you to dangerous voltages or other hazards and will void the warranty.

- › Keep your device and all accessories (especially batteries and headphones) out of the reach of children and pets.
- › **Small parts may cause choking or serious injury if swallowed.**
- › **Operating Temperature:** Use the device only within an ambient temperature range of 5°C to 35°C (41°F to 95°F). Avoid exposing your device to very cold (below 5°C) or very hot (above 35°C) temperatures.
- › **Extreme temperatures** (outside the 5°C - 35°C range) can cause deforming of the device, malfunction, and significantly **reduce battery performance and life.**
- › **Do not allow your device to get wet.** Liquids can cause serious damage and electric shock. This device is not waterproof.
- › **Do not handle your device with wet hands.**
- › **Do not expose the device to dripping or splashing water. Do not place objects filled with liquids (e.g., vases) on the device.**

Product diagram

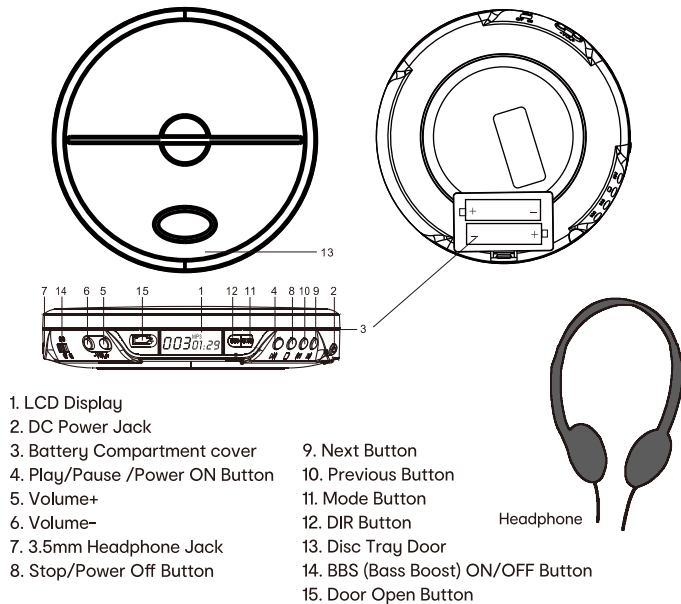

Important Note:

2 x AA Batteries (required for operation) are NOT included.
AC/DC Power Adapter (4.5VDC, 1A output required) is NOT included.

Operation Instructions

Battery Installation:

Insert Batteries: Open the battery compartment and insert two new "AA" size alkaline batteries (**not included**). **CRITICAL:** Ensure the battery polarity (+ and -) matches the markings **exactly** as indicated inside the compartment. Close the compartment securely.

Optional AC/DC Power Adapter Use (adapter is not included):

- Remove Batteries (IMPORTANT):** If batteries are installed in the unit, **remove them** before connecting the adapter.
 - Connect Adapter:** Insert the plug of a 4.5VDC, 1A output AC/DC power adapter into the "DC Power Jack" located on the right side panel of the unit. Then plug the adapter into a standard AC electrical outlet.
- Note:** Ensure the adapter meets the required specifications (4.5VDC, 1A) and polarity. Refer to the "**Important Safety Information**" section for full adapter usage warnings.

How to use

IMPORTANT NOTICE:

- Do not use scratched, warped, or damaged discs - they may cause skipping, playback errors, or device malfunction.
- Always wait until the disc completely stops spinning before removal.

Basic Operation:

- Open Disc Tray:** Press the "Door Open Button". The "Disc Tray Door" will release.
- Load Disc:** Place CD/MP3 disc **label-side up** on the center spindle. Press gently until it clicks into place. Close the "Disc Tray Door" firmly until it latches.
- Connect Audio:** Plug headphones into the "3.5mm Headphone Jack".

- Start Playback:** Press "Play/Pause Button" to begin Track 1
 - Volume Control:**
 - Press **Volume+** to increase
 - Press **Volume-** to decrease
- WARNING:** Exposure to sounds >85dB can cause permanent hearing damage. Use at moderate volumes.'

6. Playback Controls:

BUTTON	FUNCTION
▶ Play/Pause/power on	Single press: Start/Pause playback/Turn on Resume: Press again when paused
◀◀ Previous	Short press: Restart track/Previous track Press & hold: Fast reverse scan
▶▶ Next	Short press: Skip to next track Press & hold: Fast forward scan
BBS	Toggle Bass Boost ON/OFF
DIR function	MP3: Folder navigation mode
□ Stop/Power	Single press: Stop playback Double press: Power off Long press: Power off
Mode	Cycle through: Repeat/Random/Scan modes

- Power Management:**
 - Auto shutdown after 30 seconds of inactivity
 - Manual off: Double press or Long-press "Stop/Power Button"
 - Disc Removal:** Press "Door Open Button", **WAIT** for disc to stop spinning. Lift disc vertically from spindle, Close tray door.
 - AC Adapter Safety:** After use, **unplug adapter from wall outlet first**, then disconnect from device.
- NOTE:** When the low battery icon "⬇" flashes on LCD, replace the batteries. Replace **both** AA batteries immediately. Use **same type/brand** alkaline batteries. Observe correct polarity.

Playback Modes:

Repeat Mode

- › Single track: Press "Mode" until "🔁" icon appears
- › Entire disc: Press "Mode" until "🔁" icon appears
- › Cancel: Cycle modes until icons disappear

Random Play

- › Press "Mode" until "🎲" icon appears

- › Tracks play in shuffled order
- › Cancel: Cycle to next mode

Scan Mode

- › Activates when SCAN icon appears
- › Samples each track (10 seconds per track)
- › Press "Play" during scan to resume normal playback

Directory Function (MP3 CD format with multiple files only)

- › During playback: Press "DIR Button" to navigate folders.
- › Press DIR Button repeatedly to scan through folders.
- › Press "Play" to confirm selection.

Bass Boost System (BBS):

- › Press "BBS Button" to toggle effect
- › CRITICAL SAFETY NOTES:
 - Always reduce volume before activating BBS, Bass enhancement increases driver excursion
 - High volume + BBS may cause: Headphone/speaker damage, Instant hearing injury
 - Recommended max volume with BBS: 70%

Product Specifications

CD Frequency Response	20 Hz~20 KHz
Dimensions:	14x14x3cm
Operation Time:	Approx. 8 hours (alkaline batteries)
Headphone Output:	3.5mm headphones jack Compatible with 16~32Ω headphones Max Safe Output: 16mW per channel
Supported Disc Formats	CD / CD-R / MP3 CDs
Power Supply:	Battery:2 x AA (LR6) alkaline batteries (not included) Adapter Input:4.5VDC,1A (not included)

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

