

anko

Instruction Manual



720P HD PROJECTOR

K: 43-609-949 | T: 71-567-099

Model No: EB500040

MADE IN CHINA

Important Safety Instructions

1. Please read before using and retain this manual for future use.
2. Observe all Warnings.
3. Follow all instructions.
4. Do not use this device near water.
5. Clean only with a dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heaters, stoves or anything produces heat.
8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug the device during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the device. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Additional Warnings and Precautions

 
1. The projector LES lens is RG2 grade. 
2. Do not look directly into the projector light.
3. Don't touch the projector lens.
4. Do not use this device near water.
5. Clean only with a slightly damp cloth.
6. Do not cover or block any ventilation openings. When placing the device in a shelf leave 5 cm (2") free space around the whole device.
7. Install in accordance with the supplied user manual.
8. Don't step on or pinch the power adaptor, Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach, as playing with the power cable can cause serious injury.
9. Unplug this device during lightning storms or when unused for a long period.
10. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame.
11. Avoid using the device near strong magnetic fields.
12. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
13. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water on the product.
14. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
15. Do not use this device in an area where condensation may occur.

15. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
16. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
17. The socket outlet must be installed near the equipment and must be easily accessible.
18. Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock.
19. Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
20. Devices with class 2 construction do not require a earthed connection.
21. Keep away from rodents. Rodents enjoy biting on power cords. Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.


Accessories




Remote

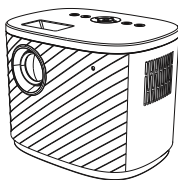

Main Unit

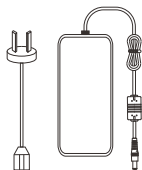 

AC Adapter

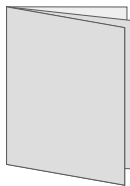 


User Manual

Placing your projector

Your projector can be installed in four different configurations (see pictures below)


Front Table:

 Select this location with the projector placed near the floor in front of the screen. This is the most common way to position the projector for quick setup and portability.

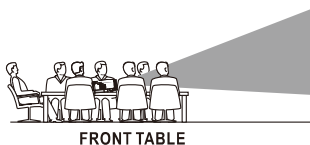


Front Ceiling:

 Select this location with the projector suspended upside-down from the ceiling in front of the screen. NOTE: A projector mount is required to install the projector in a ceiling.

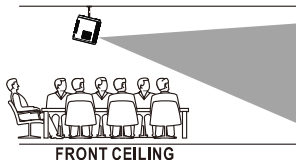


Rear Table: Select this location with the projector placed near the floor behind the screen.

 NOTE: That a special rear projection screen is required.

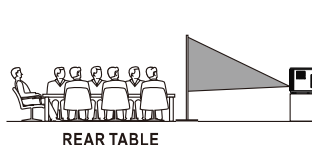


Rear Ceiling: Select this location with the projector suspended upside-down from the ceiling behind the screen.

 NOTE: A projector mount is required to install the projector in a ceiling. A special rear projection screen is required.

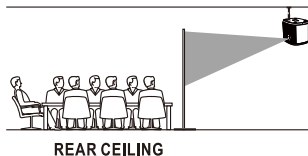

To reduce image distortion

 It is recommended to move the projector as close to center of screen.

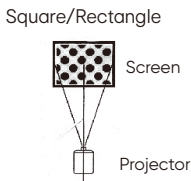


Placing your projector on ceiling

When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.


Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

 NOTE: Projector mount and screw(s) not included.

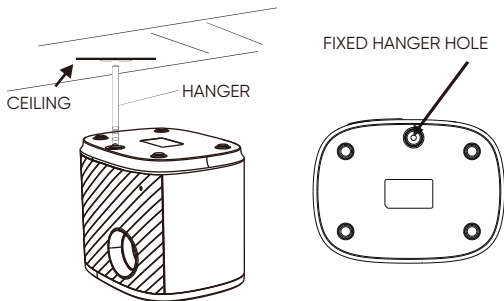

Adjust the vertical location

 Follow below picture to adjust the vertical location.

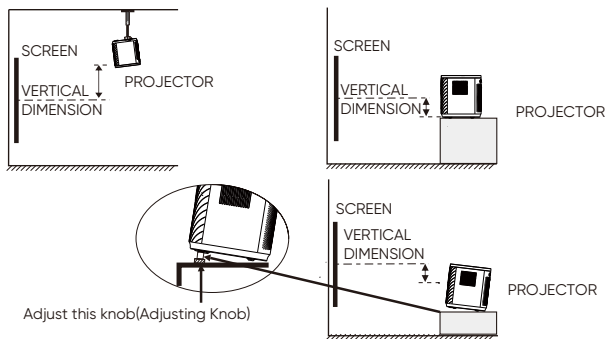


Adjust the focus and keystone

It is recommended to move the projector as close to center of screen.


Adjust the focus by turning the knob while observing the image pixels near the center of the screen. Optimal focus is obtained when the pixels are clearly visible. Depending on the projected screen size, the focus near the screen edges may be less sharp than the screen center.

Keystone image is created when the projector beam is projected to the screen in an angle. Keystone correction will restore the distorted image to a rectangular or square shape.

 FOCUSING RING
Then sharpen the image by rotating focus knob

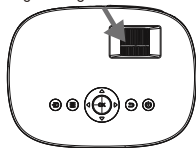

KEystone CORRECTION

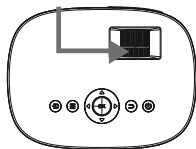 

Projector Remote

Power: Press to power ON.

Press twice to power OFF.

Mute: Press to mute volume.

VOL+ /VOL-: Press to adjust audio level.

Arrows / OK : Press to navigate and confirm selections in Settings and other menus.

 
Return/ Exit: Press to exit the projector menu.

Aspect ratio: Press to adjust the aspect ratio 16:9 / 4:3.


Home : Press to enter the home menu.

Menu: Press to access projector Settings.

Play/ Pause: Press to play or pause an individual chapter or track.

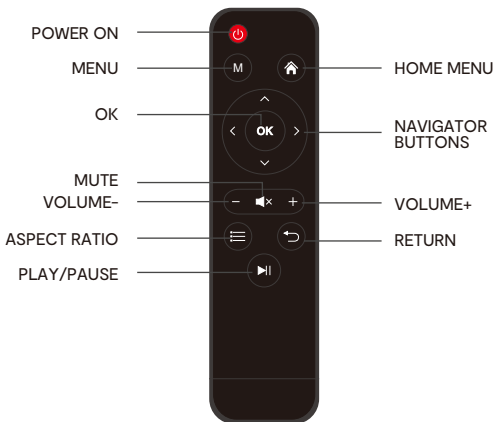

Install/Remove Battery Of Remote

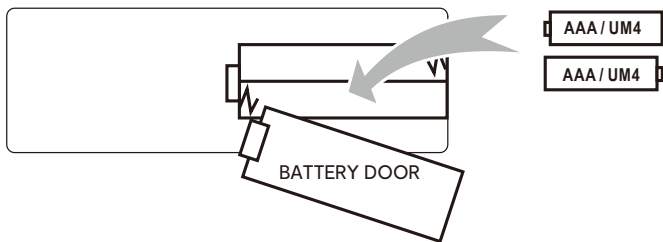 

Remove the battery compartment cover on the back of your remote by carefully sliding to open the battery cover can then be lifted away. Fit the correct batteries (Excluded 2*AAA batteries) referring to the polarity markings. Finally, replace the cover.

NOTES:

Batteries shall not be exposed to excessive heat such as sunshine, fire. Be sure that the batteries are installed polarity correctly.

 
Do not mix old and new batteries.

Only same or equivalent type batteries as recommend are to be used.

Do not dispose of batteries in fire, battery may explode or leak.

Do not try to recharge a battery.


Controls of projector

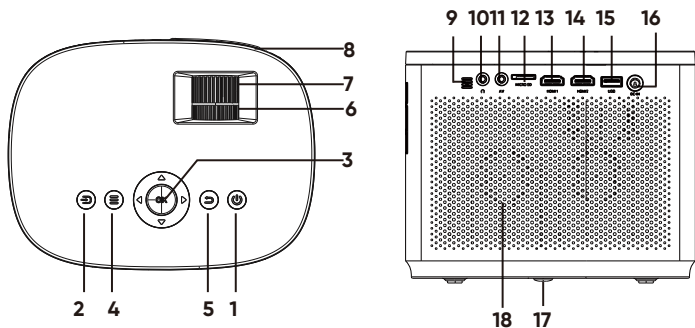

- 1. POWER  Button
- 2. SOURCE  Button
- 3. NAVIGATION  Button
- 4. MENU  Button
- 5. RETURN  Button
- 6. Keystone Correction
- 7. Focusing Ring
- 8. LENS
- 9. IR Window

- 10. Headphone Jack
- 11. AV
- 12. MICRO SD
- 13. HDMI Port 1
- 14. HDMI Port 2
- 15. USB Port
- 16. POWER INPUT
- 17. Hanging Holes (with screws)
- 18. Speaker Driver

 Projector Control Functions

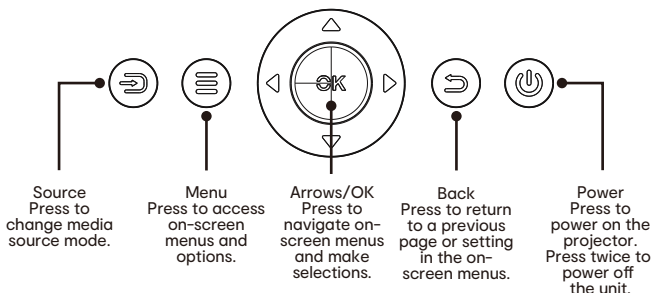

Turn on/Turn off the projector

TURN ON

 
- 1) Plug the projector into a power source.
Indicator light: Red.
- 2) Press the power button 
Indicator light: White.
- 3) The projector turned on after 5 seconds.

TURN OFF


- 1) Press twice this power button  to turn off this unit.
- 2) Unplug the power adapter.

Note

Please turn off the projector before unplugging the power source, so as not to affect the life and operation of the projector.

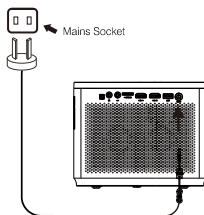

 Distance Between The Projector And Screen

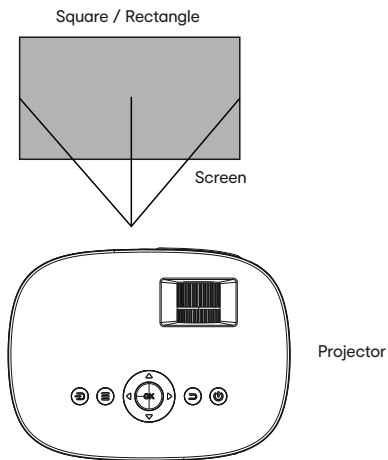


Projection distance	1.11 m	1.66 m	2.21 m	2.77 m	3.32 m
Projection size	40 inch	60 inch	80 inch	100 inch	120 inch
Light, brightness, etc. will affect the projection distance, this data is for reference only.					
Projection Position					
It is recommended to place the projector in front of the center of the screen.					

Connection instructions

Select an input source

 You will see the picture below when the projector is turned on. You can choose among the different input sources (Movie/ Music/ Photo/ AV/ HDMI1/HDMI2) by pressing the arrows buttons(UP/DOWN/LEFT/RIGHT) on the projector touch panel or remote control. You can connect different devices with the projector, according to the following connection instructions.

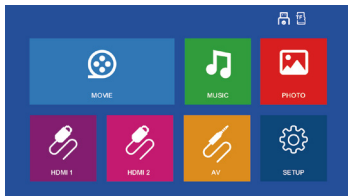



interface

HDMI device connection

The projector can connect to devices with HDMI input function. It is compatible with laptops, DVD players, Blu-ray players, Chromecast, TV Stick, etc. An HDMI cable is excluded. The projector is equipped with 2 HDMI input ports, including 2 HDMI female socket inputs (HDMI 1 and HDMI 2).

Once the HDMI cable is properly connected, navigate to the operation menu and choose the corresponding HDMI input option.

  - 1) If you connect your devices to the projector via "HDMI 1" port, please click "HDMI 1" input source.
- 2) If you connect via "HDMI 2" port, please click "HDMI 2" input source.

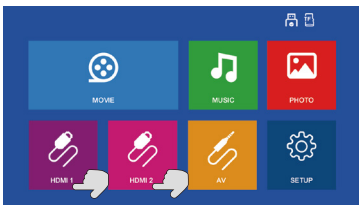
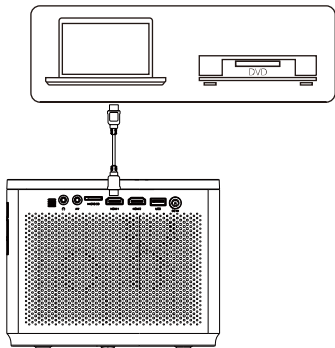


Note: In rare cases, if the projector's speaker has no sound when playing a DVD movie in a player connecting to the HDMI input, please check the player's digital audio settings and make sure it is set to "Auto" mode or "PCM" mode.

Multimedia instructions

Insert USB/Micro SD card (maximum up to 32GB) into the corresponding slots (as shown in the picture).

  
Select “MOVIE”, “MUSIC”, “PHOTO” to enter the content you want to play.

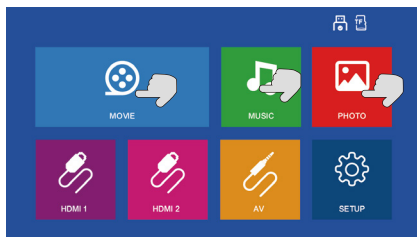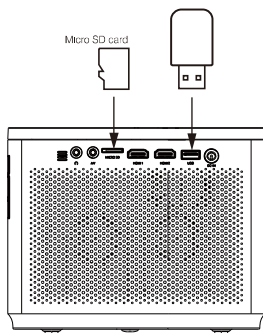

Sub-Menu on Photo screen	
- When photo playback, press the OK button and more function screen show on lower (figure 1). - Use the ◀/▶ button to select icon and press the OK button to play special function.	Figure 1.
Sub-Menu on Music screen	
- When music playback, press the OK button and more function screen show on lower (figure 2). - Use the ◀/▶ button to select icon and press the OK button to play special function.	Figure 2
Sub-Menu on Movie screen	
- When movie playback, press the OK button and more function screen show on lower (figure 3). - Use the ◀/▶ button to select icon and press the OK button to play special function.	Figure 3


AV video device connection

 Connect the projector AV interface with the AV cable, as is shown in the pictures.

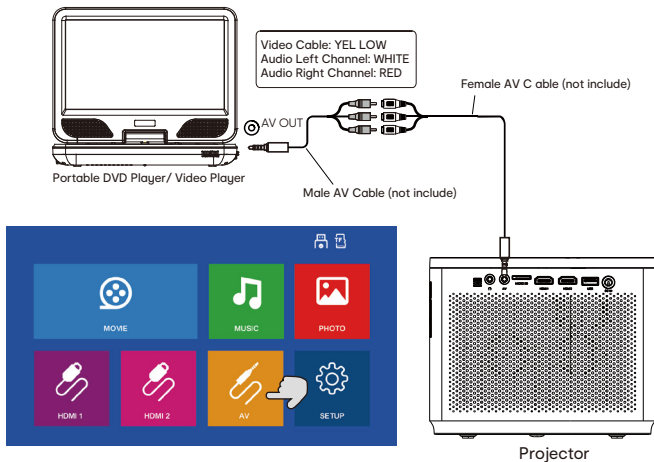

Audio devices connection

 
The projector can connect to a headphone and to a wired audio system using a 3.5mm jack (not include).

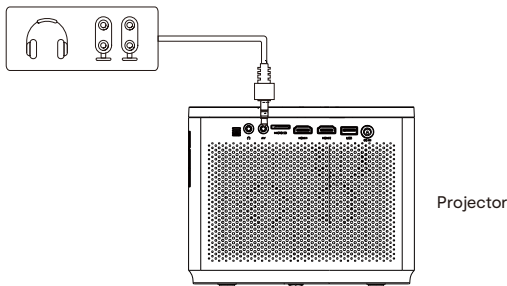

Projector setting

Options Related to "PICTURE" are set on this screen

 Press  button to enter projector menu. Press again to previous status.

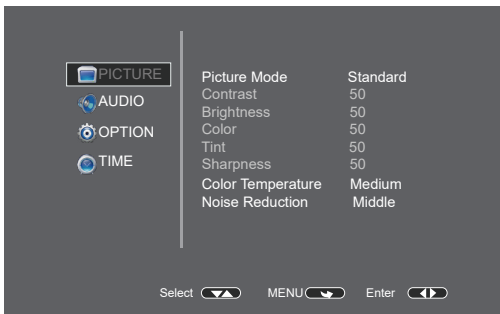

Use  buttons to select manual page. This manual showed on right lower of view screen.

1. Picture Mode

Select Standard, Dynamic, Mild ,or User(custom).

2. Contrast, Brightness, etc

Set Picture Mode to "User " to adjust these settings.

3. Color Temperature

Select Warm, Cool, or Medium.

 
4. Noise Reduction

Select Off, Low, Middle, or High.

Projector setting

Options Related to "PICTURE" are set on this screen

Press  button to enter projector menu. Press again to previous status.

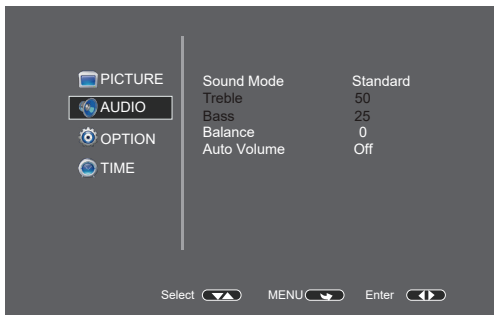

Use  buttons to select manual page. This manual showed on right lower of view screen.

1. Sound Mode

Select Standard, Movie, Music, Sports, or User (custom).

2. Treble, Bass, Balance

Set Sound Mode to "User" to adjust these settings.

Sound Mode - User	Parameter
Treble	0-100
Bass	0-100
Balance	-50-+50 (Parameter)

 
3. Auto Volume

Turn Auto Volume ON or OFF.

Projector setting

Options Related to “OPTION” are set on this screen.

Press  button to enter projector menu. Press again to previous status.

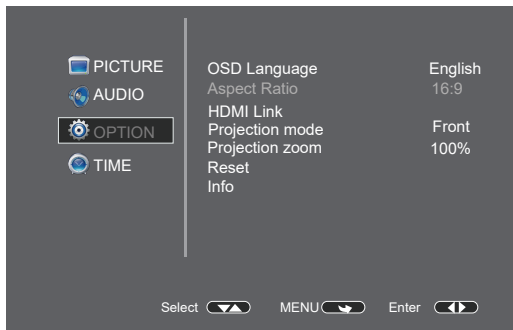

Use  buttons to select manual page. This manual showed on right lower of view screen.

1. OSD Language

Select different language, follow below figure.

English	Slovak	Portuguese	Danish
German	Czech	Dutch	Croatian
Japanese	Hungarian	Italian	Swedish
Chinese	Norwegian	Polsky	Spanish
Serbian	Finnish	French	


Projector setting

2. Aspect Ratio

Select 16:9, 4:3, full, ZOOM1, ZOOM2, PANORAMA, JUST SCAN, AUTO

3. HDMI Link

 For access CEC function with TV box.

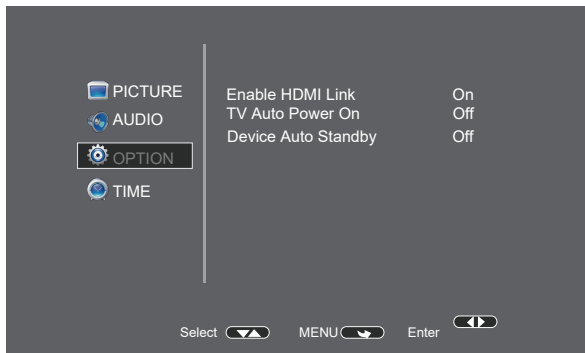

- 1) Select Enable HDMI link to be On, plug in HDMI will automatically enter the HDMI interface. Select Off to disable this function.
- 2) Select TV auto Power On to be On, use the remote control of the TV box to control the box to turn on it, the projector will turn on with it. Select Off to disable this function.
- 3) Select Device Auto Standby to be On, use the remote control of the projector to turn off it, the TV box will turn off with it. Select Off to disable this function.

4. Project mode

Select Front, Rear, F/Ceiling, Rear Ceiling.

5. Project zoom

Select to adjust the screen size from 80% to 100%.

6. Reset

Select Y or N.

 
7. Info

Display the unit information.

Projector setting

Options Related to “TIME” are set on this screen.

Press  button to enter projector menu. Press again to previous status.

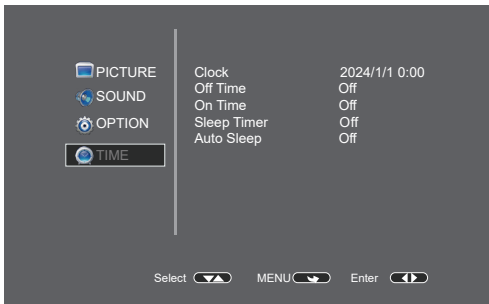

Use  buttons to select manual page. This manual showed on right upper of view screen.

1. Clock

Select clock to Date, Month, Year, Hour, and Minutes.

2. Off Time

Select to off, once and everyday. Hour and Minutes.

3. On Time

Select to off, once and everyday. Hour, Minutes, input source and Volume.

4. Sleep Timer

Select sleep timer to Off, 10min, 20min, 30 min, 60min, 90min, 120min, 180min, 240min.

5. Auto Sleep

Select auto sleep function to off, 1Hour, 2Hours, 4Hours, 8Hours.

Specifications

Light Source Type	LED
Brightness Output	White light output ANSI: 120lm
Display Native Resolution	1280 x 720
HDMI Input Supported Video Resolution	1080p, 1080i, 720p, 576i, 480p, 480i
Power Consumption	Operating 48W; Standby $\leq 0.5W$
Power Input Connect Included Adapter	DC 24V, 2A
Included Adapter Connect DC input of unit	Input AC100-240V,50/60Hz Output DC24V, 1.75A
Color Temperature	6500-8000K
Projection Size	Optimal 37"-140"
Signal Port	2*HDMI/usb/3.5mm Audio/MICRO SD/AV IN/DC IN
USB Port	Support USB device up to 32GB Support format mpg, avi, ts, mov, mkv, dat, mp4, vob, mp3, wma, m4a, aac, jpg, jpeg, bmp, png Video format MPEG-AVC, only supports @Level 4.1v
Weight	0.835KG
Dimension	19.9*15*16cm
Speaker	1*5W
Projection distance	0.6m-3.8m (optimal 1.11m-3.32m)

Trouble shooting

Before resorting the maintenance service, please kindly check by yourself with the following chart.

Symptom	Cause (and Remedy)
No Image is Projected or a "No Signal" message is displayed	1.Power light is on. If it is not on, check the projector is plugged into the power source supply, that the socket is switched on, and then press the power button on the projector. 2.Check the lens cover has been removed. 3.Check the cables are securely attached and installed as per the User Manual. 4.The image source may not be set correctly. Press the Home button on the Control Panel or the Remote, to select the correct setting. 5.Check in the Menu section under Video input signal to make sure that has been set correctly.
The Lamp (Bulb) switches off after a period of time	Is the warning light indicator red? If so, the projector is overheating which turns the light off automatically. 1.Leave the projector to cool for a few moments. 2.Once cooled, check nothing is blocking the ventilation vents. 3.Check the air filter is clean and clean if necessary. 4.Turn on the projector. If the issue persists please contact the service assistance support for further assistance.
The Image is wider at the top/bottom of the screen	This is called keystone and is due to the projection angle not being perpendicular to the screen. To correct use the projectors inbuilt keystone function to adjust the image.

Symptom	Cause (and Remedy)
Spots on the screen	Using a vacuum cleaner to clean the lens. If cleaning doesn't resolve things, please contact the service assistance support for further assistance.
The image brightness has faded	This could possible be caused by the ambient light in the room. Please turn off the light in the room and make sure.
Streaming stick will not power on	The streaming stick needs to be properly connected to power in order to function. For optimal performance, use the included USB cable to connect to the USB port on the projector.
You cannot see the video from your streaming stick on your projector	First, make sure the projector is turned on and set to the HDMI 1 and HDMI 2 input. Then press a button on the remote control to ensure that the device is not in standby or screen saver mode. Listed below are the most common reasons you may not see video on your projector. 1. You have the wrong input (source) selected on your projector. Look to see which input you have the streaming stick connected to. Press this button, it may display a menu with a choice of inputs, Use the arrow buttons on the projector remote to select the correct input and then press OK. 2. The streaming stick is not connected properly. Ensure it is firmly connected to the HDMI 1 and HDMI 2 connector on your projector. 3. If all else fails, disconnect and reconnect all cables including the power cable.

12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

