

# DESKTOP DUDE

## INSTRUCTION MANUAL

5+  
years

This is a 40cm desktop dude with a fan in the base to make him dance, wiggle, and shake.

### PLEASE NOTE:

This product can be powered by a 9-volt battery or by a specific TYPE-C adapter (Battery or DC adapter not included).

1. A rechargeable Ni-MH 9V battery is recommended for best performance.
2. If using an Alkaline battery, it must be NEW and preferably a PREMIUM brand.
3. **DO NOT** use a Carbon-Zinc battery (often labelled "Heavy-Duty"). This type of battery can not produce enough power to operate the motor.
4. To get the most life out of the battery, use in intervals no greater than 5 to 10 minutes, to allow for approximately 45 minutes of use.
5. If using an TYPE-C adapter, it must follow the below specifications:  
Input: AC 100-240V(50-60Hz)  
Output: TYPE-C DC 9V (2A)  
Adapter must be connected indoors out of the weather.



6. This toy is only to be connected to equipment bearing either of the following symbols:



### PLEASE NOTE:

1. If your desktop dude begins to get stuck in a downward position, it is time to replace the battery or recharge if using a rechargeable battery.
2. Regularly examine for damage to the supply enclosure or other parts. In the event of damage, it should not be used until the damage has been repaired.
3. The desktop dude should not to be connected to more than the recommended number of adapters or power.
4. Gently spot clean with a damp cloth and avoid excessive exposure to water.

**CAUTION: BATTERY INSTALLATION BY AN ADULT IS REQUIRED.**  
**ADULT SUPERVISION RECOMMENDED.**

Made in China