

 
# anko

**Waffle Maker**  
**Model: TSK-2160W**

**User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**



# IMPORTANT SAFEGUARDS

When using this or any other electrical appliance, always follow these basic safety precautions:

## READ ALL INSTRUCTIONS BEFORE USE.

- To protect against the risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always use the product on a flat, solid, stable, heat-resistant surface.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- The temperature of the accessible surfaces may be very high when the appliance is in use. Make sure not to touch these hot parts of the appliance.
- Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.
- Do not place the product on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the product to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
- Do not touch the hot surfaces of the product. Do not move the product while it is connected to mains power. Allow the product to cool completely before handling/moving or cleaning.
- Do not use attachments not recommended for use with this product or not supplied by the product manufacturer.
- Do not use the product near water or other liquids.
- Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical mains power outlet. **Do not touch or reach into the water.**
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not use an extension cord/power boards with this appliance.
- Place the cord in such a way that pulling or tripping over is not possible.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- Do not plug or unplug the product into/from an electrical outlet with wet hands.
- Keep the product and its Power Cord away from heated surfaces.

- Never operate this product if it has a damaged Power Cord or Plug, is not working properly, has been dropped, damaged, or exposed to water or other liquids.
- For electrical safety, if the supply cord is damaged, it must be replaced by qualified electrical only or the product must be disposed of.




**CAUTION-- To reduce the risk of personal injury or product/property damage:**

- This product is intended for indoor, non-industrial, non-commercial, household use only. Do not use the item outdoors or for commercial purposes. Any other use will void the warranty.
- This appliance is intended to be used indoors in the household and similar applications such as staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- Do not allow the Power Cord to hang where it may be tripped over or pulled (e.g., over the edge of a table or counter).


## **SPECIAL INSTRUCTIONS:**

- To avoid circuit overload when using this product in your household electrical system, do not operate another high-wattage electrical product on the same electrical power circuit.



- **Caution: hot surface.**
- Care must be taken. The surfaces are liable to get hot during use.
- Use only heat-proof synthetic or wooden utensils when making waffles, this is to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- For cleaning cooking surface, please refer to section “Cleaning and Maintenance”.

## PARTS

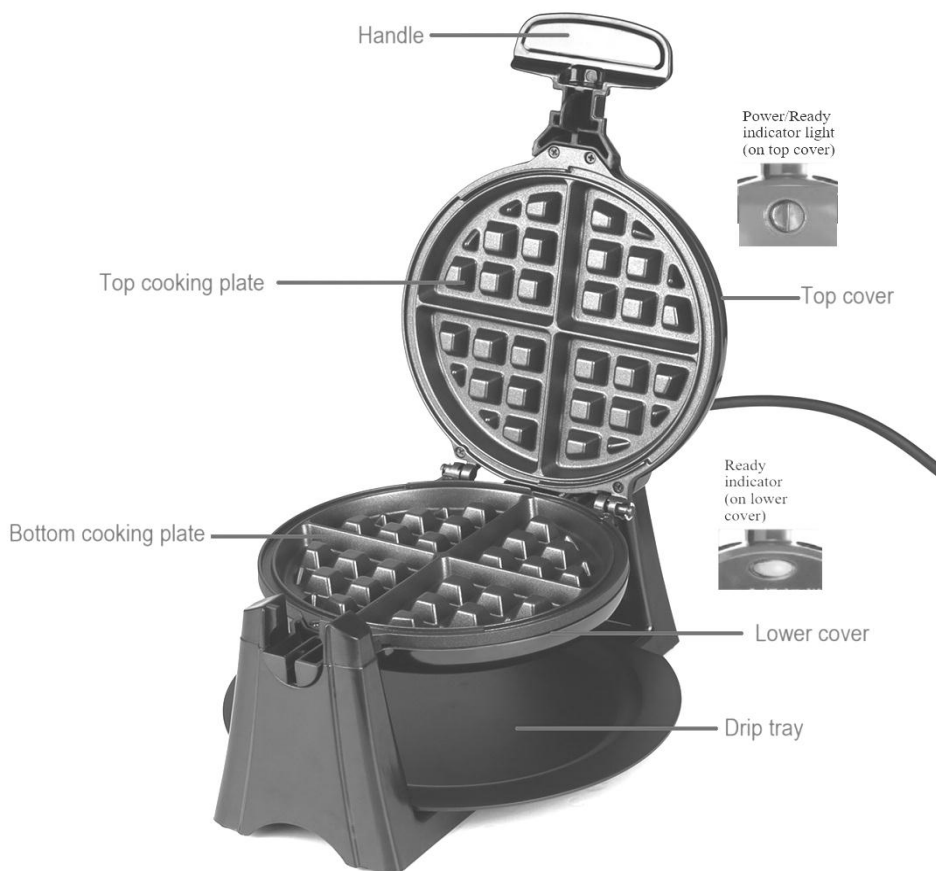

### Before First Use

Carefully unpack the appliance and remove any packaging. Place the unit on a level, dry and heat-resistant surface ready to use. Ensure to read all instructions carefully and save for future reference.

### To Use

**CAUTION:** Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

**NOTE:** During the initial use of this product, it may produce an odour and some smoke. This is normal and will subside with further use.

**IMPORTANT! Before using this product for the first time, clean the unit thoroughly as described under the heading “Cleaning and Maintenance”.**

1. Open the Top Cooking Plate until it rests in a vertical position.
2. Clean the cooking surface as described in section “Cleaning and Maintenance”.
3. Close the unit.
4. Plug the unit into a mains power outlet socket.
5. Always preheat the Waffle maker for 5 minutes before baking. The “Red” indicator will turn ON when the unit is connected to mains power.
6. When the unit has reached the proper temperature, the “Green” indicator light on top cover and the “Blue” indicator light on lower cover will turn ON, indicating the product is ready for use.

**WARNING: The Cooking Plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black area of the Handle.**

7. Use the Handle to lift the Upper Cooking Plate. Place waffle batter on the Bottom Cooking Plate, using wooden or plastic heat-resistant utensils.

**CAUTION: Do not use metal utensils on this product, as they will scratch and damage the non-stick coating on the plates.**

8. Do not over-fill the plate. Fill batter just enough to cover the lower grid.
9. Close the lid.
10. Rotate the appliance by the handle to make sure that both sides are baked evenly. The waffle will be ready around 3-5 minutes.
11. Open the appliance and check whether the waffle is sufficiently done. If you prefer a darker color, continue baking until the desired color is achieved.
12. When the food is cooked as desired, lift the Handle to open the Top Cooking Plate, then remove the waffle using scratch resistant utensil. If more cooking is needed, close the Cooking Plates to conserve heat.

**NOTES:**

- The cooking time will differ depending on the type and thickness of the food.
  - Food should be cooked thoroughly before consumption.
13. Turn OFF the product by disconnecting the power supply cord plug from the mains power outlet socket.
  14. When the unit has completely cooled, clean and dry it according to “Cleaning and Maintenance” section below.

## **Cleaning and Maintenance**

- Before cleaning, unplug and wait for the appliance and the cooking plates to cool down completely.
- Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enters the cooling slots.
- Do not clean the inside or outside of product with any abrasive scouring pad or steel wool as this will damage the finish.
- Do not immerse the product in water or any other liquid.
- Wash the drip tray in hot soapy water, rinse and dry thoroughly.
- Ensure that the appliance has completely cooled and is clean and completely dry before storing. Close the lid and lock the handles together.
- Place the appliance in its original packaging and store in a clean, dry place out of the reach of children.

## **Recipes**

### **Ingredients**

500g	all - purpose flour
50g	sugar
400ml	milk
5	eggs
100g	butter
5g	baking powder

## **DIRECTIONS**

Beat the eggs in a mixer until well mixed. Add remaining ingredients and mix until smooth. Leave the mixture for at least half an hour.

Preheat the waffle maker. Use a pastry brush to lightly grease coat the non-stick coating of the baking plates with oil or butter. Pour mixture into waffle maker.

Cook until golden brown.

## **TECHNICAL DATA**

Voltage: 220-240V~ 50-60Hz

Power: 800-950W

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>