

JURASSIC PARK LOOP TRACK SET

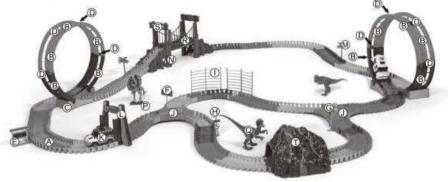



| PARTS | | |
|-------------|--------|-----------------------|
| A ARR X 358 | H S X1 | O 😂 X 1 PLASTIC STONE |
| B X 10 | J X 2 | P X 1 |
| C X 4 | J X 2 | Q X3 |
| D X 12 | K X2 | R X 2 |
| E X1 | L X 1 | S X 2 |
| F X1 | N X 4 | T X 1 |
| G X1 | M X 2 | |

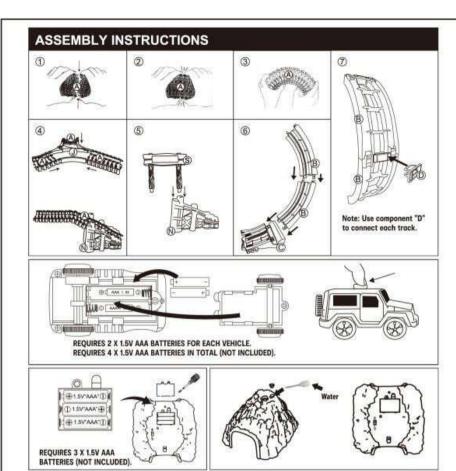

⚠ WARNING: CHOKING HAZARD

SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD. WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

ADULT ASSEMBLY AND SUPERVISION REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.



43-620-432