

# Assembly Instructions

## K:43626427 | T:71751764 Hanging Wardrobe Storage System








**ATTENTION:** DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.FOR INDOOR USE ONLY.

**CARE INSTRUCTION:** WIPE CLEAN WITH A SOFT DRY OR DAMP CLOTH. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. CHECK AND TIGHTEN ALL PARTS REGULARLY.








**WARNING:** DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT DRAG THE PRODUCT. USE ONLY ON A FLAT SURFACE. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED.THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

**MAXIMUM TOTAL LOADING WEIGHT: 10KG FOR CLOTHES RAIL AND 10KG FOR EACH SHELF**


### 1 Hardware list

	a	M4x12mm	4pcs		e	2pcs
	b	M6x20mm	20pcs		f	2pcs
	c	M6x12mm	8pc		h	4pcs
	d	M4x35mm	2pcs			


### 2

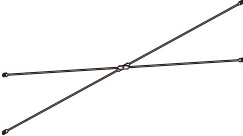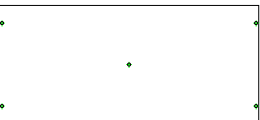		
A 2PCS	B 2PCS	C 2PCS
		
D 1PC	E 1PC	F 2PCS
		
G 1PC		

### 3

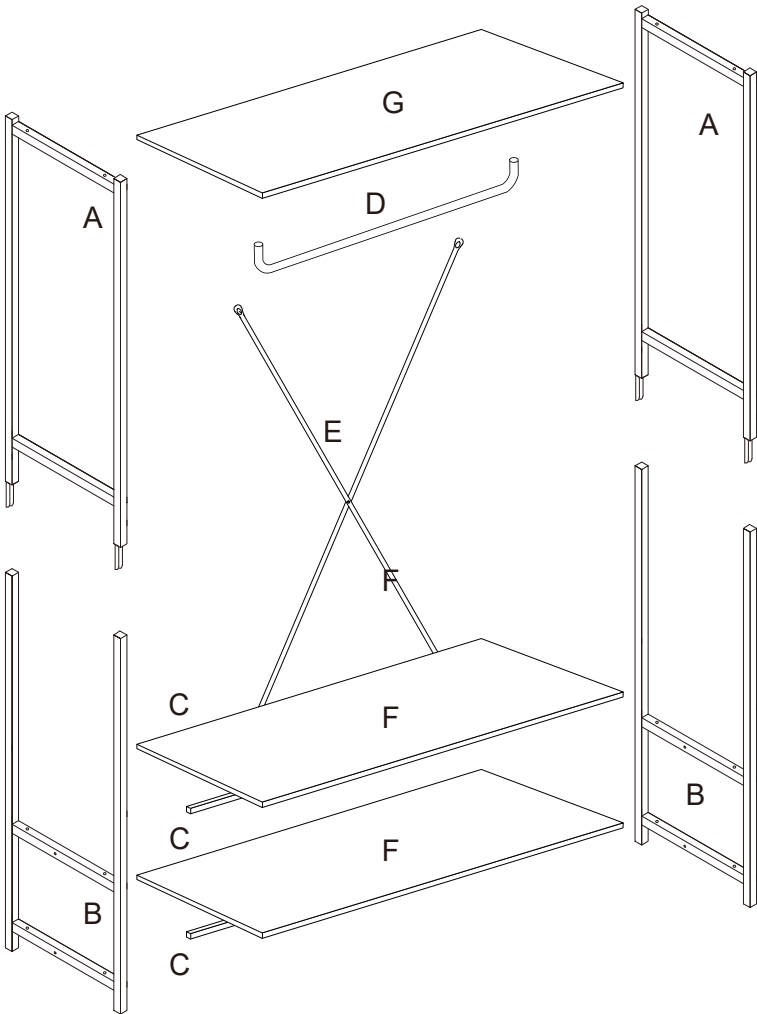


STEP 1

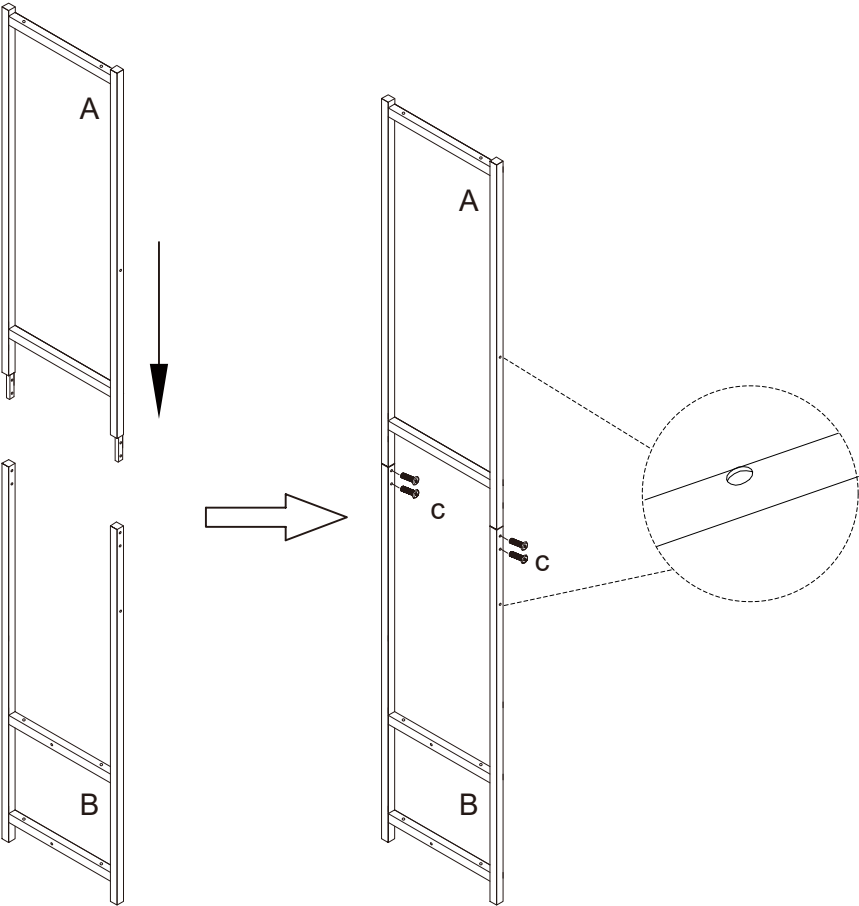


 c x 8


X 2

STEP 2

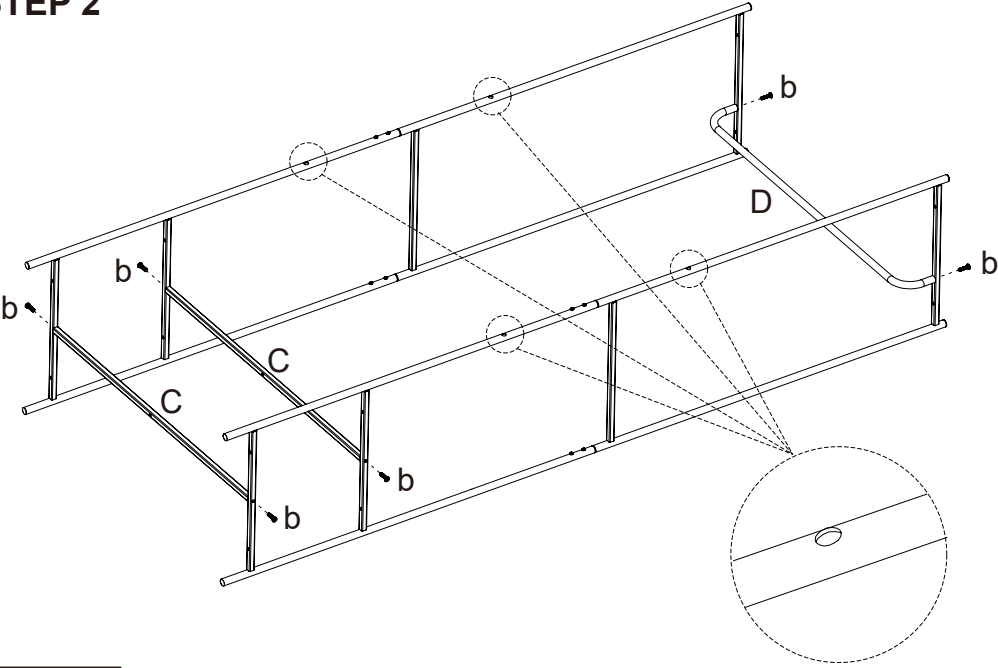


 b x 6


STEP 3

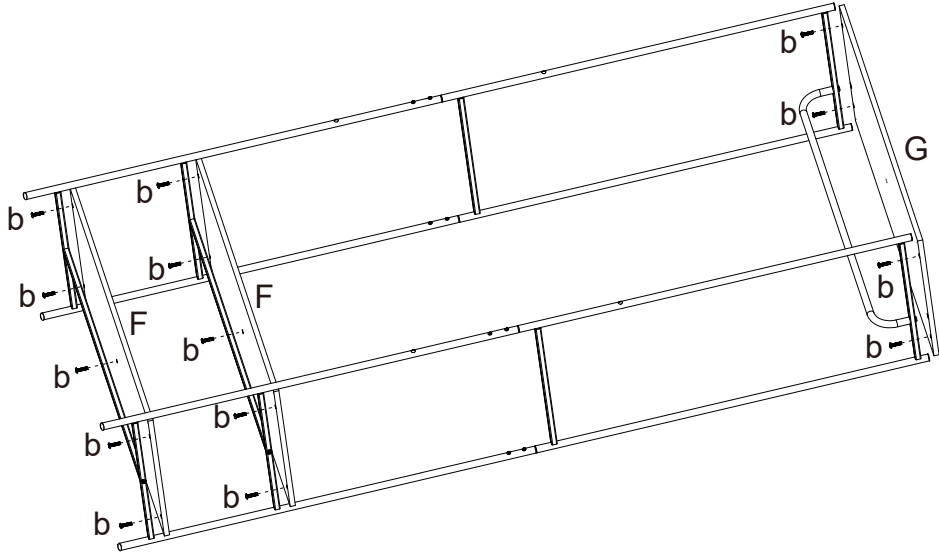




 b x 14

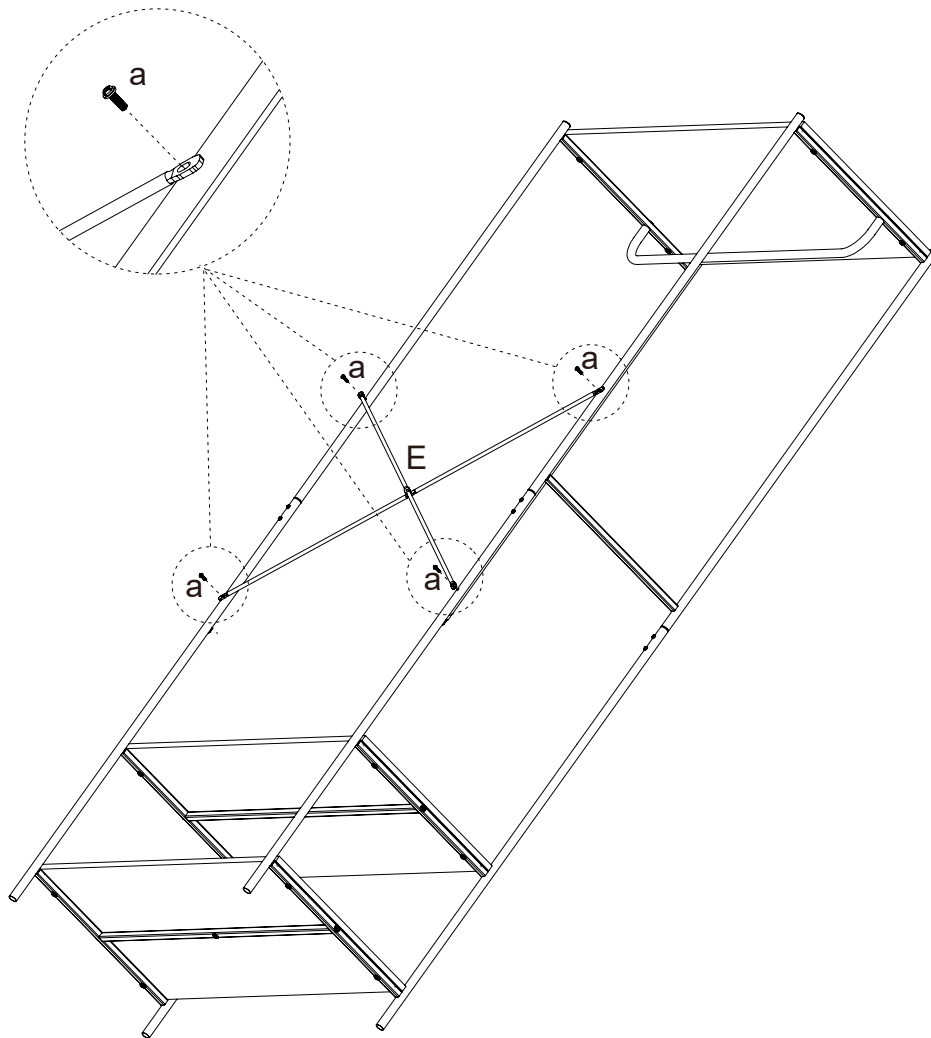
## STEP 4




 a x 4

## STEP 5

	f x 2
	d x 2
	e x 2

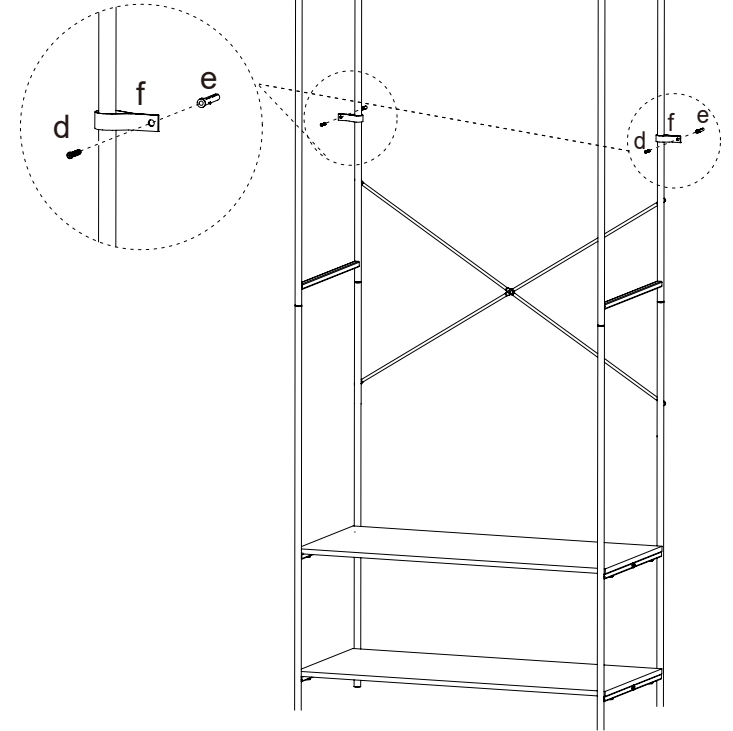

## ⚠ WARNING

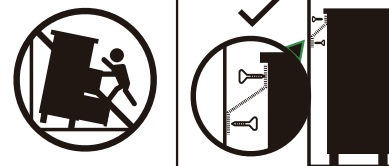

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV  
on this furniture



This is a permanent label. Do not remove!

### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).




WARNING: PLEASE SECURE  
YOUR FURNITURE WITH  
THE SUPPLIED WALL FIXING.  
SCAN THE CODE FOR  
MORE INFORMATION.



h -  x4

It can be used in combination with **5 Shelf Wardrobe Storage System**. The combination method is as follows:

TYPE 1

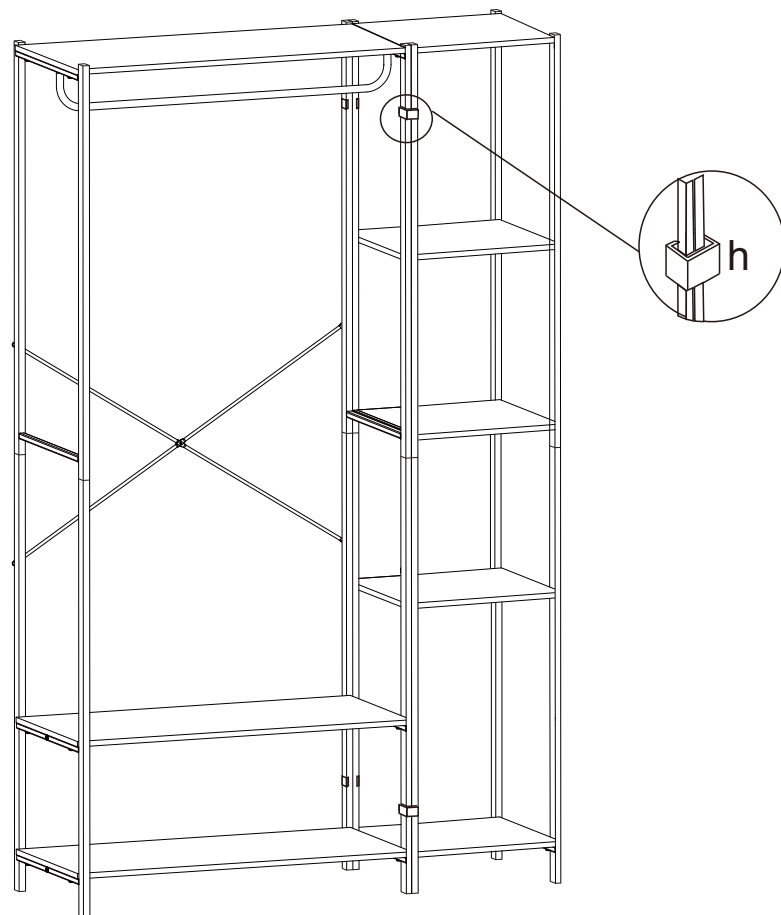

TYPE 2

