


anko

Sadie 6 Drawer Chest

Instruction Manual

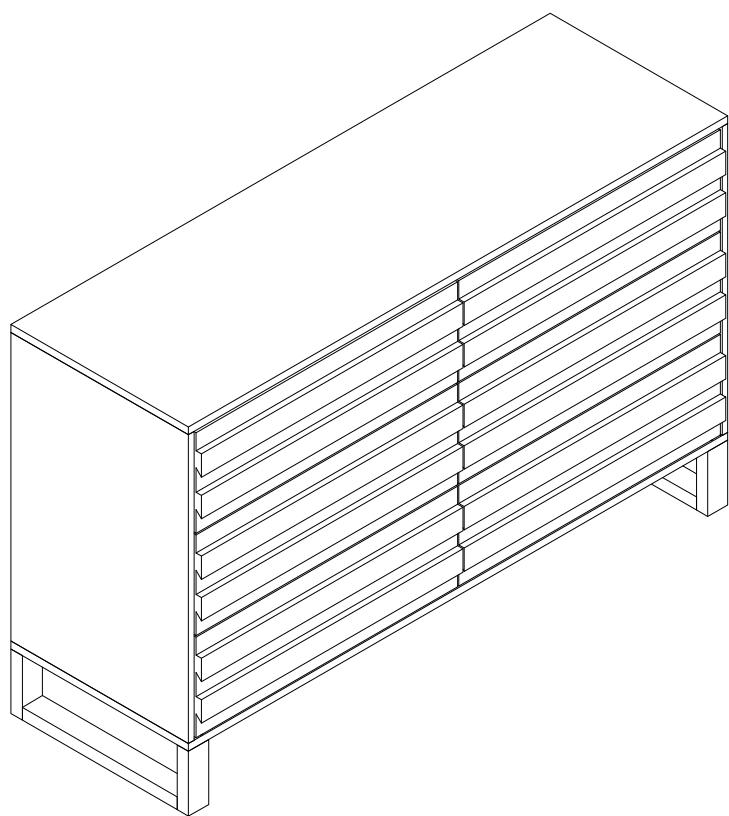

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Assembly Instructions

43633777 Sadie 6 Drawer Chest

WARNING:

DO NOT STAND, SIT OR LEAN ON THIS UNIT.

DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE.

KEEP AWAY FROM CHILDREN AND BABIES.

ADULT ASSEMBLY REQUIRED.

USE ONLY ON A FLAT SURFACE.

DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS:

TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE.

WIPE CLEAN WITH A SOFT DAMP CLOTH.

NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS.

CHECK AND TIGHTEN ALL PARTS REGULARLY.

KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT.

STORE IN A DRY PLACE.

FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD:

25KG FOR TOP PANEL, 7KG FOR EACH DRAWER.



1 Hardware List

A		M6x35mm	48pcs	B		Ø15x9mm	52pcs	C		Ø6x30mm	38pcs	D		M4x35mm	46pcs
E			8pcs	F		M3x16mm	8pcs	G			2pcs	H		M4x12mm	2pcs
I			1pcs	J		M7x40mm	9pcs	K		M3.5x12mm	84pcs	L		M7x70mm	2pcs
M		Ø6x50mm	2pcs	N			2pcs	O		Ø8x30mm	1pcs	CL			6pcs
CR			6pcs	DL			6pcs	DR			6pcs				


2 Parts List

① 1PC	② 1PC	③ 1PC	④ 1PC
⑤ 1PC	⑥ 4PCS	⑦ 1PC	⑧ 1PC
⑨ 2PCS	⑩ 2PCS	⑪ 2PCS	⑫ 1PC
⑬ 3PCS	⑭ 3PCS	⑮ 6PCS	⑯ 6PCS
⑰ 6PCS	⑱ 6PCS	⑲ 1PC	⑳ 6PCS

PANEL LAYOUT

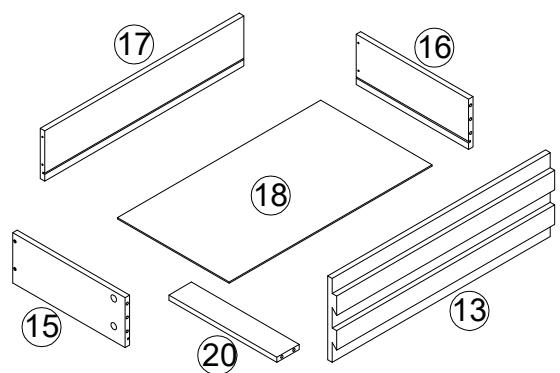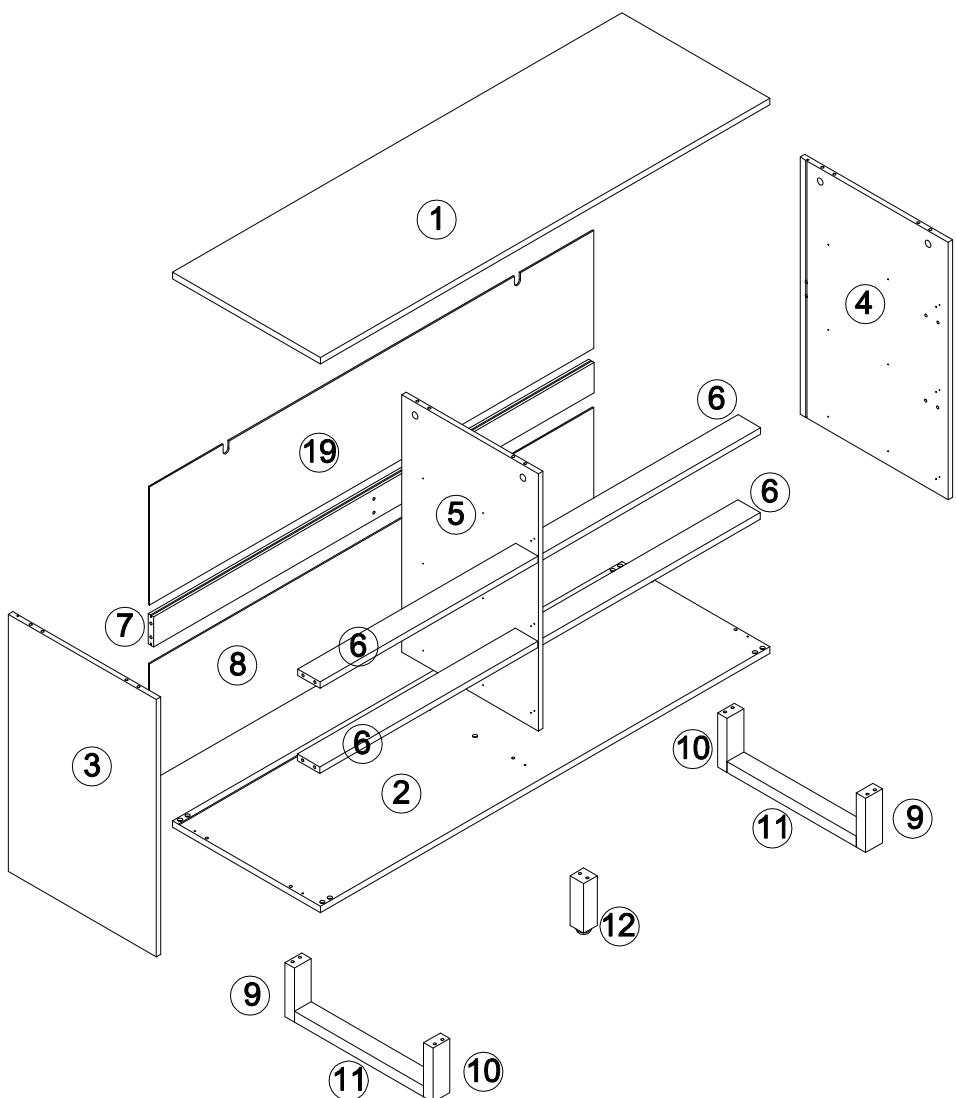


x 3

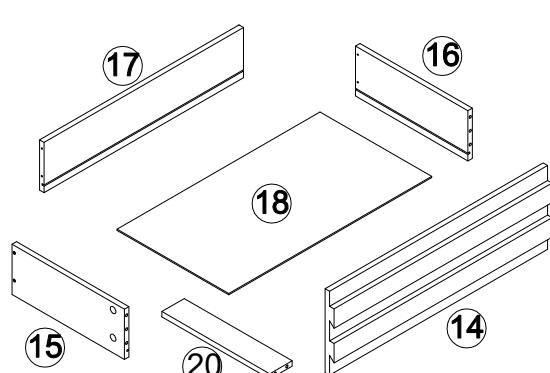


x 3

STEP 1

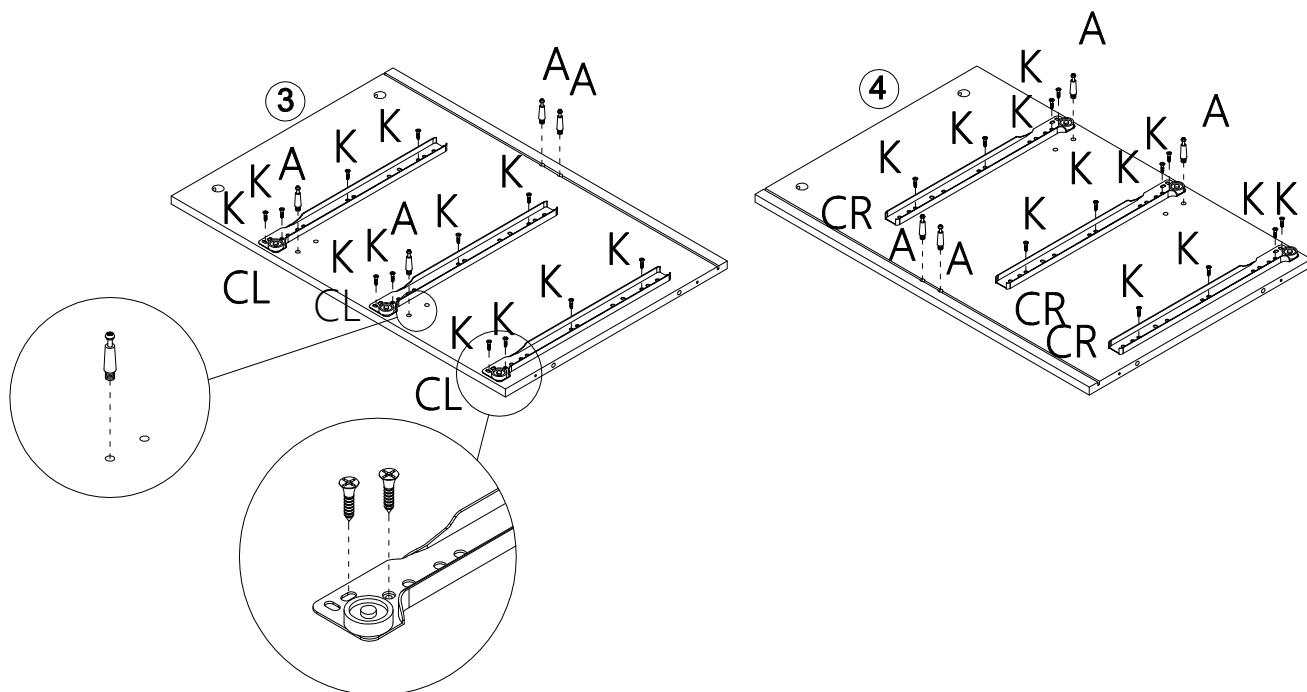


A - x 8 | K - x 24 | CL - x 3 | CR - x 3

STEP 2

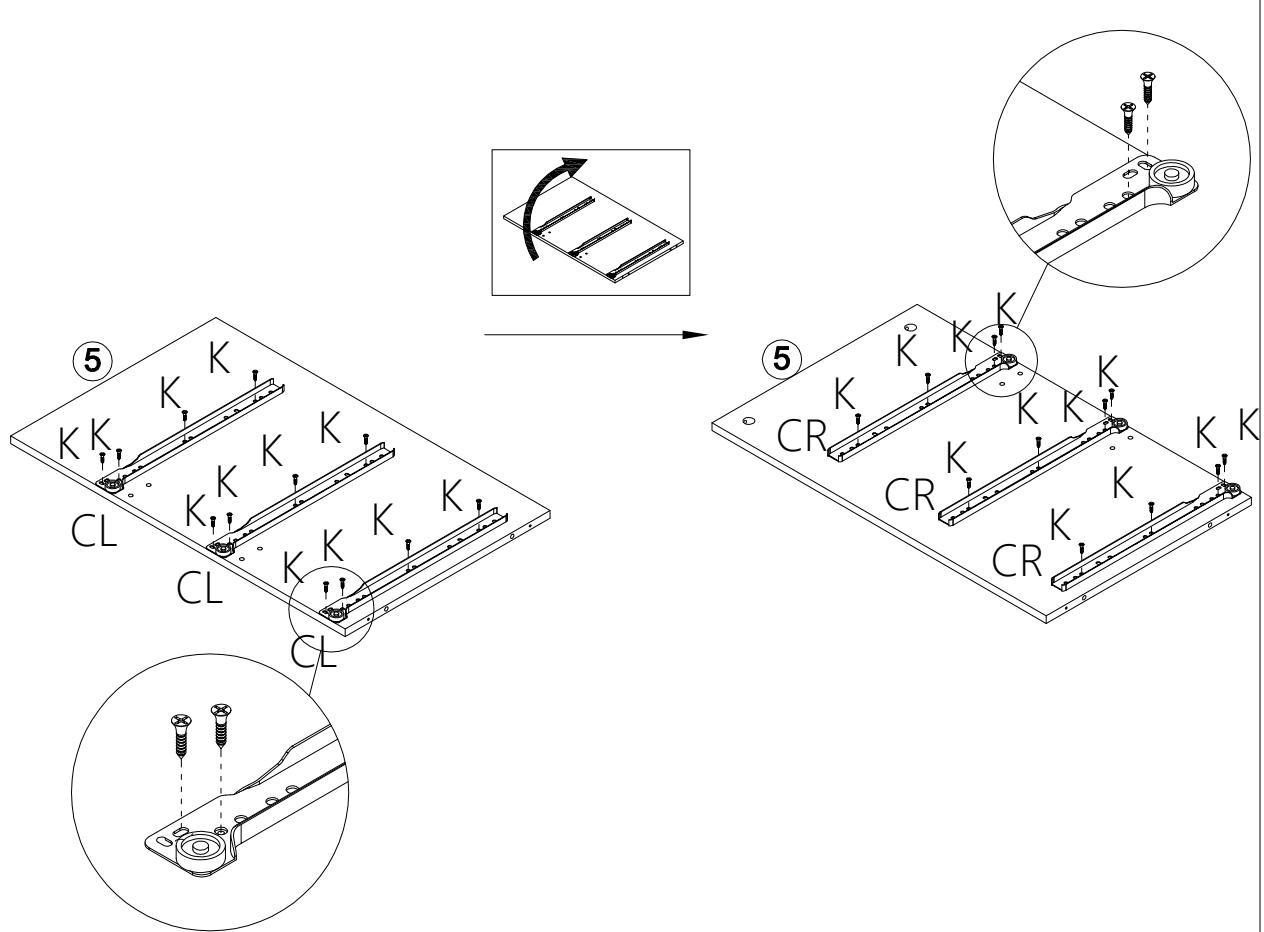


K - x 24 | CL - x 3 | CR - x 3

STEP 3

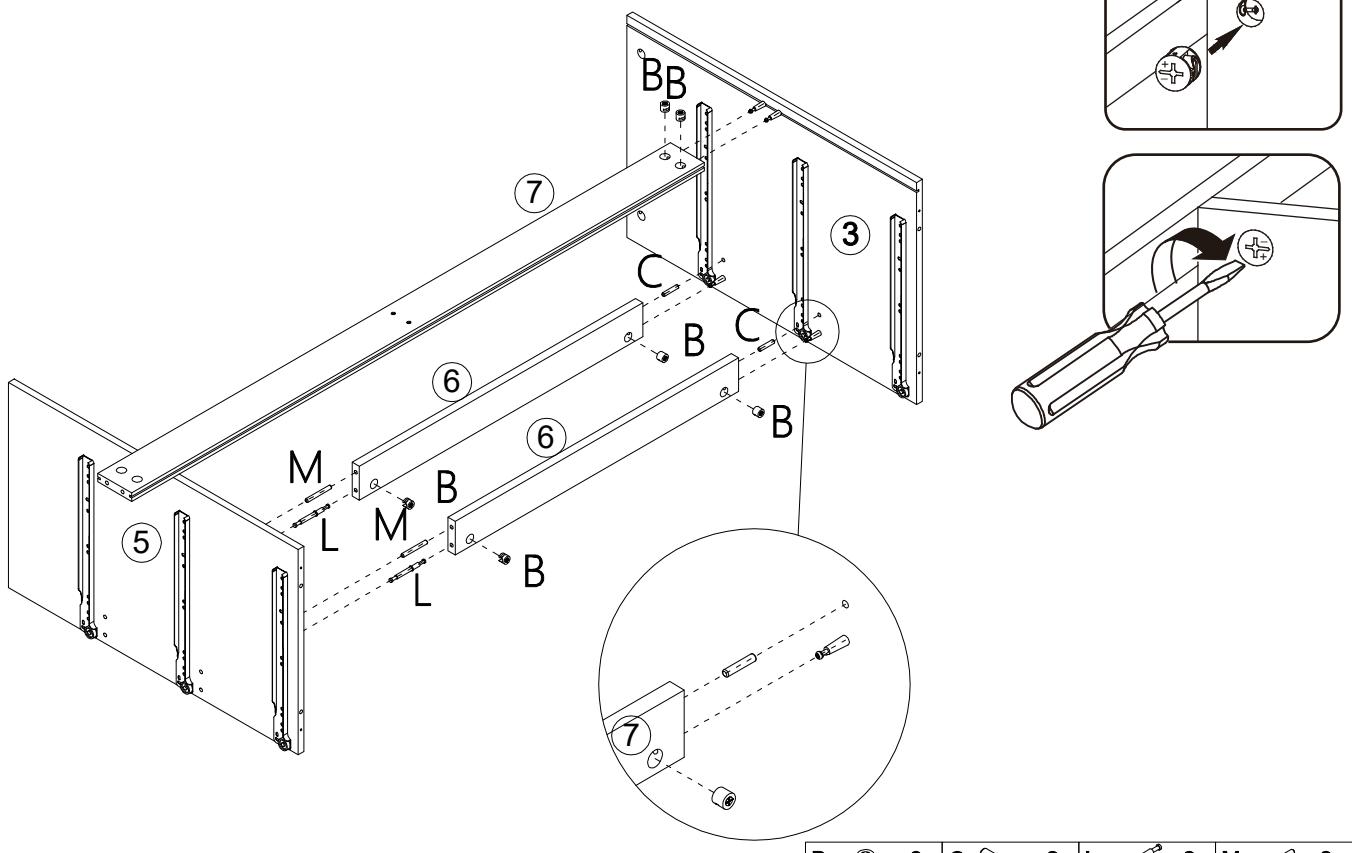


STEP 4

Place the drawer back panel under the middle panel to prop it up.

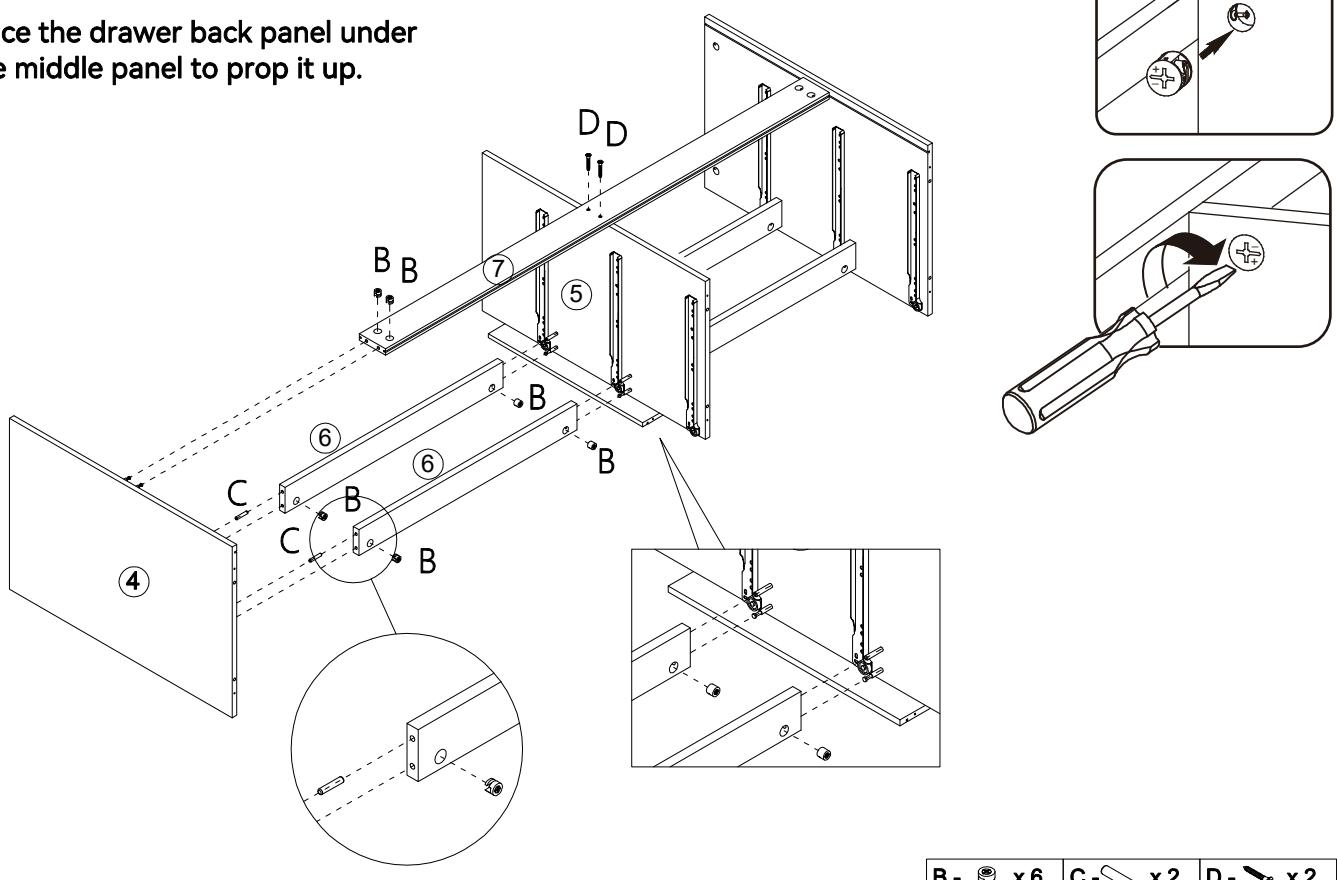


STEP 5

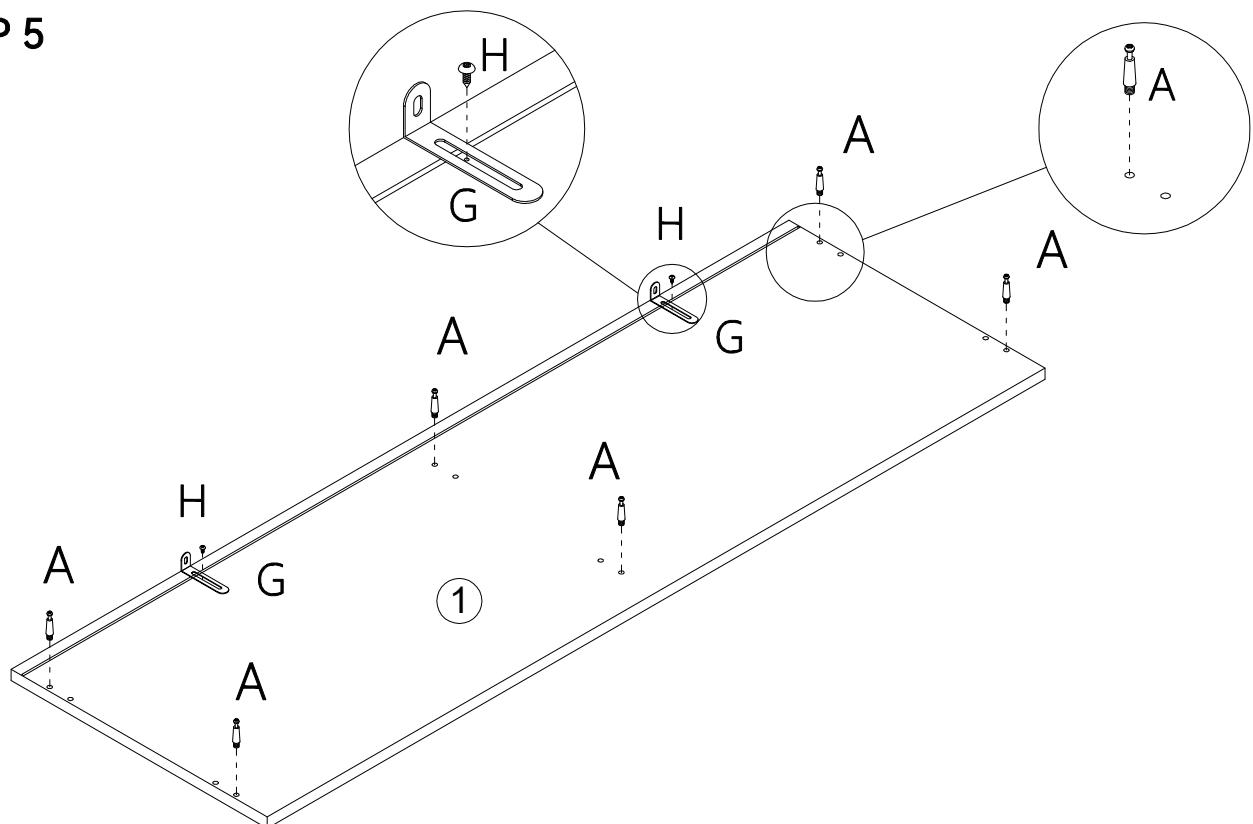


A - x 6 G - x 2 H - x 2

STEP 6

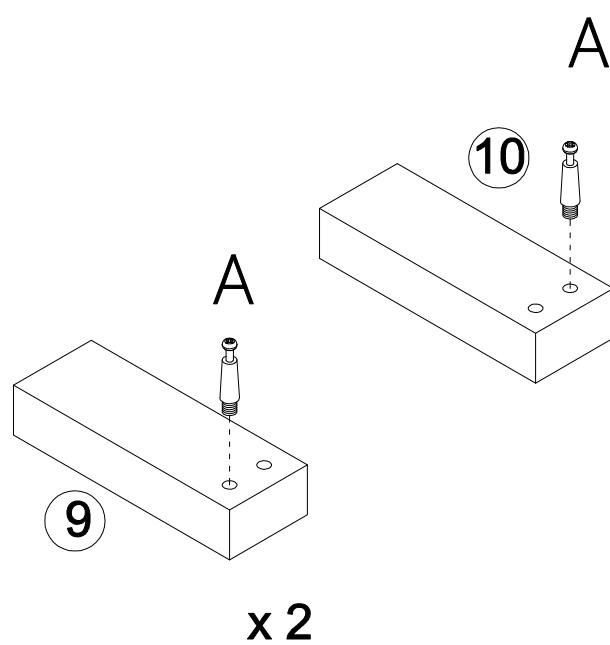


A - x 4

STEP 7

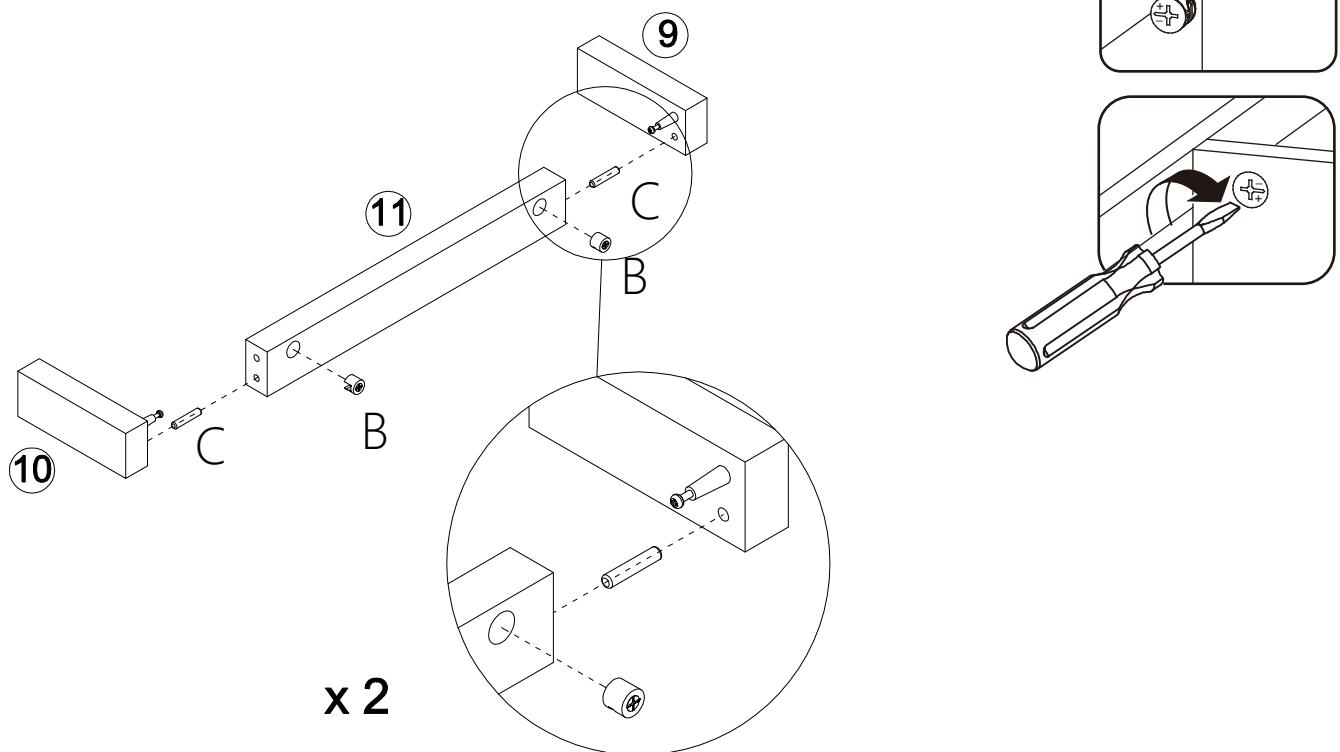


B - x 4 C - x 4

STEP 8

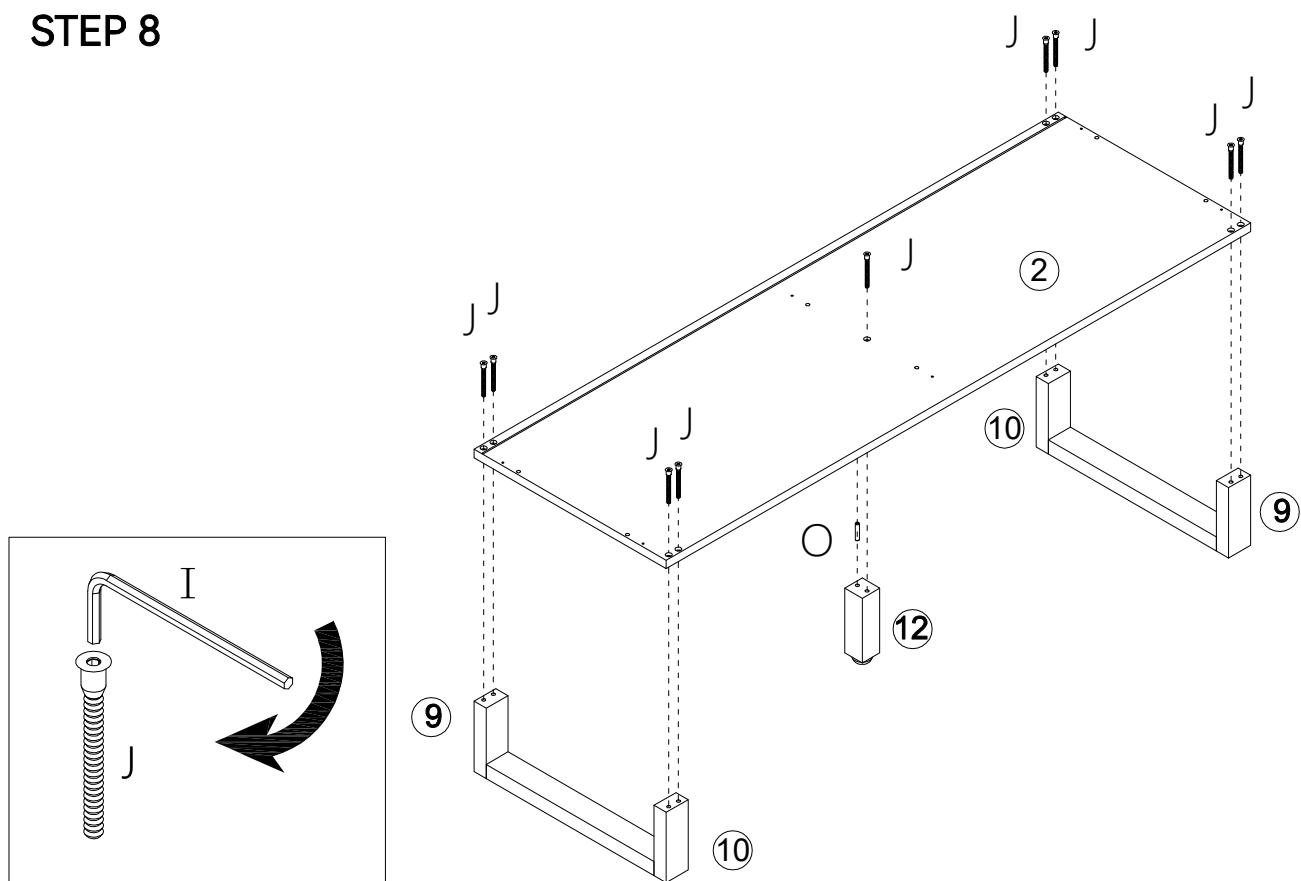


I - x 1 J - x 9 O - x 1

STEP 9

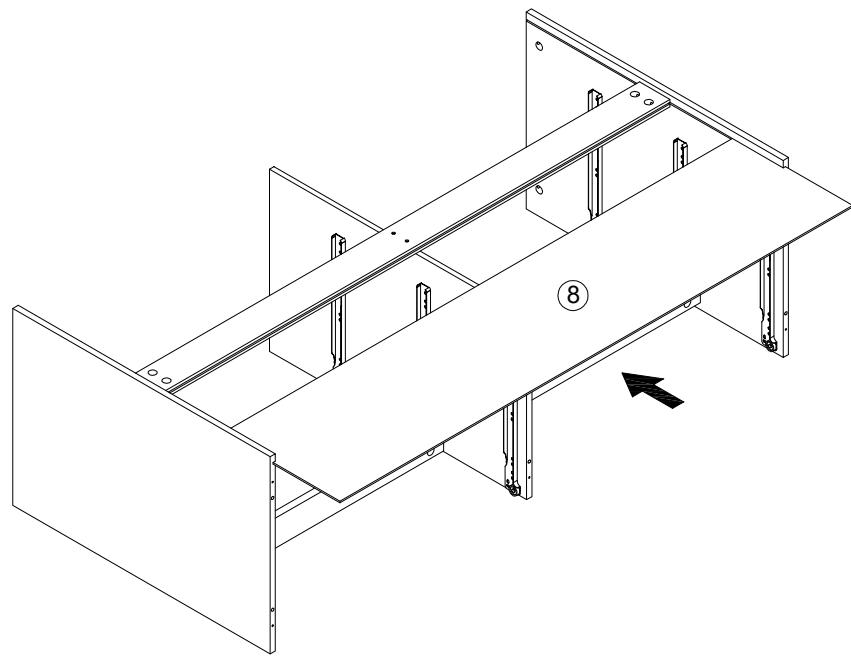


STEP 10

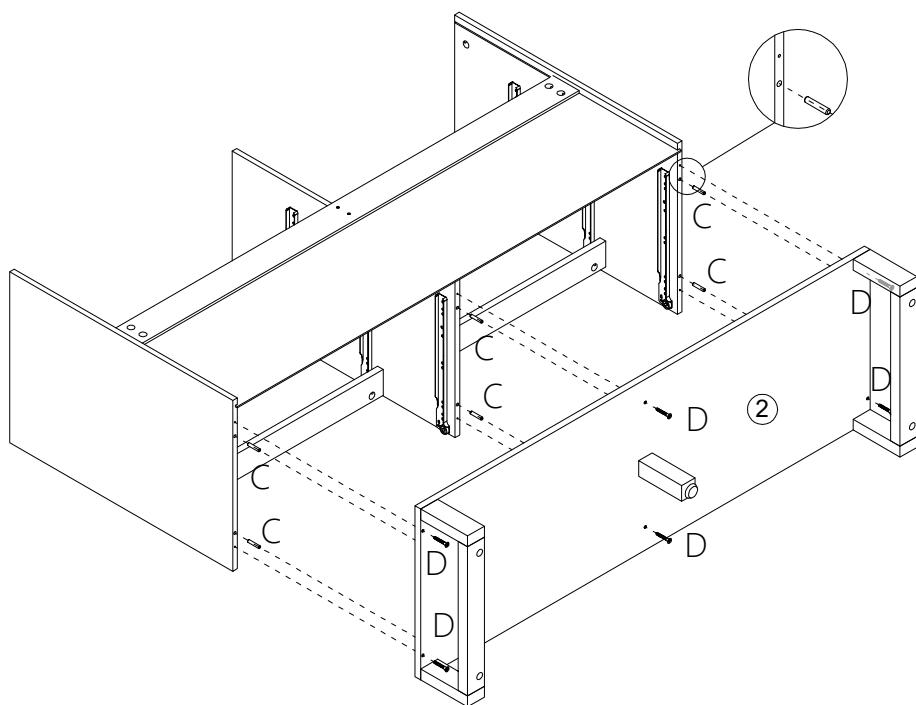


C - x 6 D - x 6

STEP 11

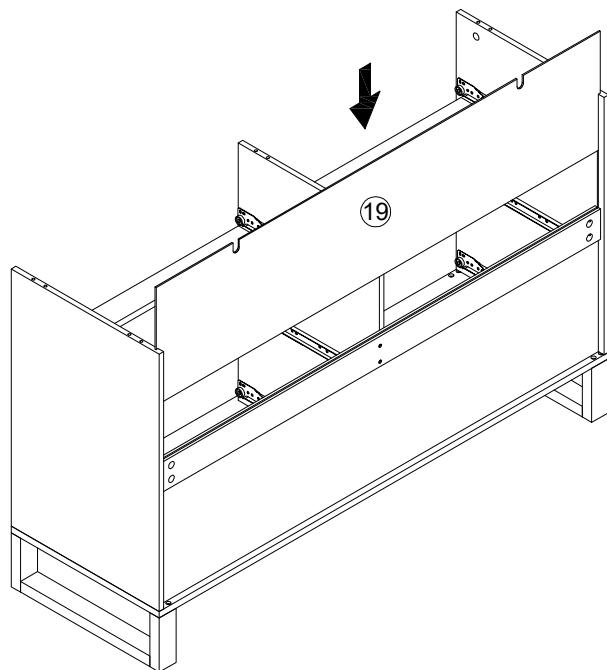


STEP 12

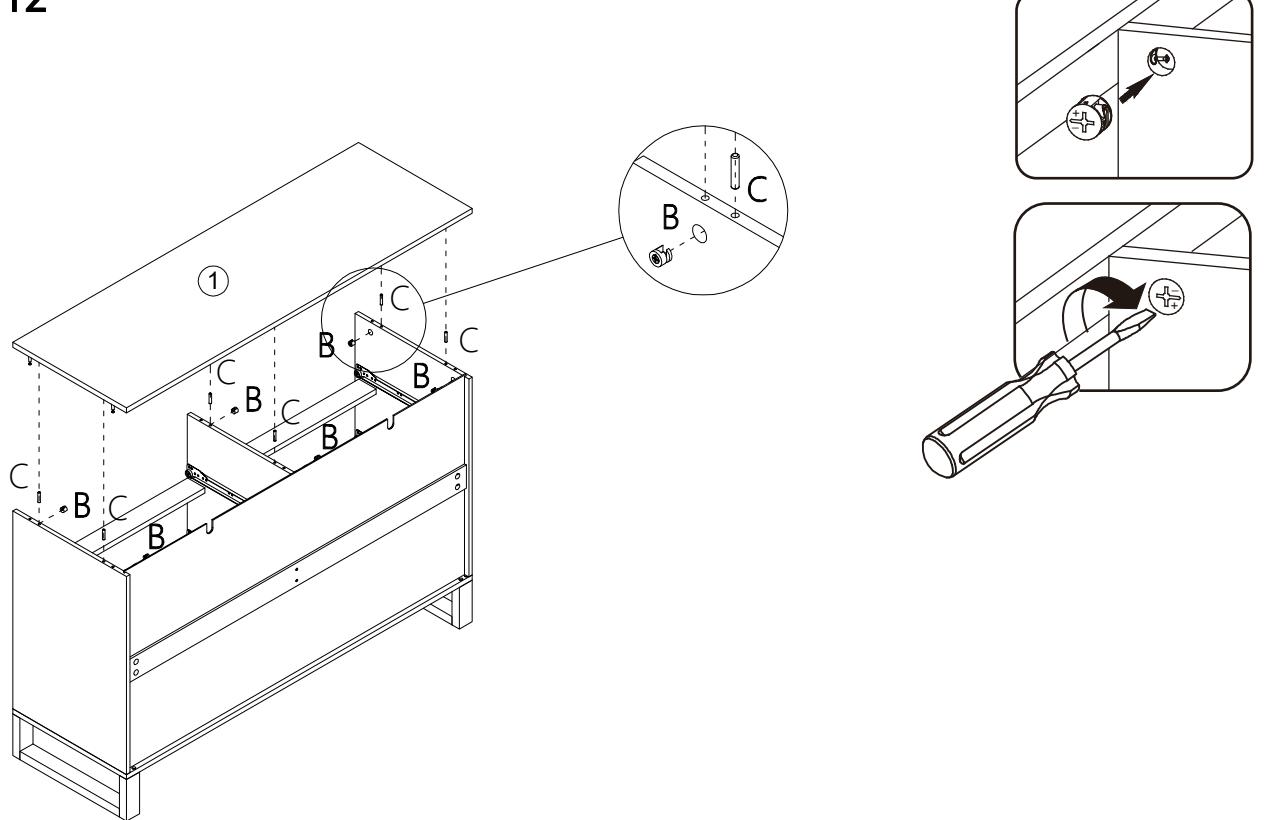


B - x 6 C - x 6

STEP 13

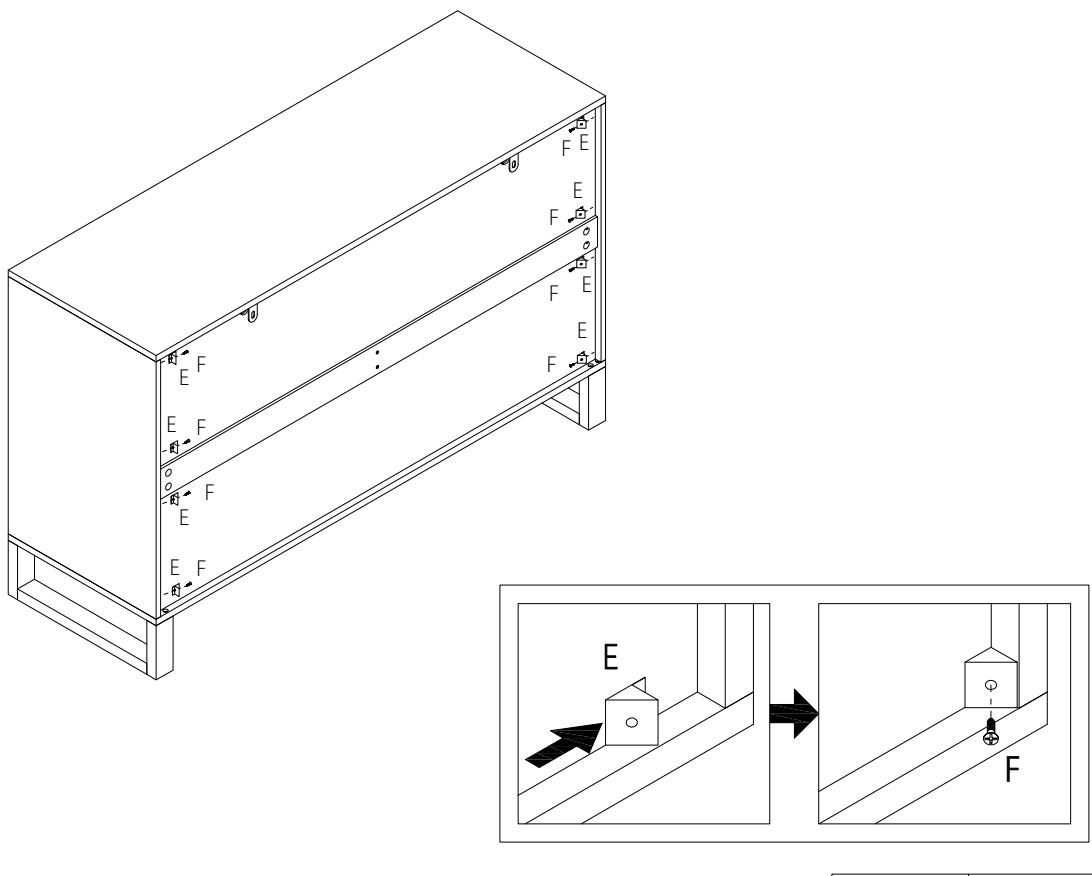

E - x8 F - x8


STEP 14

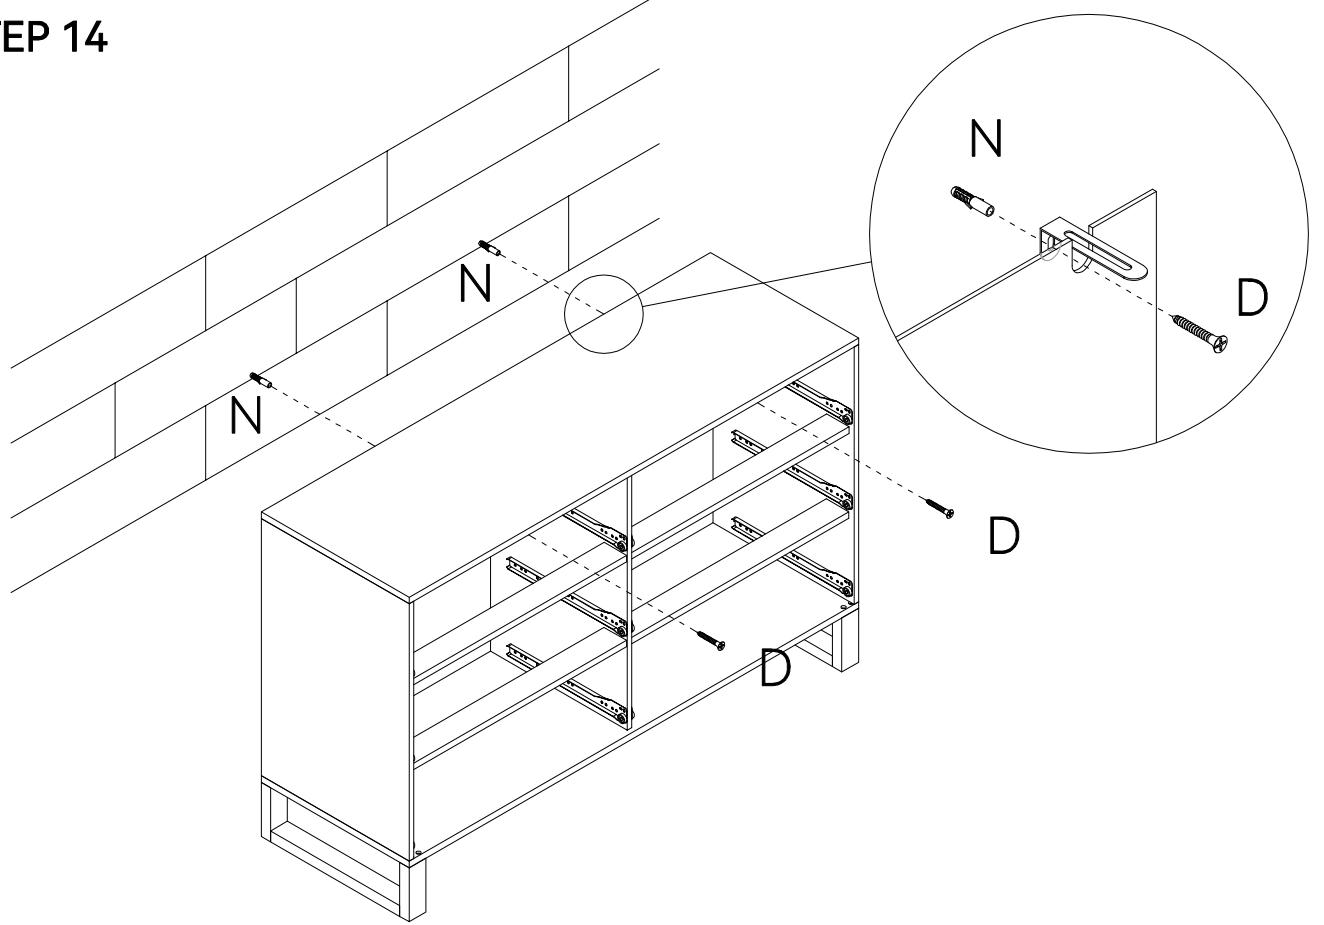

D - x2 N - x2


STEP 15

DRAWERS X 3

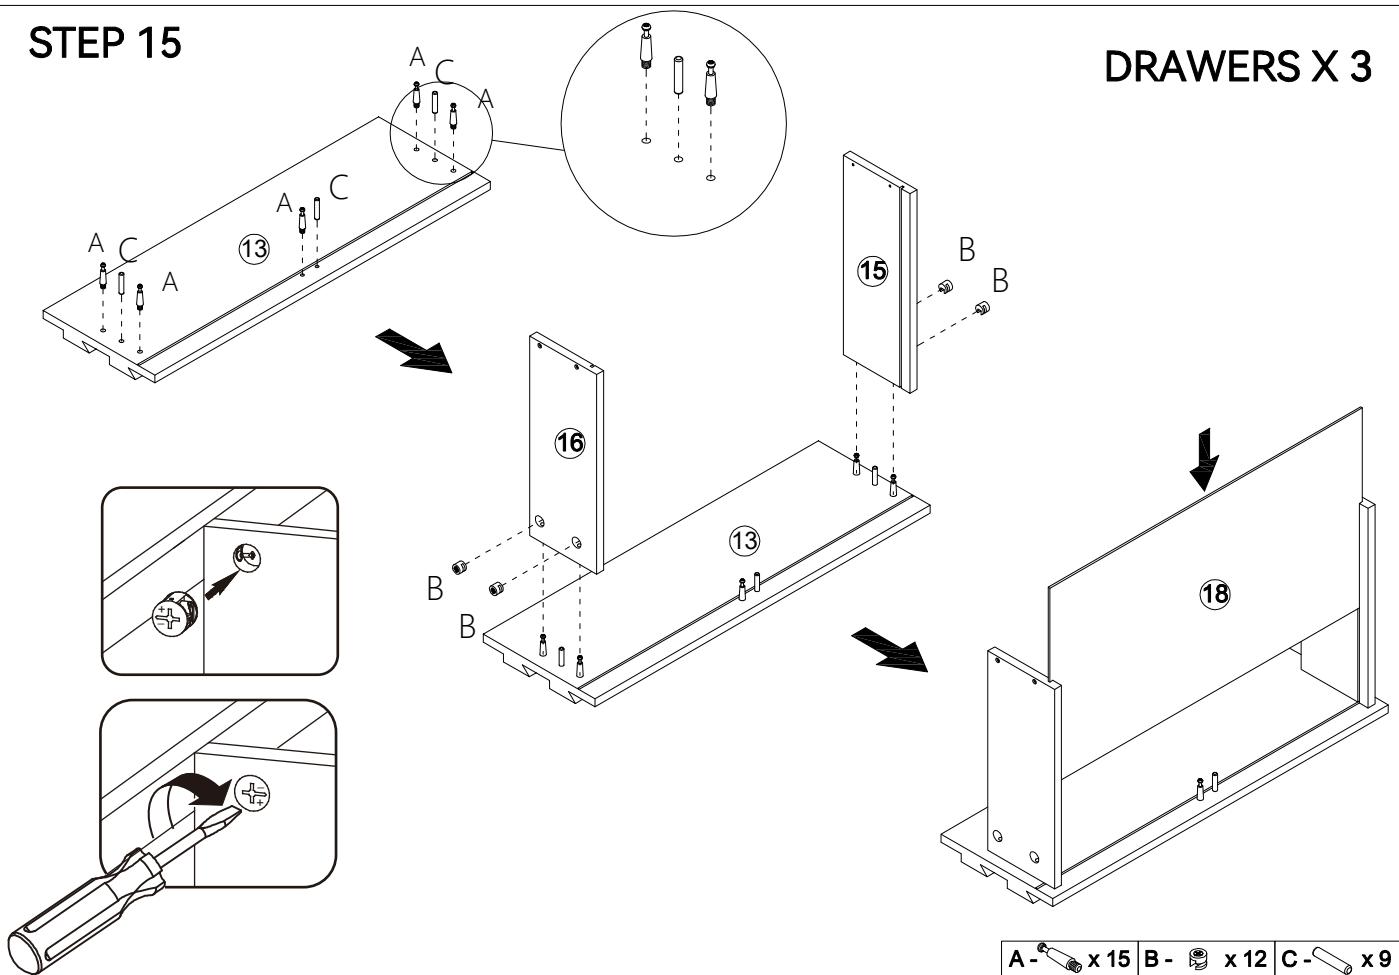


STEP 16

DRAWERS X 3

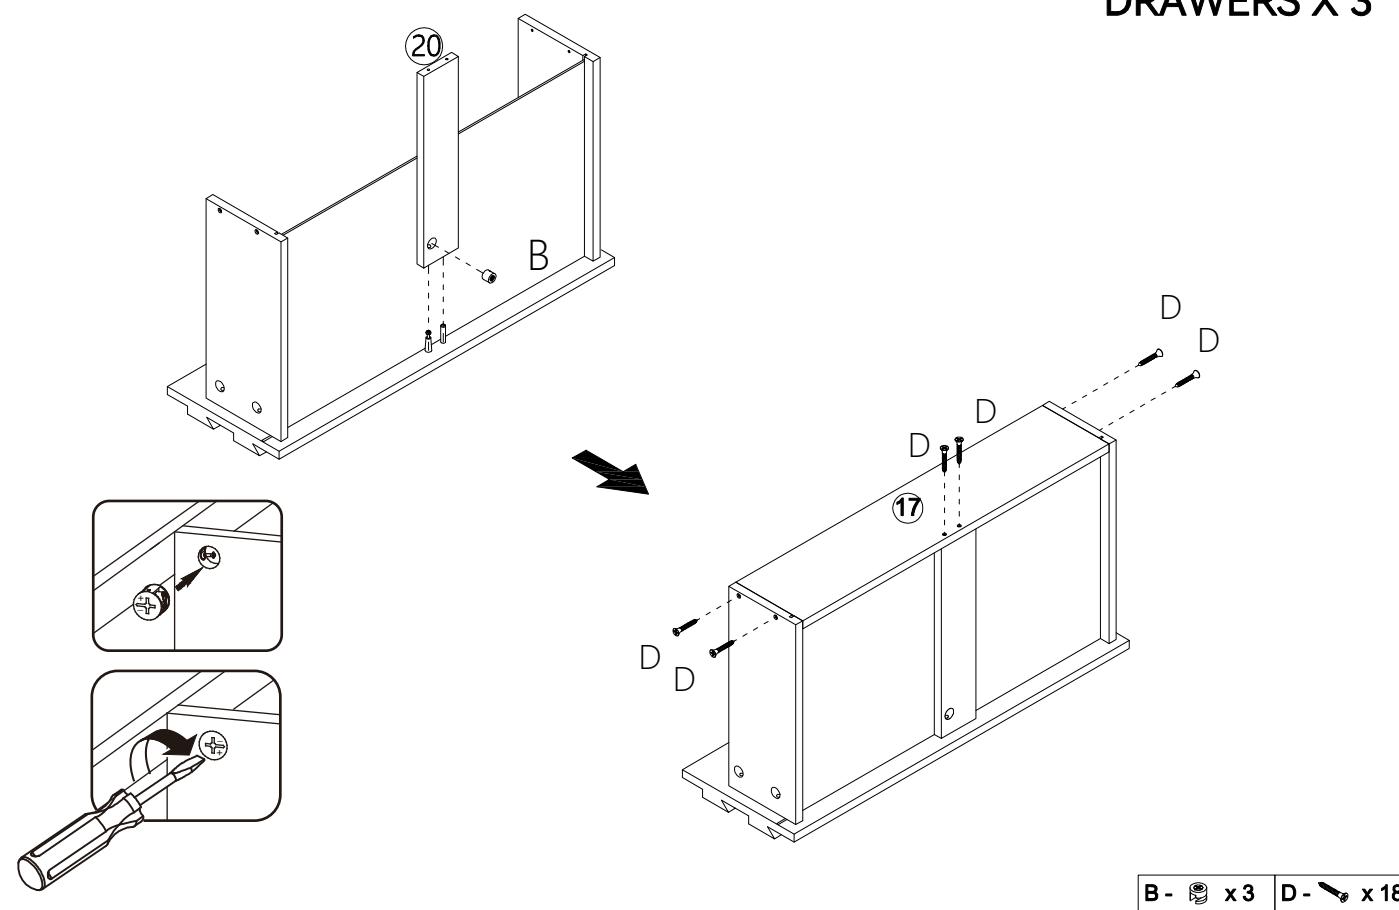

STEP 17


DRAWERS X 3

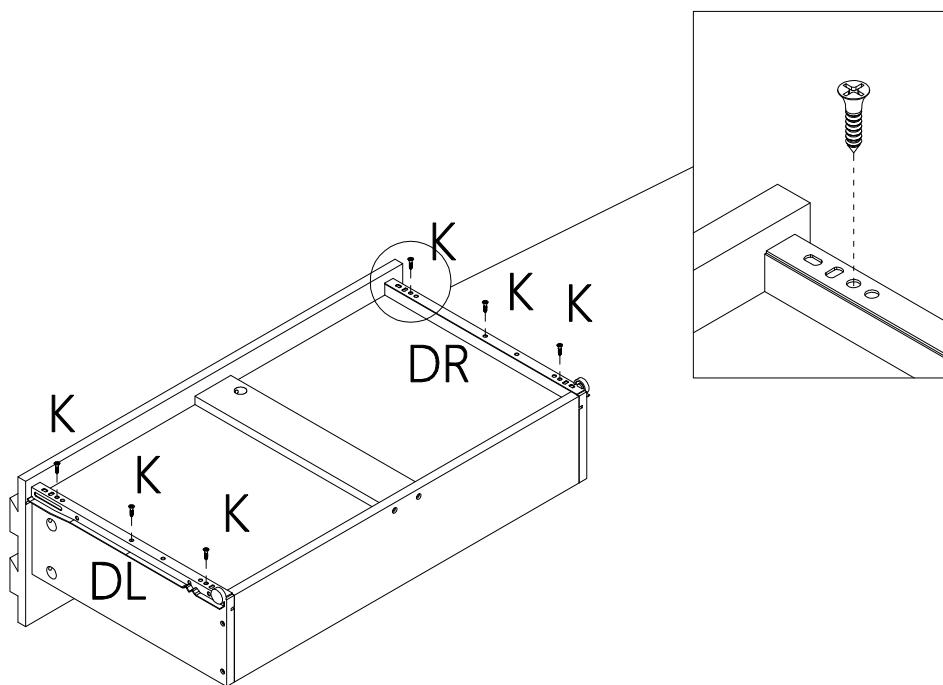

K - x 18 | DL - x 3 | DR - x 3

STEP 18


DRAWERS X 3

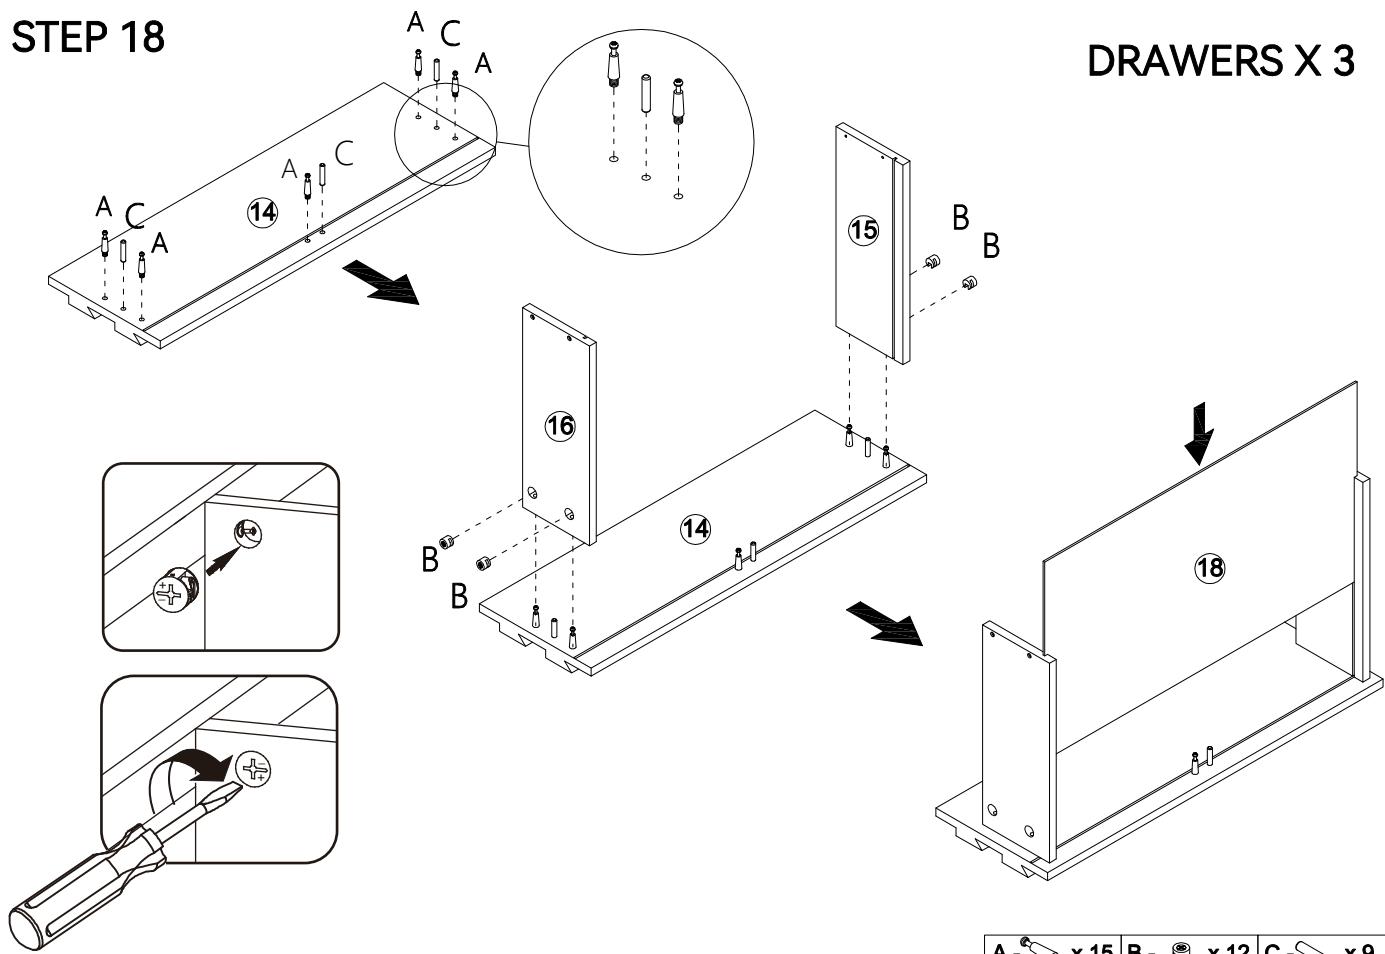

A - x 15 | B - x 12 | C - x 9


STEP 19

DRAWERS X 3

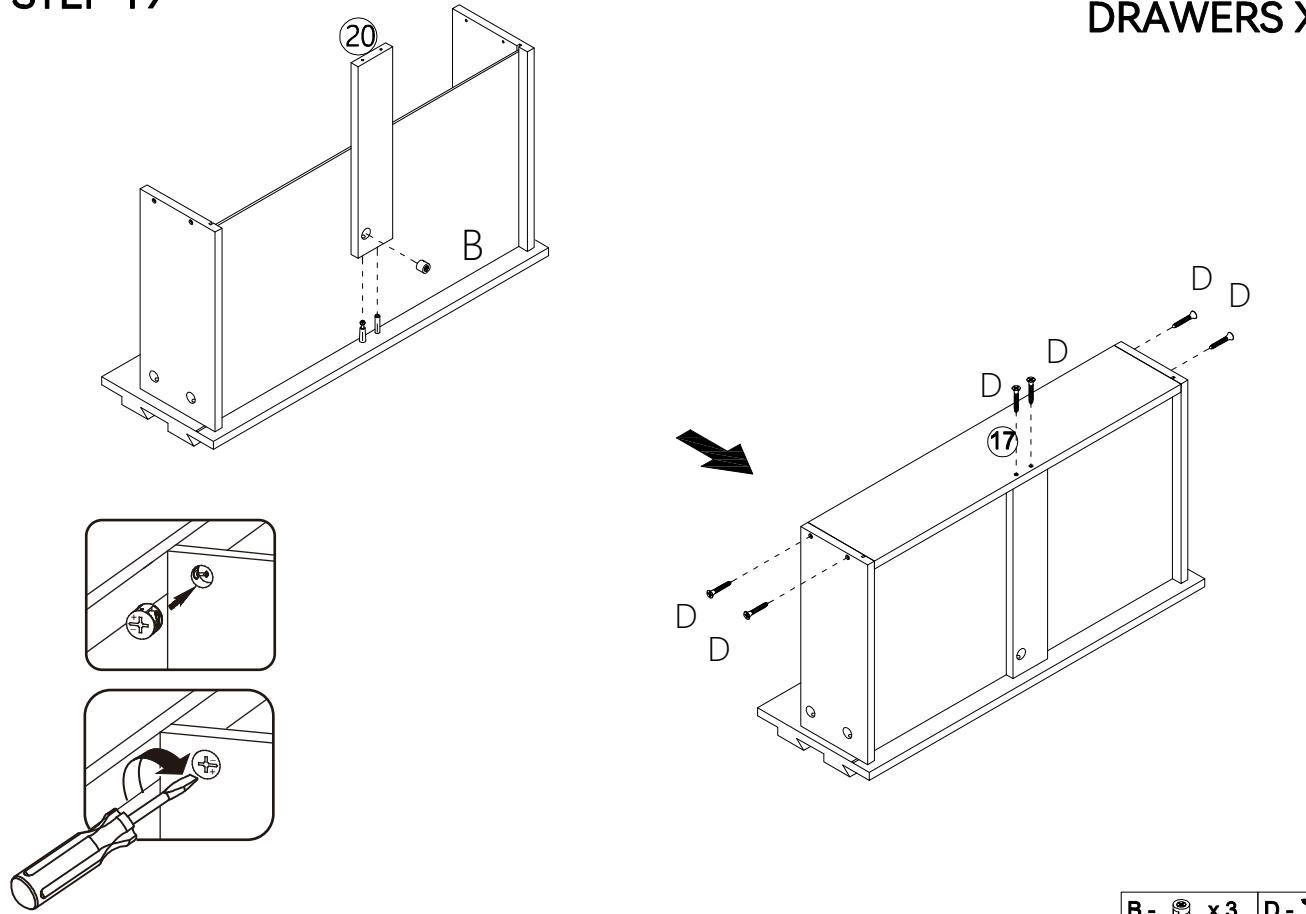


STEP 20

DRAWERS X 3

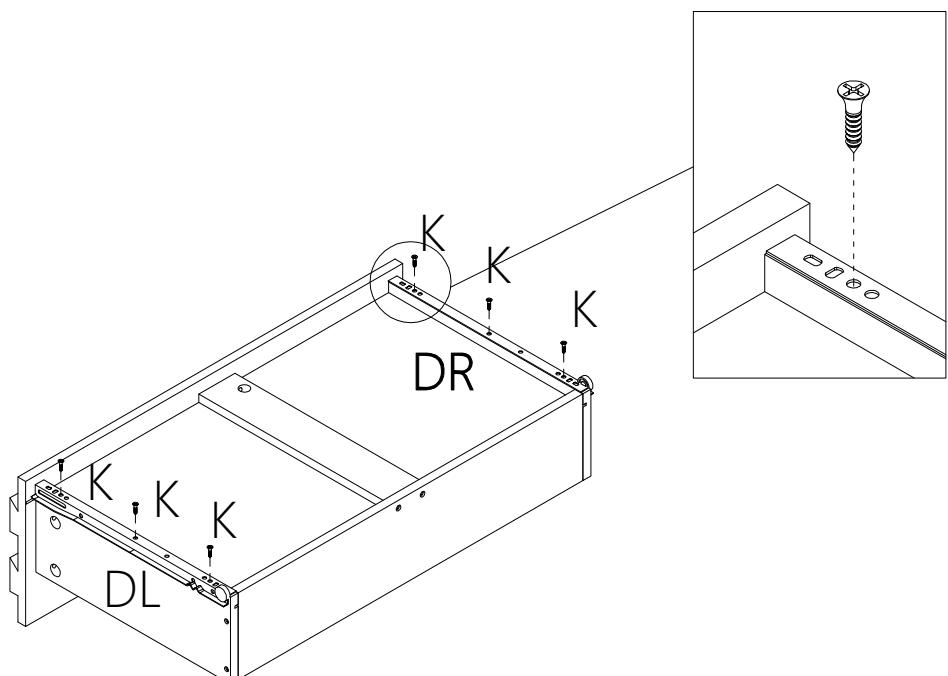

STEP 21

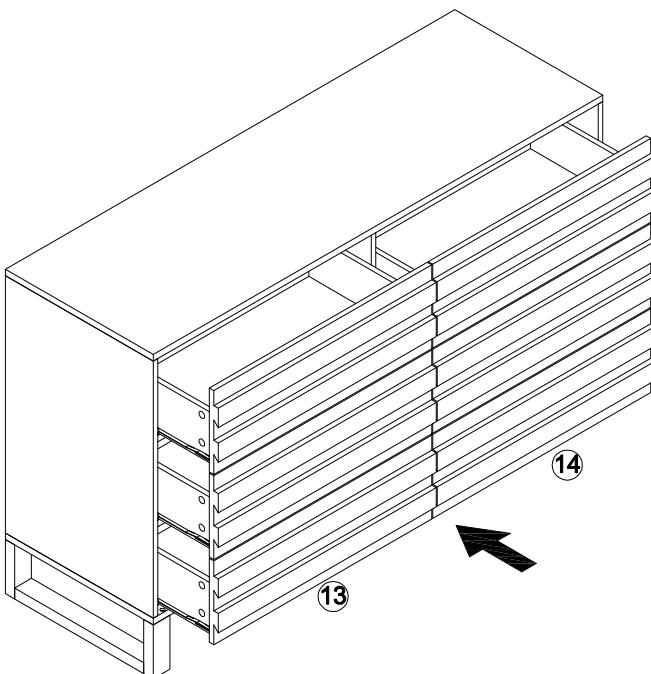

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- **Do not place unanchored televisions on furniture .**



CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

