

Assembly Instructions










K:43633975 | T:71778174 LUNA 2 DRAWER BEDSIDE TABLE WHITE










 
CARE INSTRUCTION: Wipe clean with a soft dry or damp cloth. Keep away from water and direct sunlight. For indoor and domestic use. Check and tighten all parts regularly.


WARNINGS: Do not stand or sit on the unit. Do not lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.

 MAXIMUM TOTAL LOADING WEIGHT: 15KGS FOR TOP PANEL, 6KGS FOR EACH DRAWER, 27KGS IN TOTAL.

 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
 
Hardware list

	A		30PCS
	B		30PCS
	C	6X30mm	16PCS
	D	3X12mm	20PCS
	F	4X25mm	16PCS
	G		2PCS
	H		4PCS
	I	3X14mm	4PCS
	J		2PCS


 
	K		2PCS
	L		2PCS
	M		2PCS
	N	4X18mm	4PCS
	O		2PCS
	P	4X12mm	1PC
	Q	4X30mm	1PC
	R		1PC
	S		1PC
	T	6X20mm	8PCS


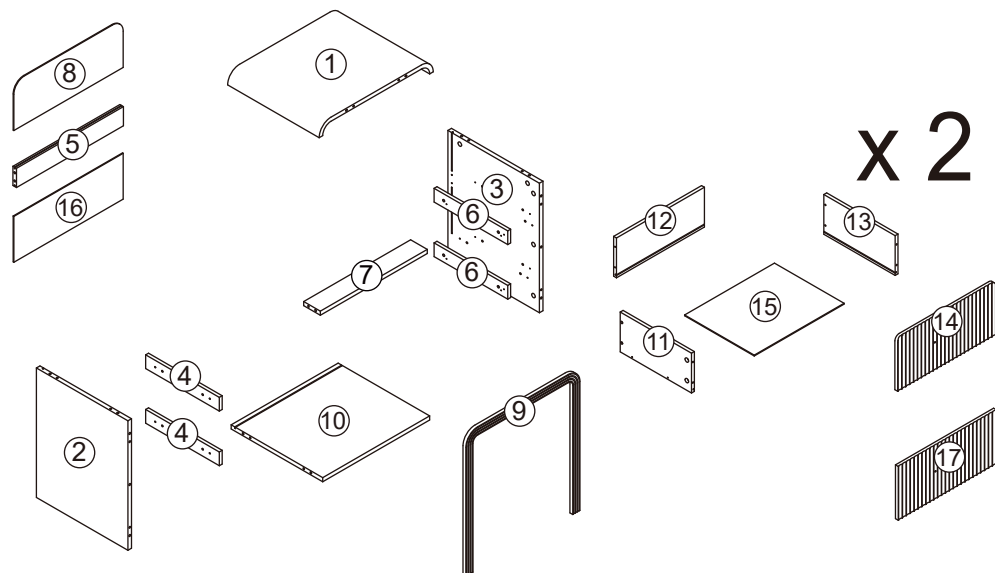


DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.

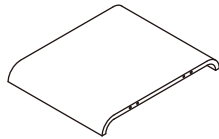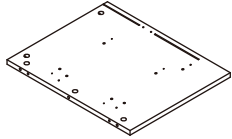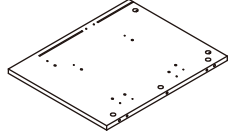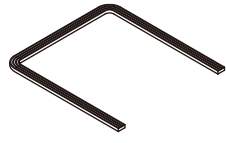		
① 1 PC	② 1 PC	③ 1 PC
		
④ 2 PCS	⑤ 1 PC	⑥ 2 PCS
		
⑦ 1 PC	⑧ 1 PC	⑨ 1 PC
		
⑩ 1 PC	⑪ 2 PCS	⑫ 2 PCS
		
⑬ 2 PCS	⑭ 1 PC	⑮ 2 PCS
		
⑯ 1 PC	⑰ 1 PC	



STEP 1

   X4  X4

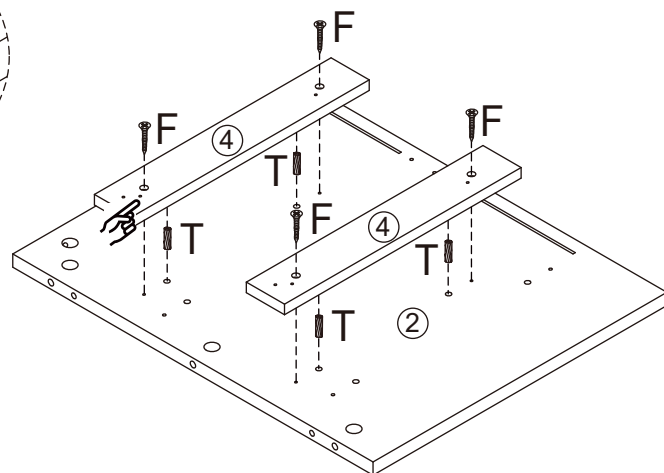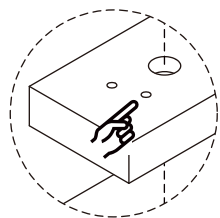


STEP 2

   X5  X2  X6  X2

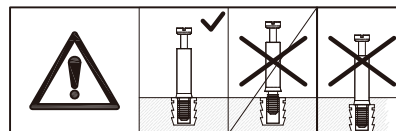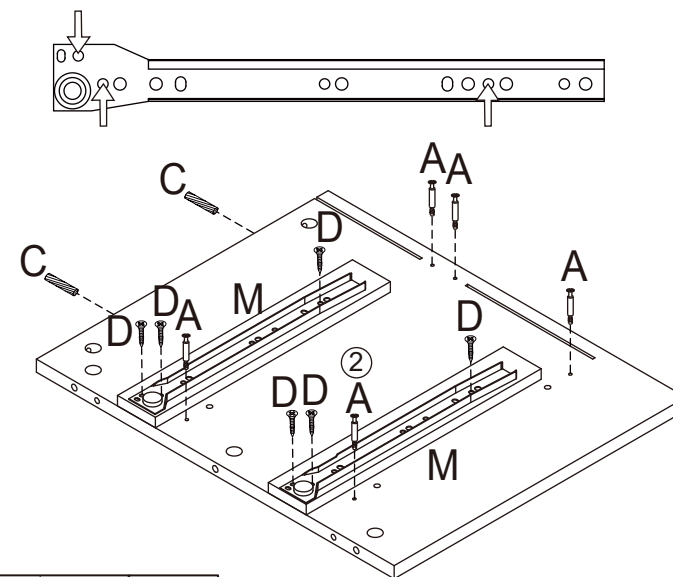



STEP 3

  X4

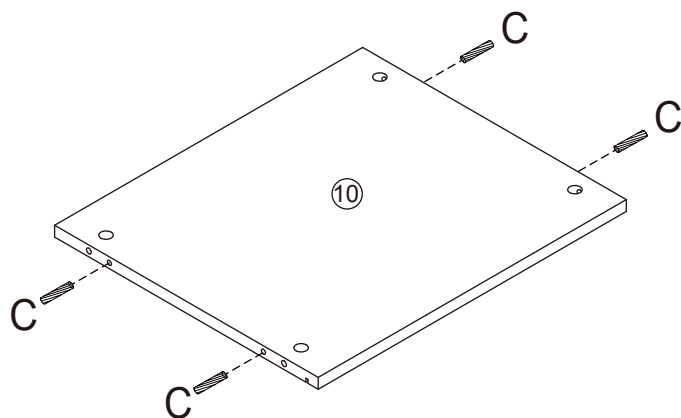


STEP 4

 
 
 X2

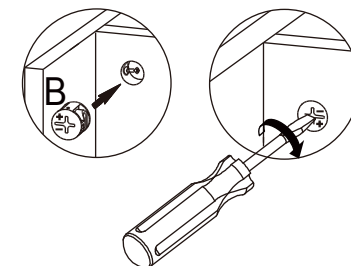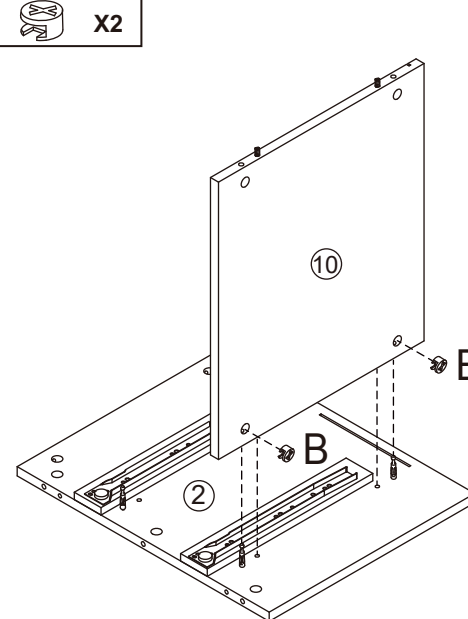

 
STEP 5

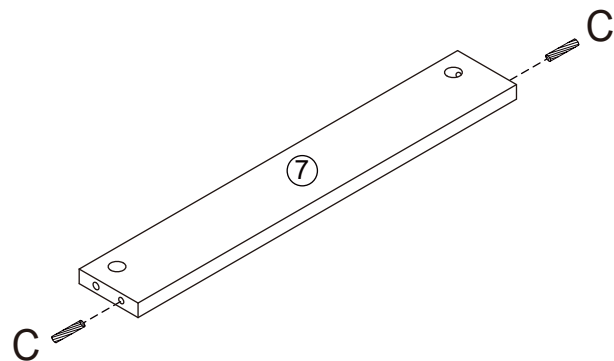

  
STEP 6

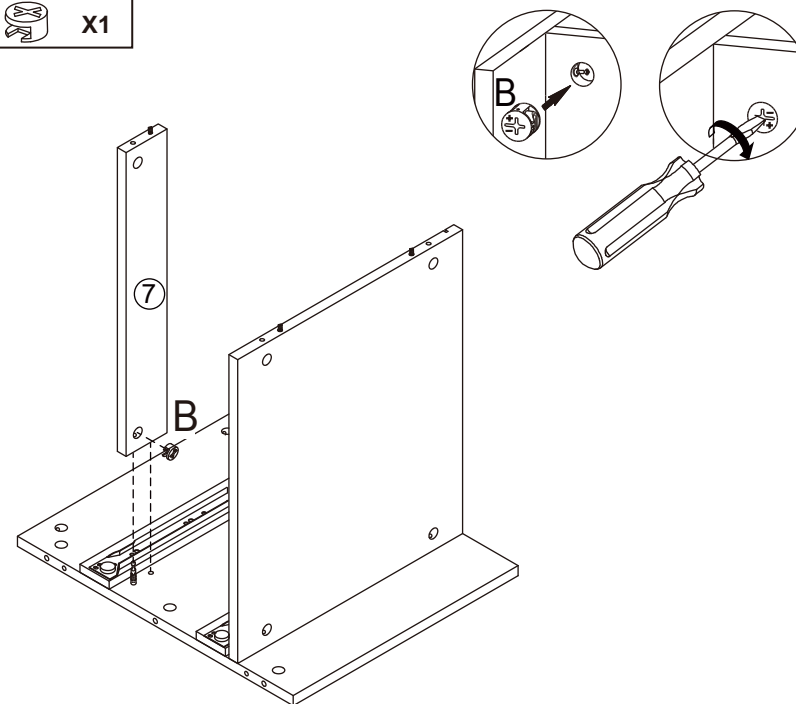

 STEP 7

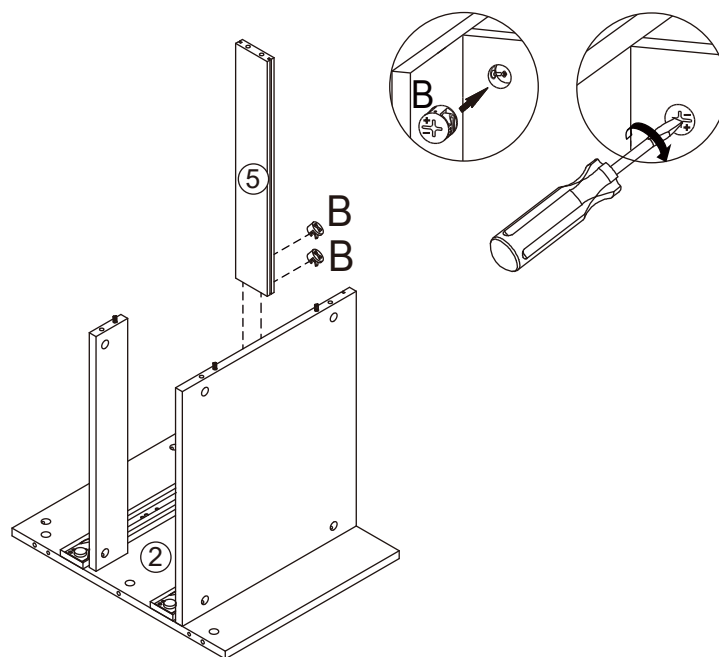


  STEP 8

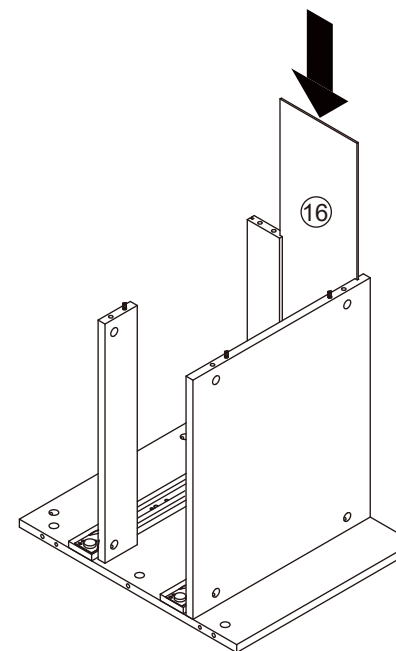



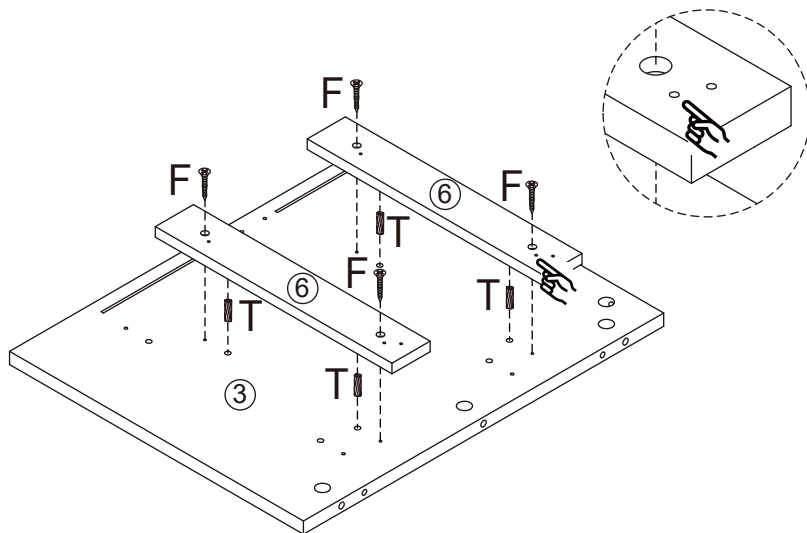



STEP 9

 X4  X4




STEP 10

   X5  X2  X6  X2

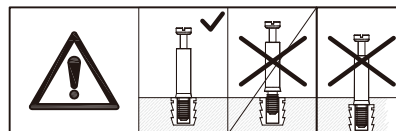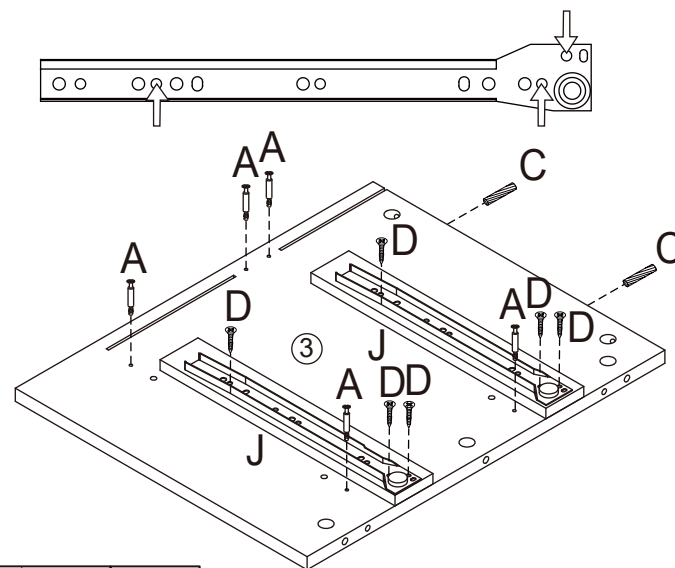


STEP 11



 
 X5

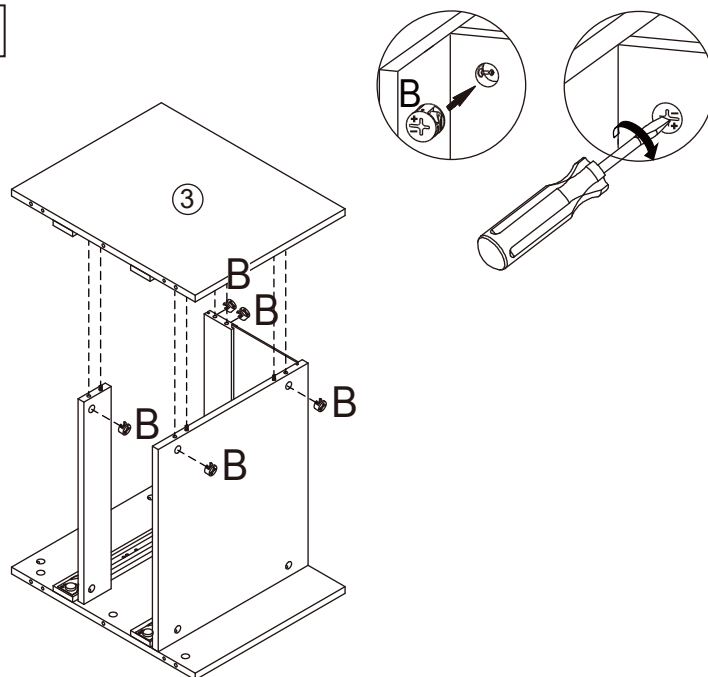

 
STEP 12

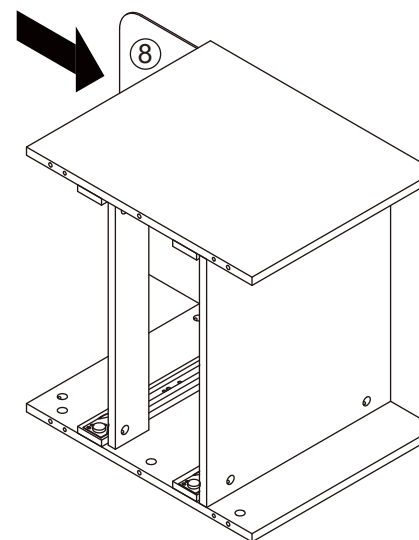

   
STEP 13

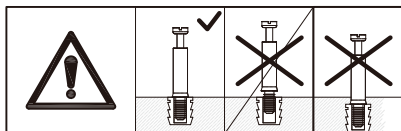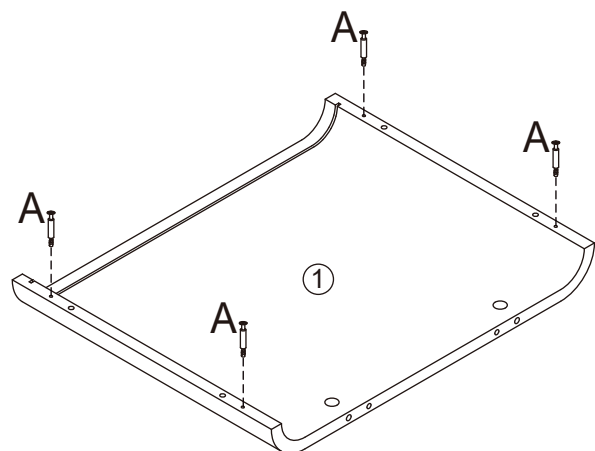



 
STEP 15

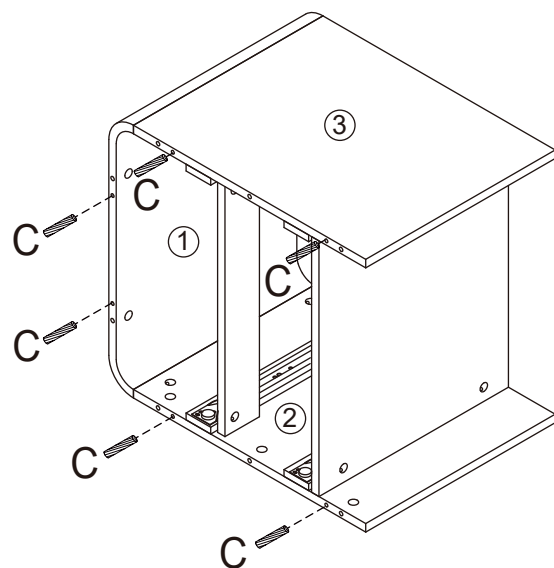

 
STEP 14

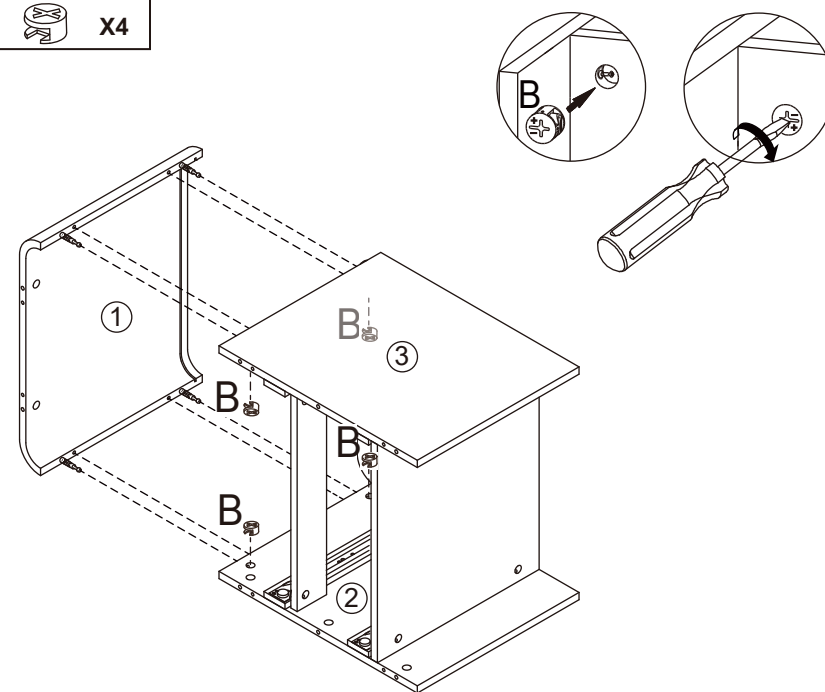

   
STEP 16

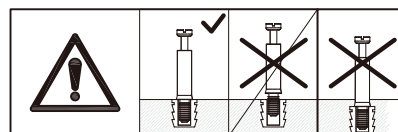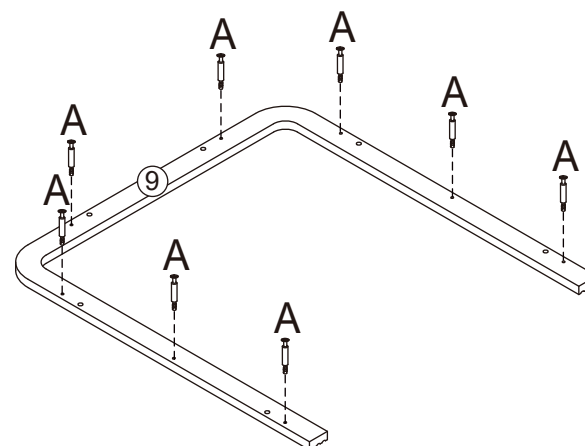

 
STEP 17

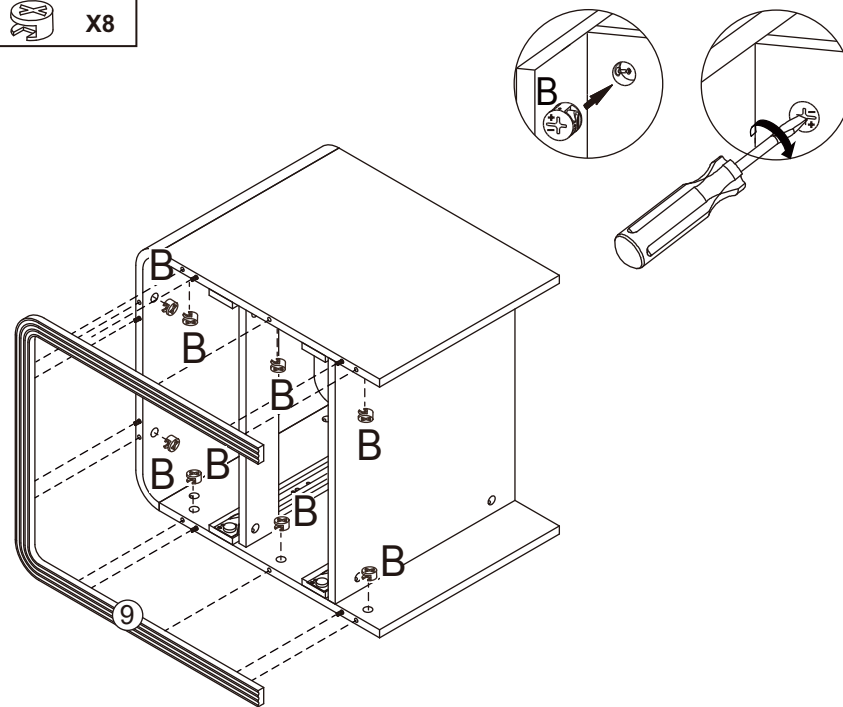

 
STEP 18

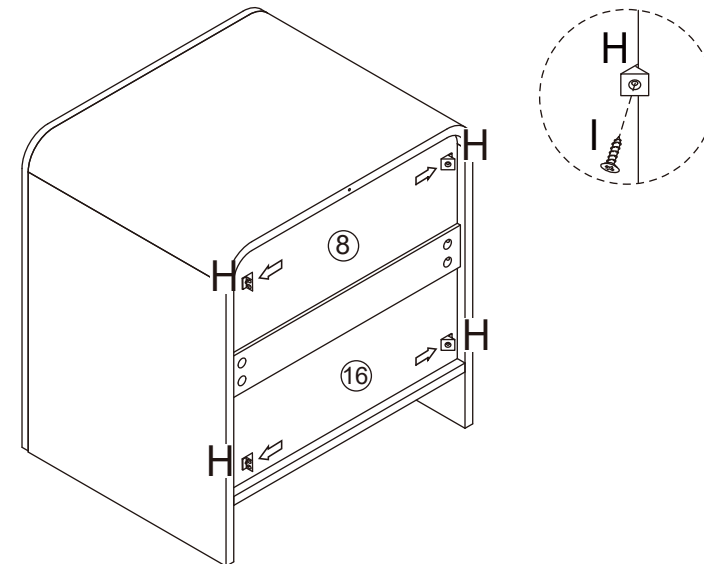


 
STEP 19

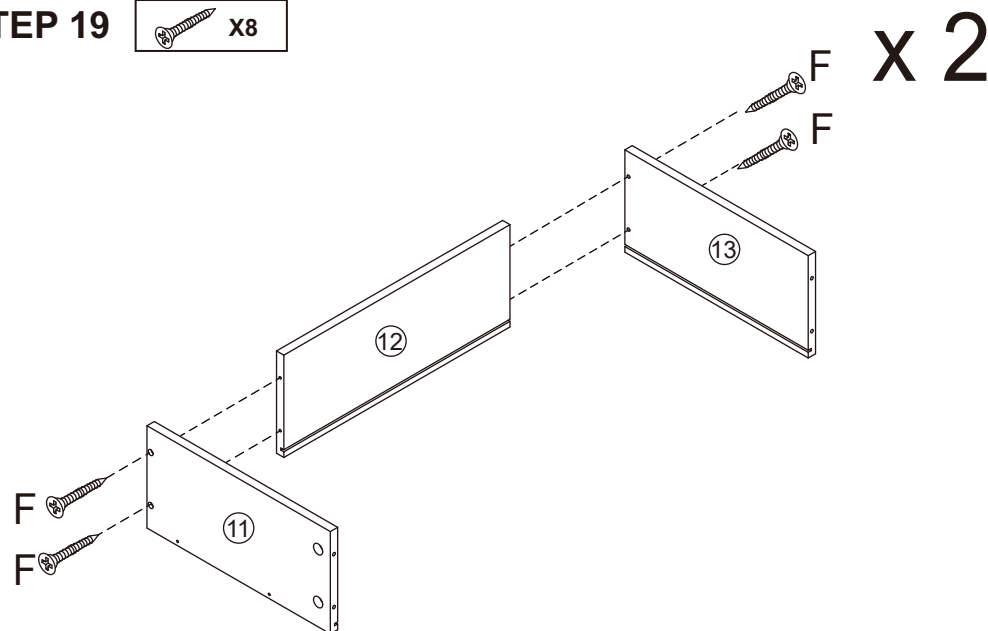


 
STEP 20

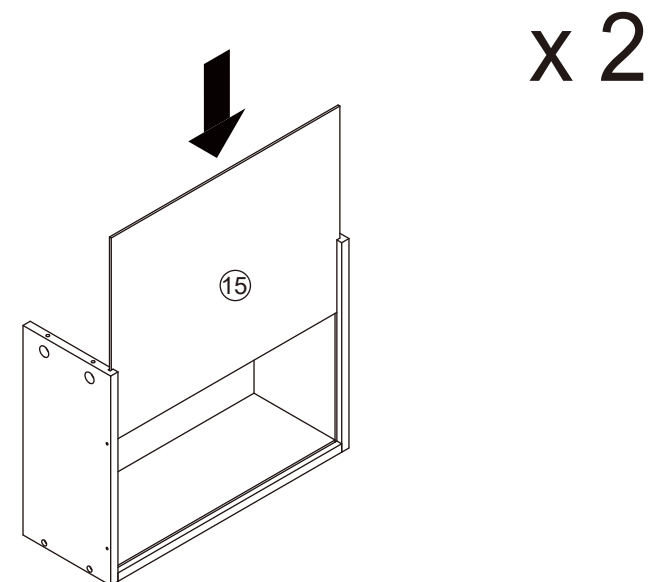

  
STEP 21

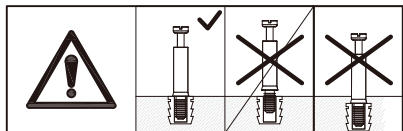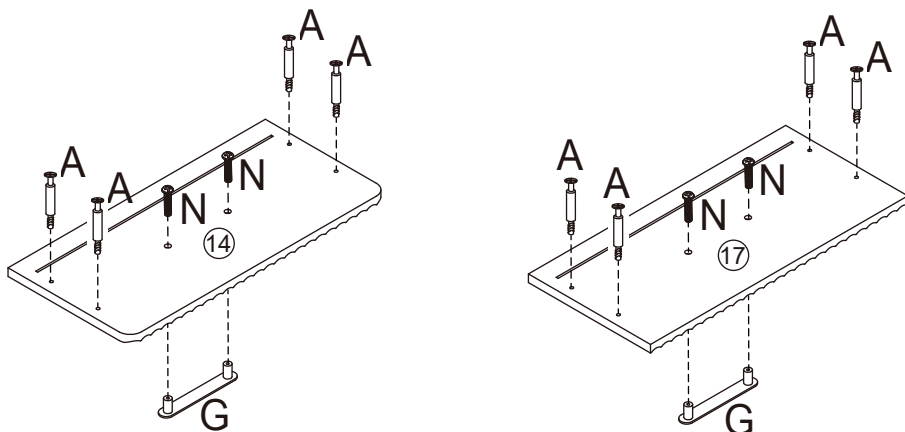

  
STEP 23

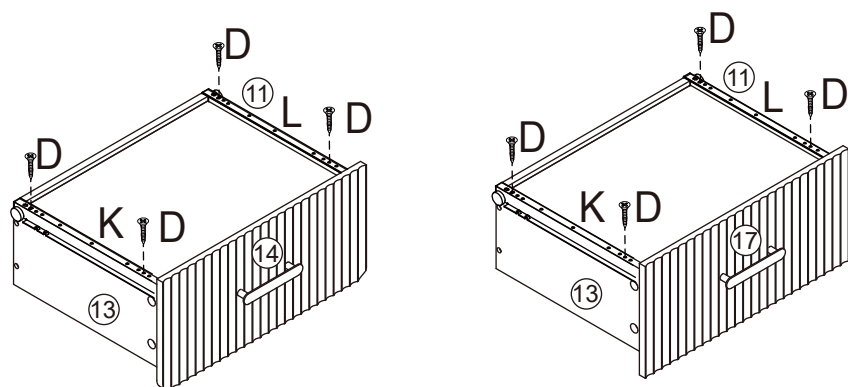

 STEP 22

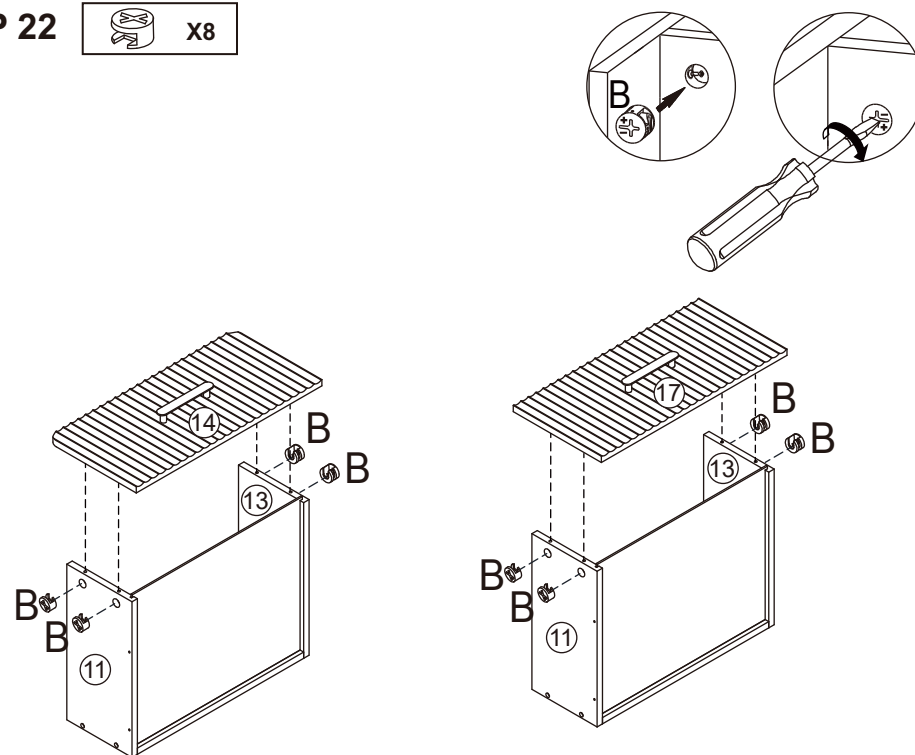

 STEP 24

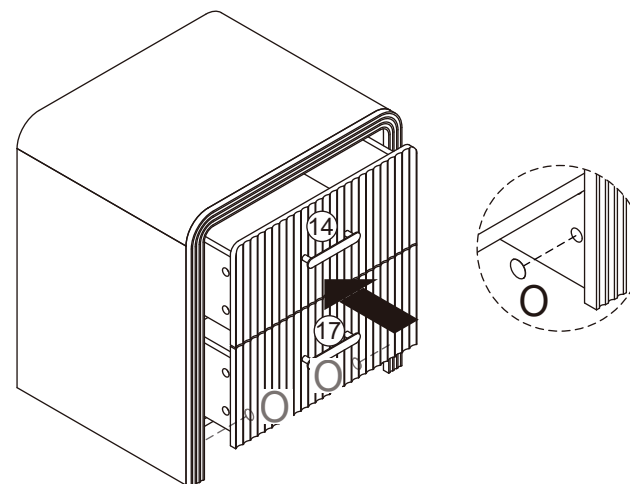

STEP 25



Warning:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)



! WARNING

 
Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV on this furniture

This is a permanent label. Do not remove!

Wall

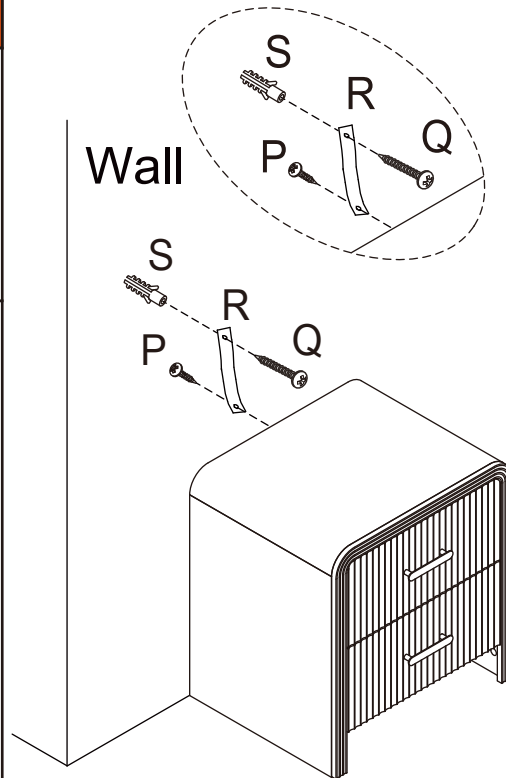

STEP 26

