 


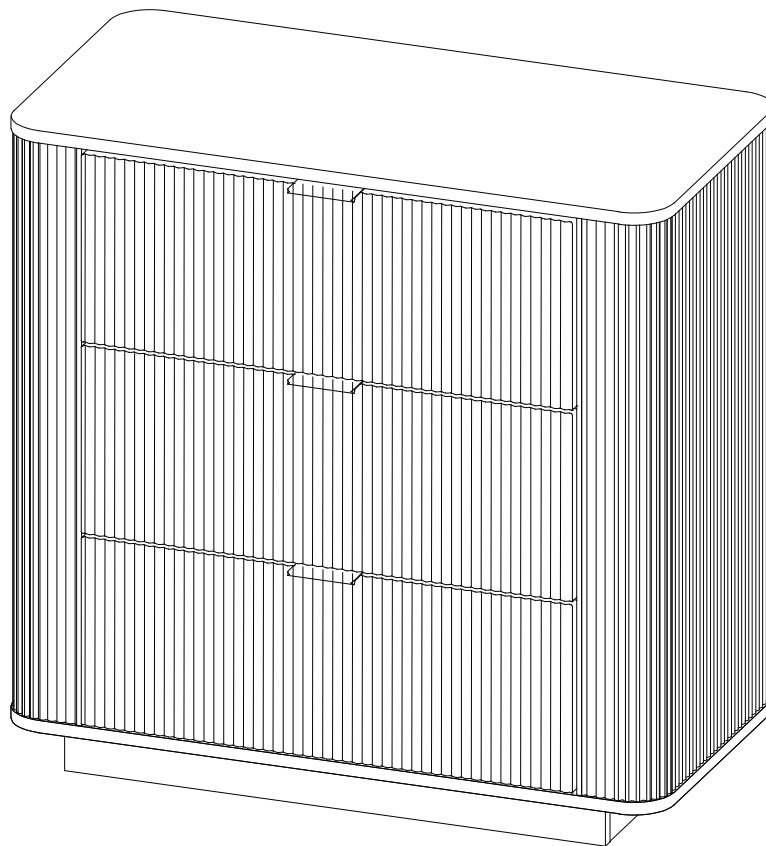

CLAIRE 3 DRAWER CHEST

Instruction Manual



The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Assembly Instructions

43635818 CLAIRE 3 DRAWER CHEST

WARNING:

DO NOT STAND, SIT OR LEAN ON THIS UNIT.

DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE.

KEEP AWAY FROM CHILDREN AND BABIES.

ADULT ASSEMBLY REQUIRED.

USE ONLY ON A FLAT SURFACE.

DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS:

TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE.

WIPE CLEAN WITH A SOFT DAMP CLOTH.

NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS.

CHECK AND TIGHTEN ALL PARTS REGULARLY.

KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT.

STORE IN A DRY PLACE.

FOR INDOOR AND DOMESTIC USE ONLY.










MAXIMUM SAFE LOAD:


15KG FOR TOP PANEL, 7KG FOR EACH DRAWER.

1 Hardware List





A		6x35mm	37pcs	B		15x10mm	37pcs	C		8x30mm	18pcs
D		7x38mm	4pcs	E		3.5x14mm	66pcs	F		4x48mm	10pcs
G		19*19*1.5mm	4pcs	H		4mm	1pc	I			3pcs
J			8pcs	K		25*15*3mm	4pcs	L			2pcs
M		4x35mm	17pcs	N		6x30mm	2pcs				

         2 Parts List



							
①	1pc	②	1pc	③	1pc	④	1pc
							
⑤	2pcs	⑥	1pc	⑦	1pc	⑧	2pcs
							
⑨	2pcs	⑩	1pc	⑪	1pc	⑫	3pcs
							
⑬	3pcs	⑭	3pcs	⑮	3pcs	⑯	3pcs
							
⑰	3pcs	CR	3pcs	DR	3pcs	CL	3pcs
							
DL	3pcs						

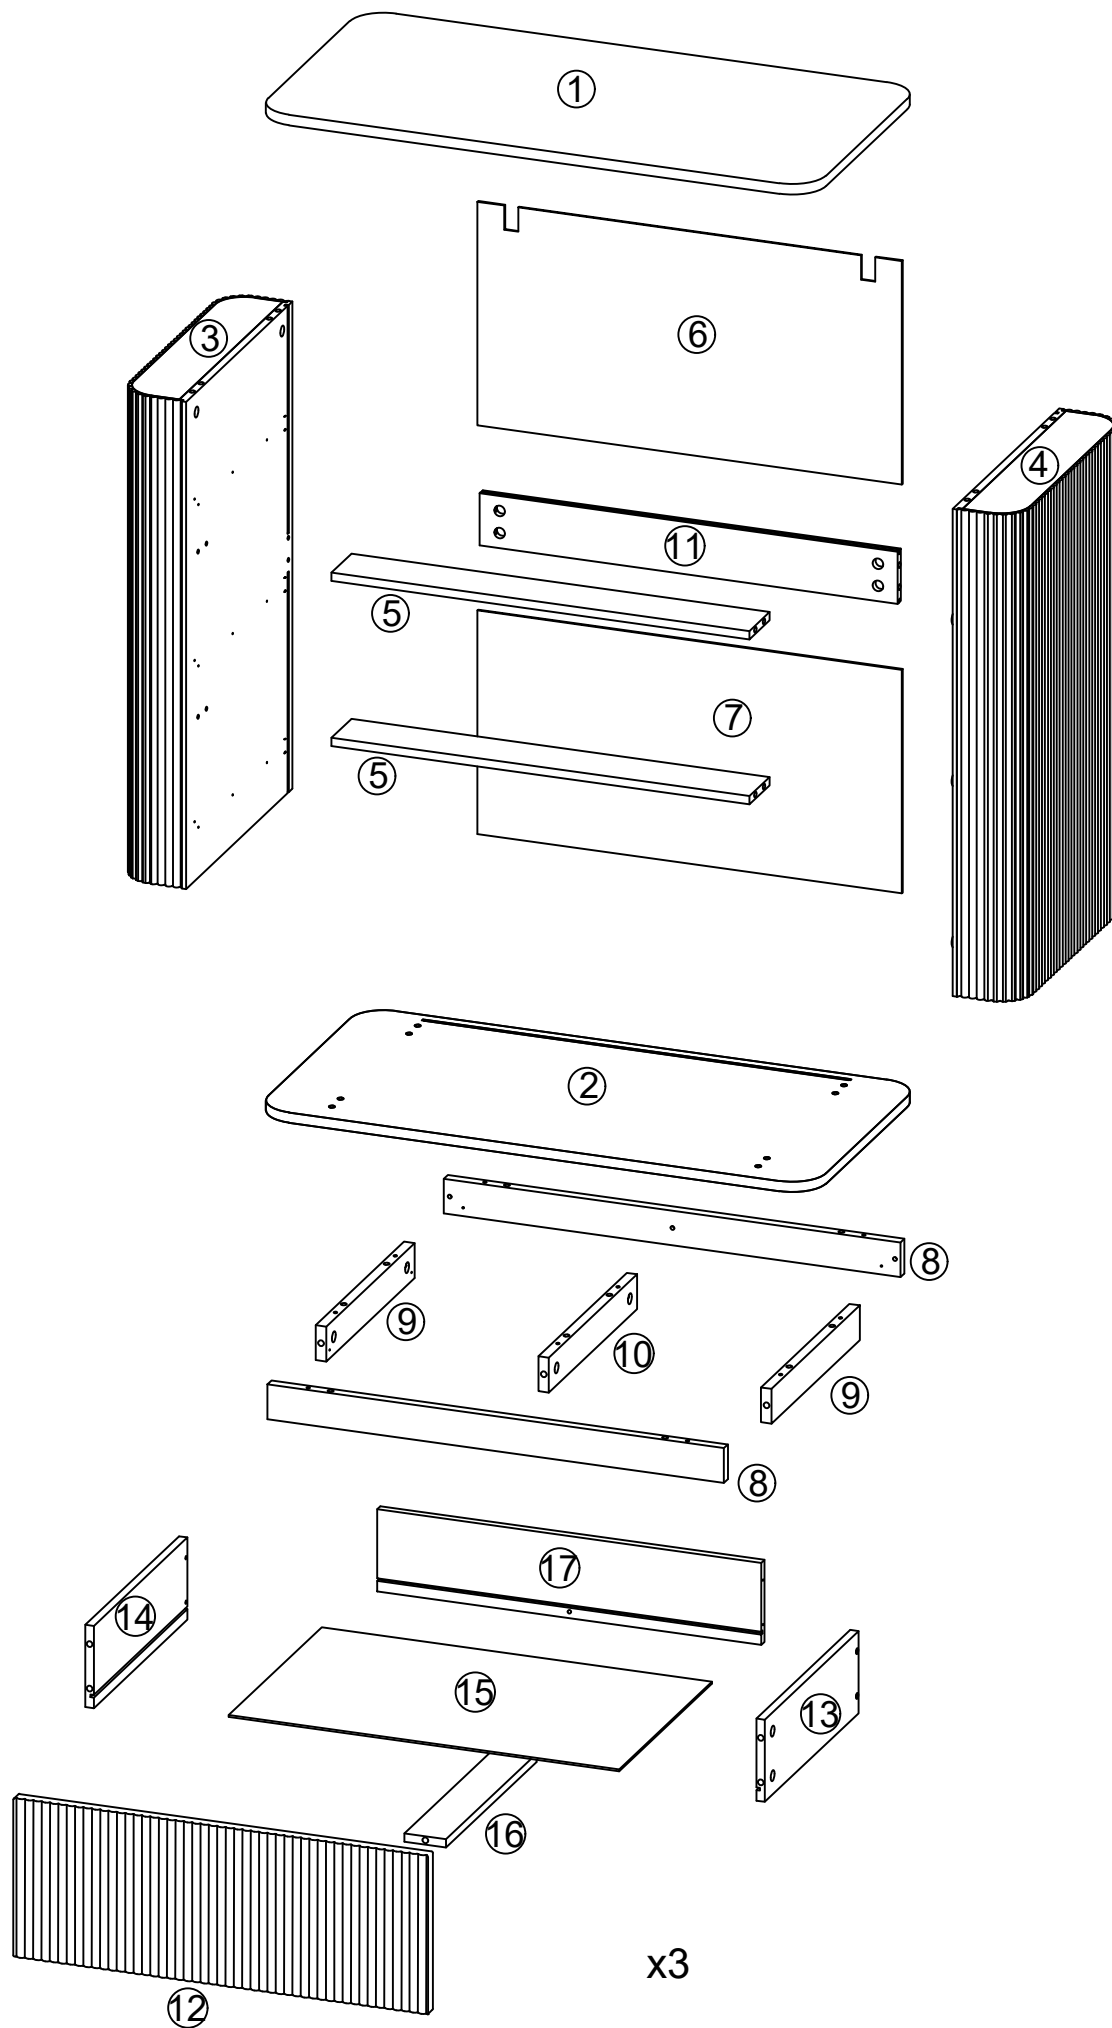 

    
STEP 1 E×24

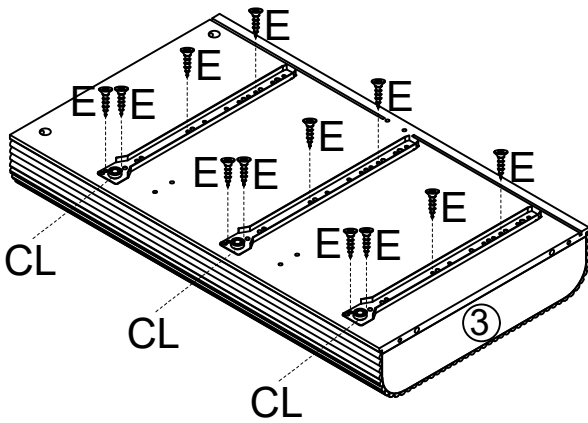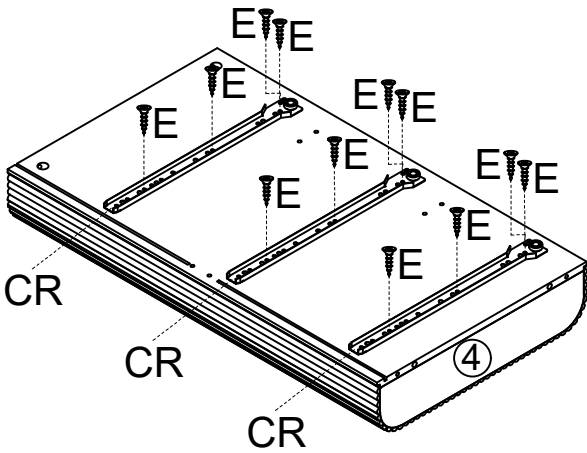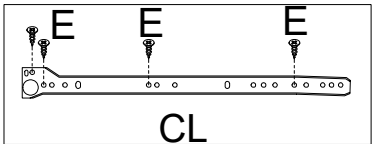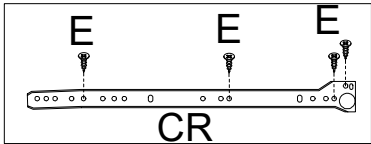

  
STEP 2 A×12

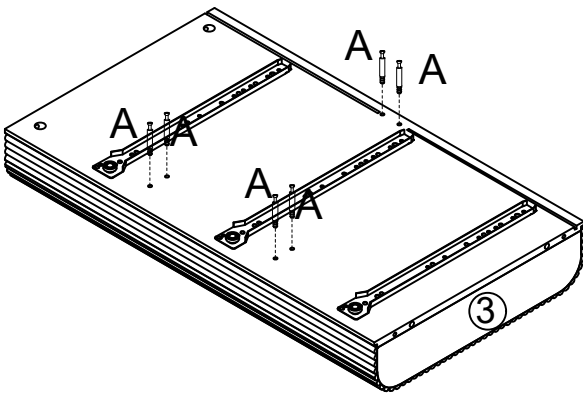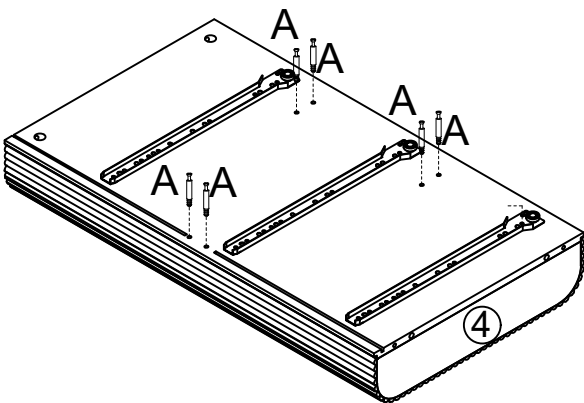

 
STEP 3 B×6

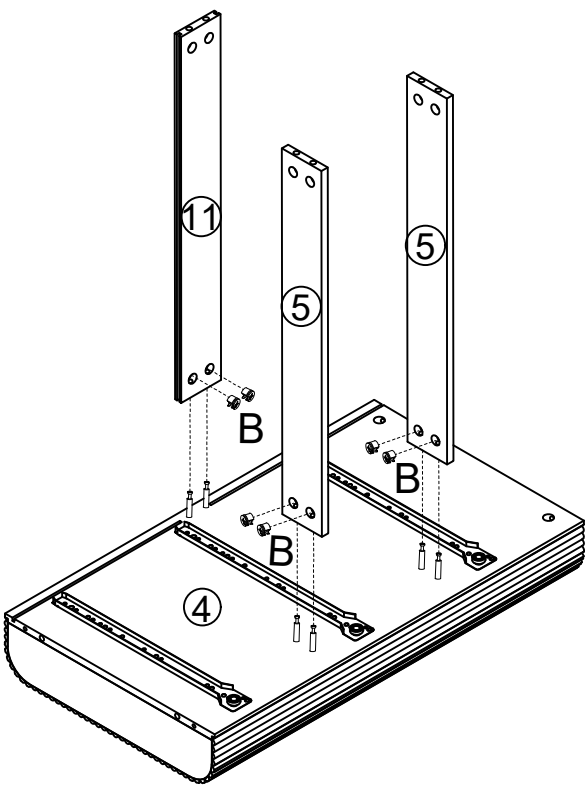


 
STEP 4 B×6

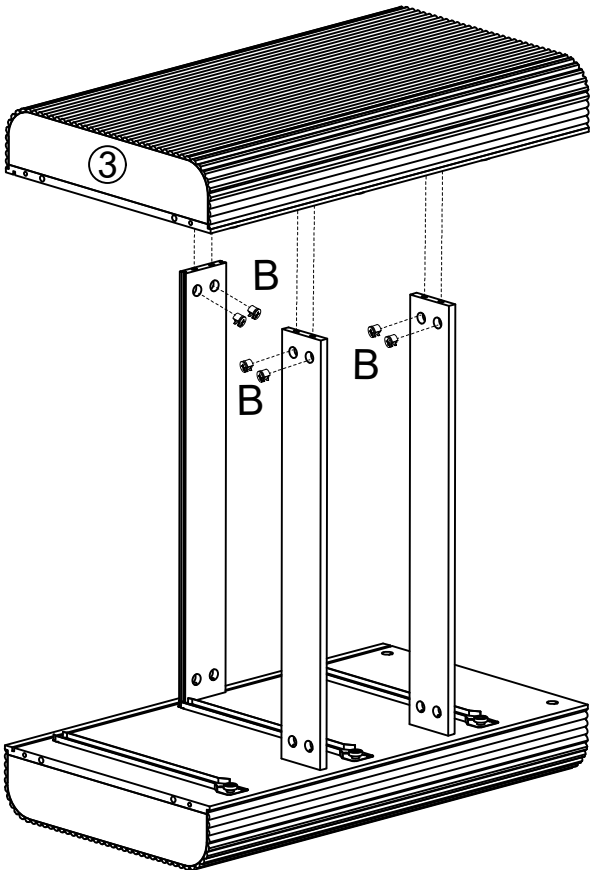

 STEP 5

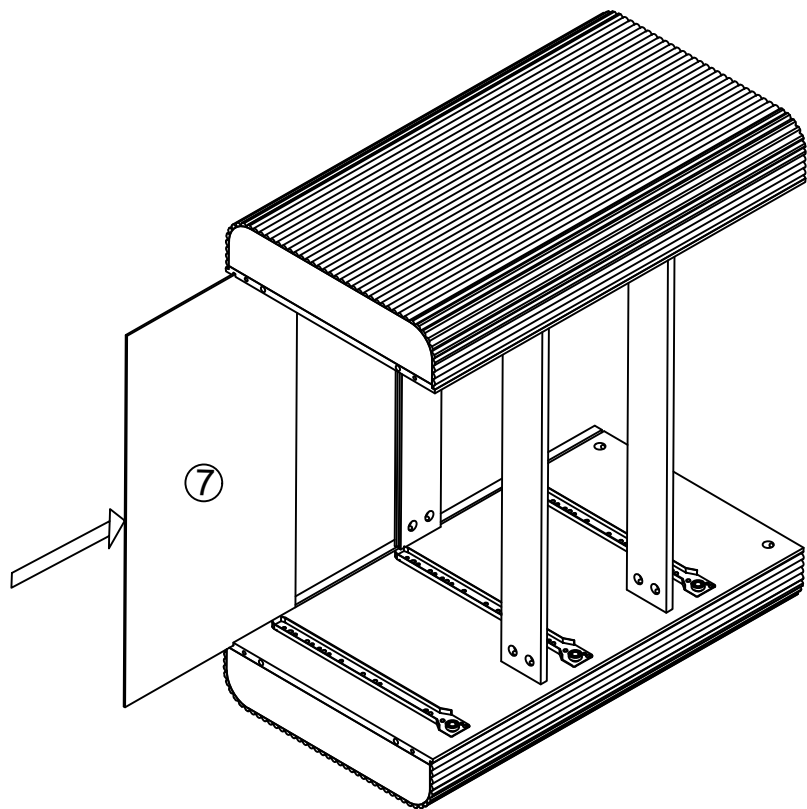


  STEP 6

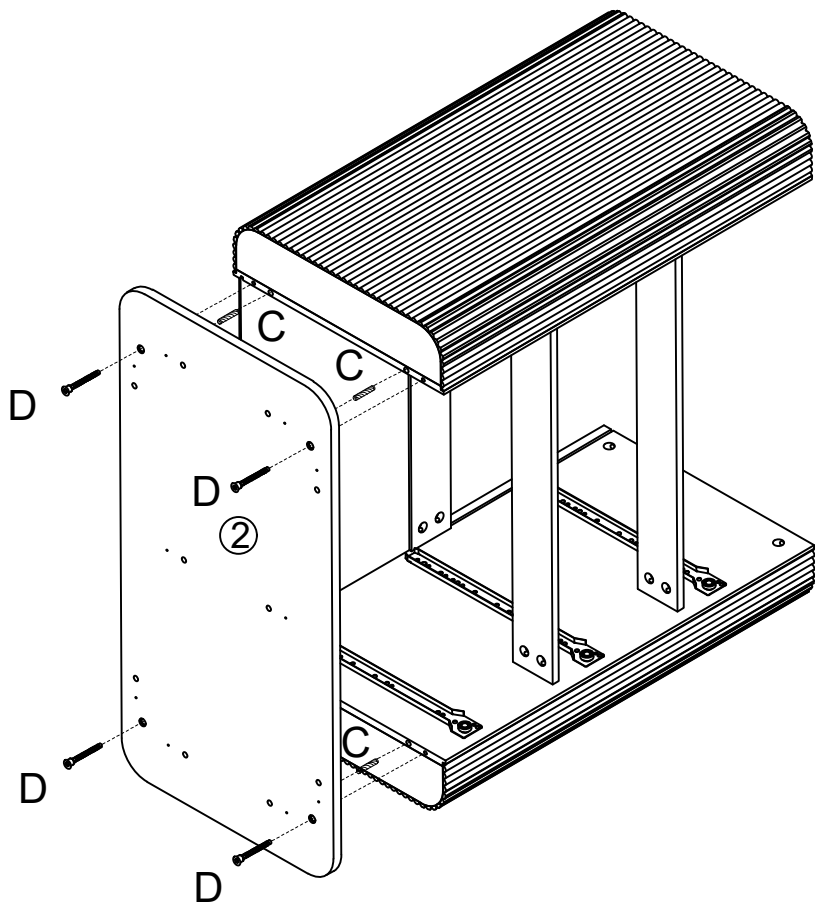


STEP 7

 A×6 B×6



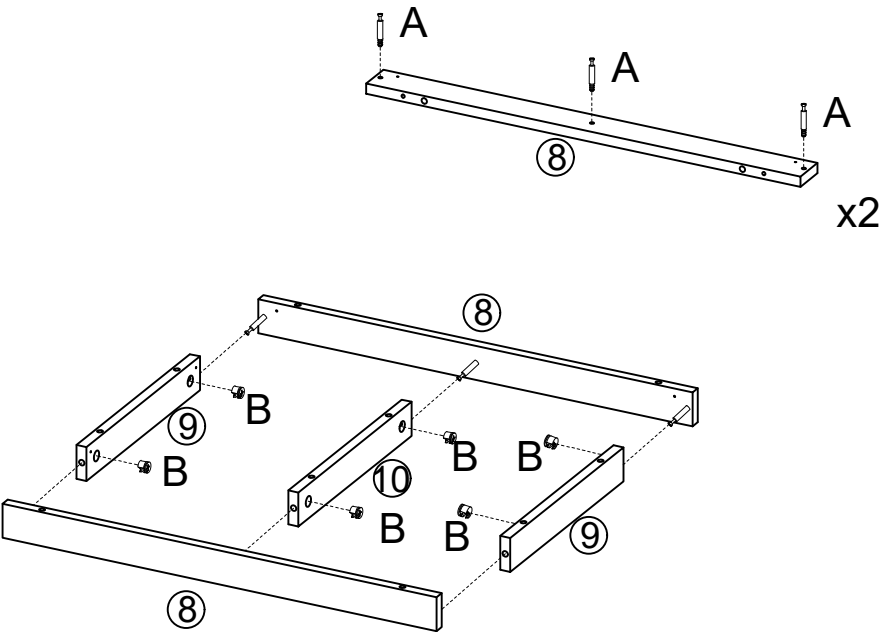



STEP 8

 F×10 C×10



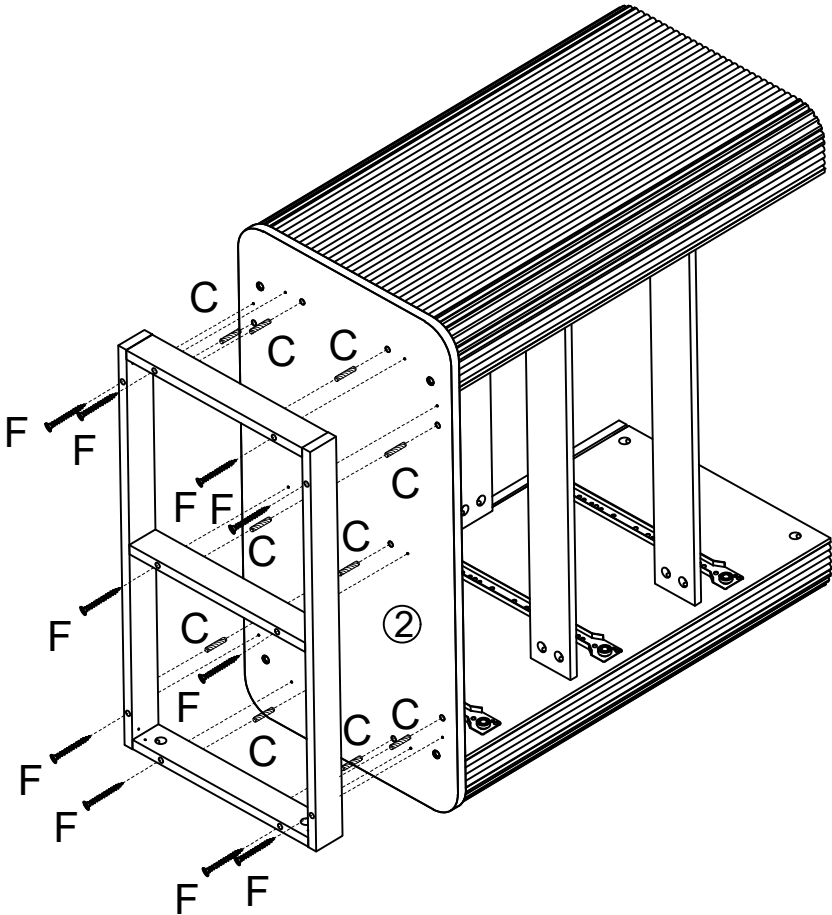


   
STEP 9

 K×4  G×4  E×8

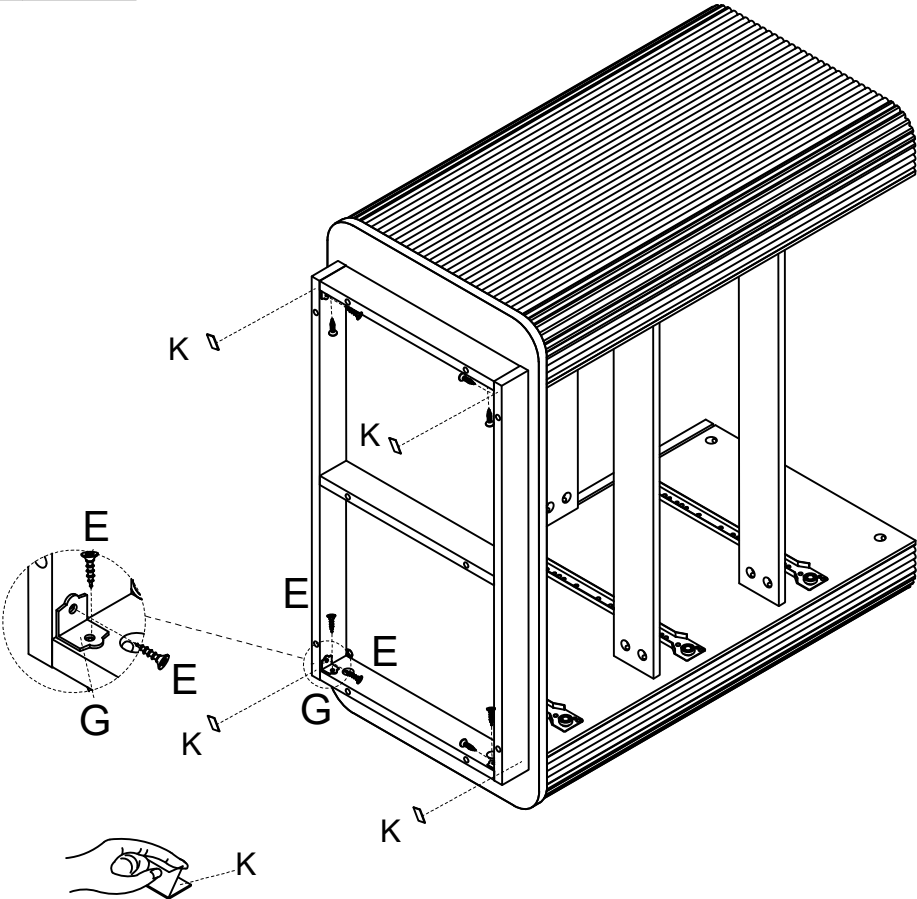 


   STEP 10

 A×4  L×2  E×2

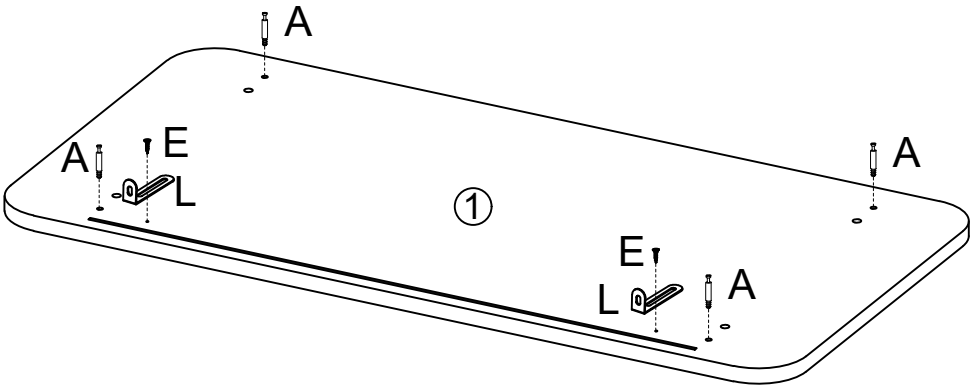 


 STEP 11


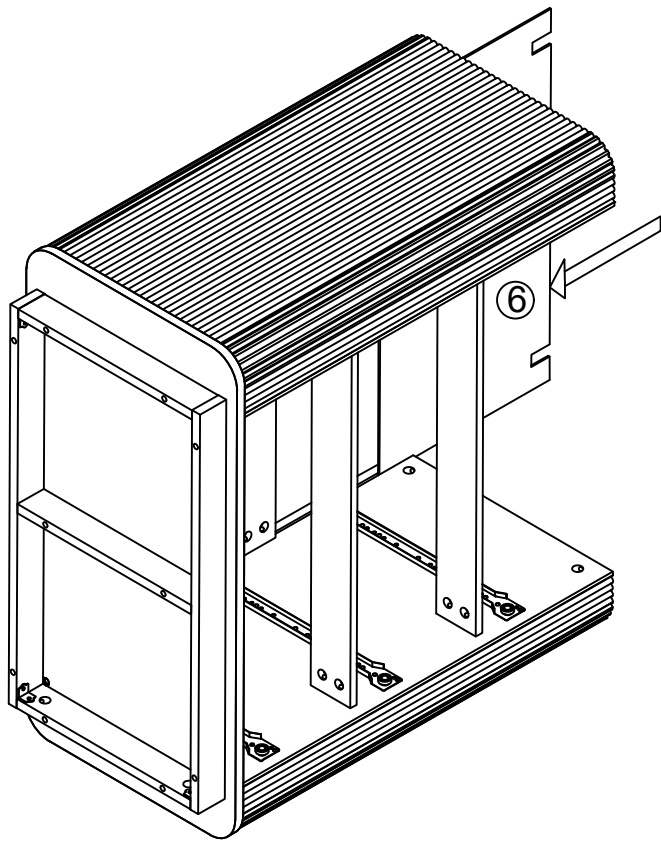


STEP 12


 
 B×4  C×4

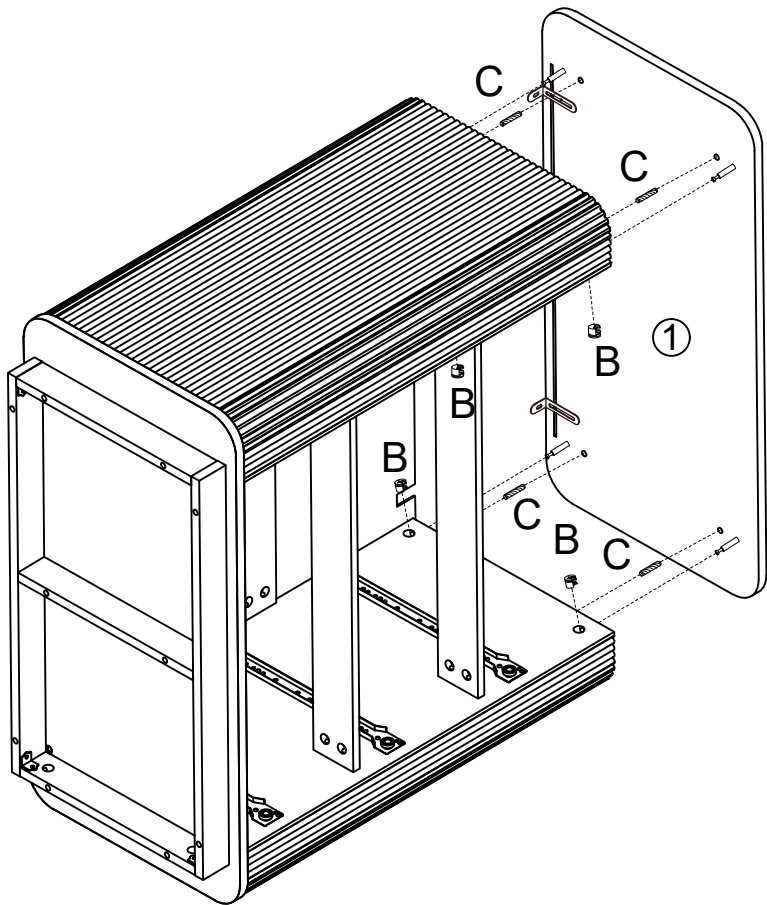

  STEP 13

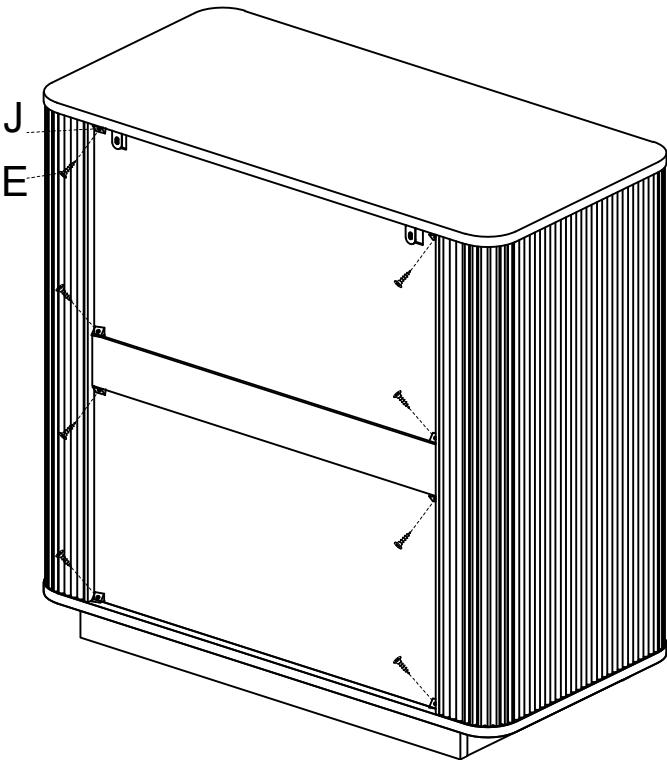


  STEP 14

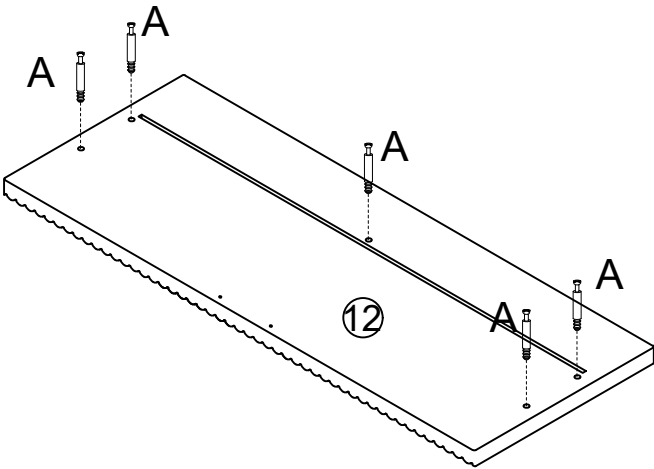


x3

 STEP 15 B×12

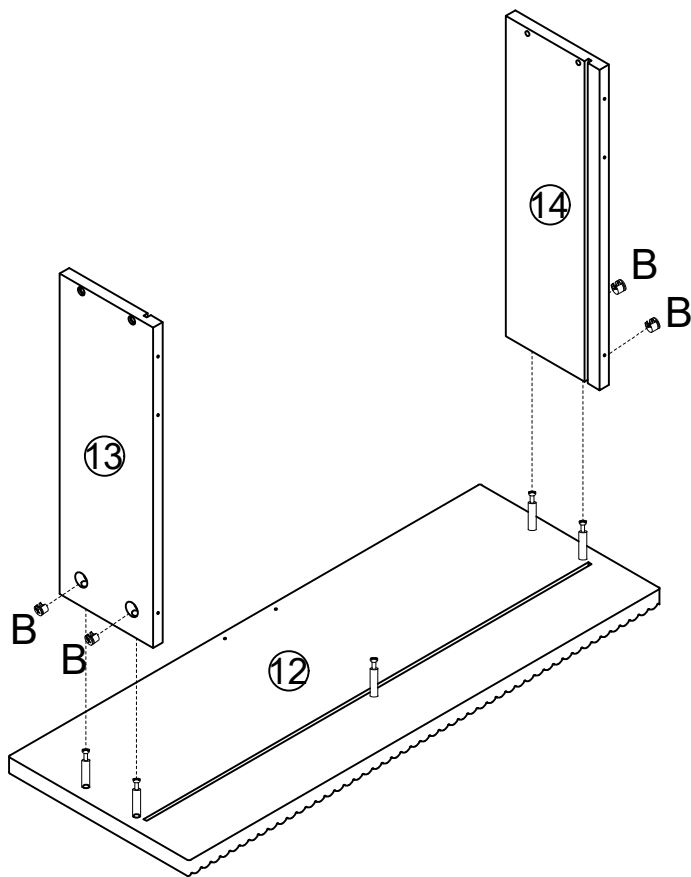


x3

 STEP 16

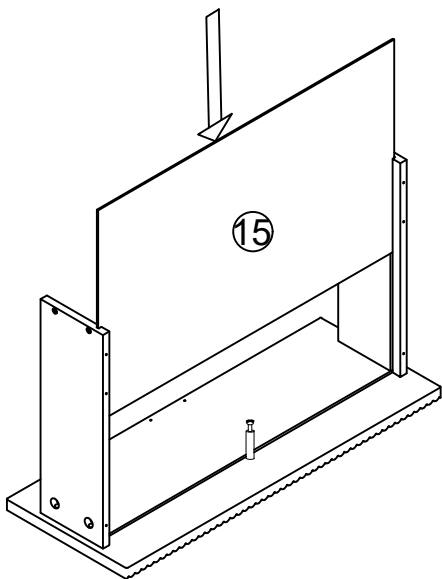


x3

 STEP 17 B×3

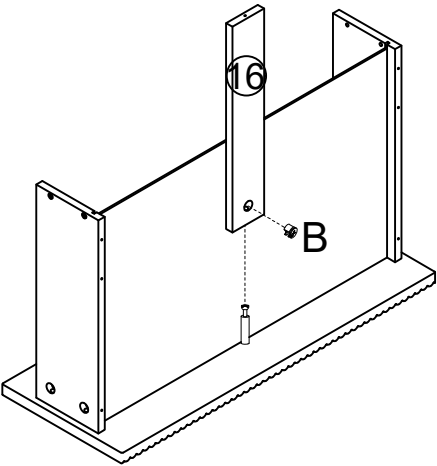



x3

 STEP 18 M×15

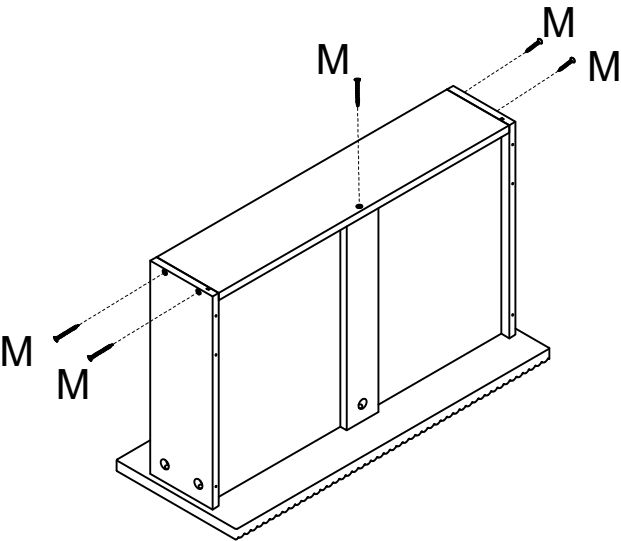


x3

  STEP 19

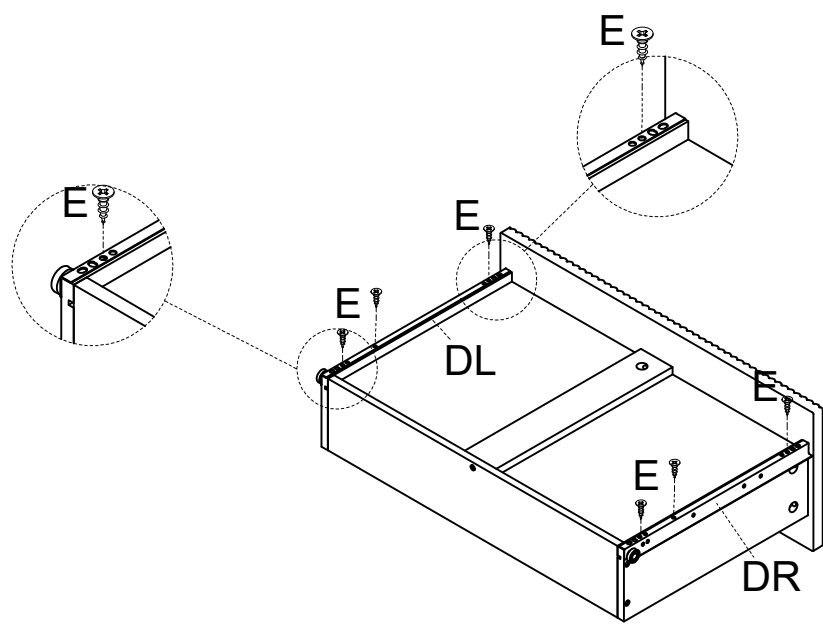



x3

 STEP 20

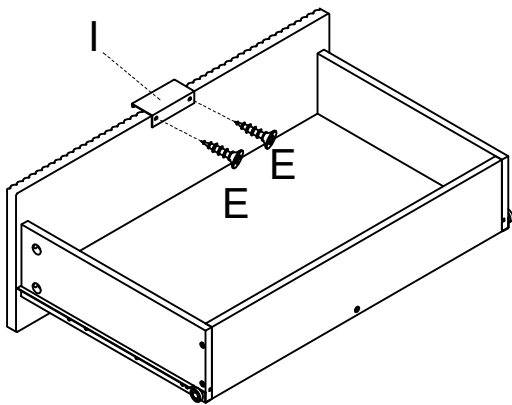

x3

  STEP 21 M×2 N×2

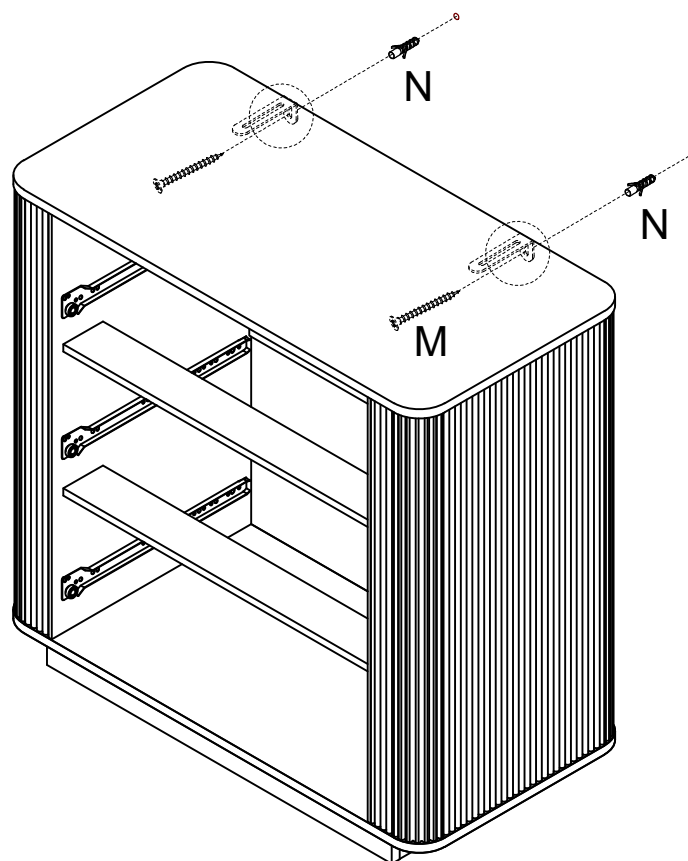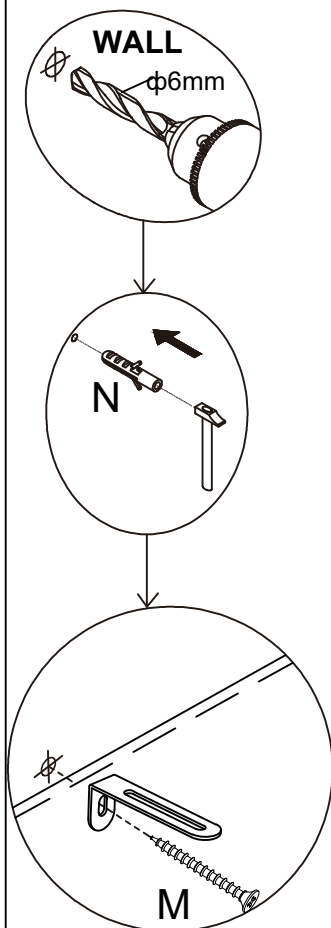


TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .


CAUTION: for your safety when attaching the anchor fixing please note the following:

 - **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

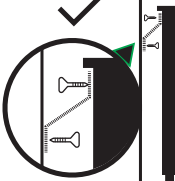 WARNING	
	
Children have died from furniture tipover. • ALWAYS secure it with an anchor device. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heavy items down low.	
NEVER put a TV on this furniture 	
This is a permanent label. Do not remove!	

 TOPPLING HAZARD	WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.	
---	---	---

 STEP 22

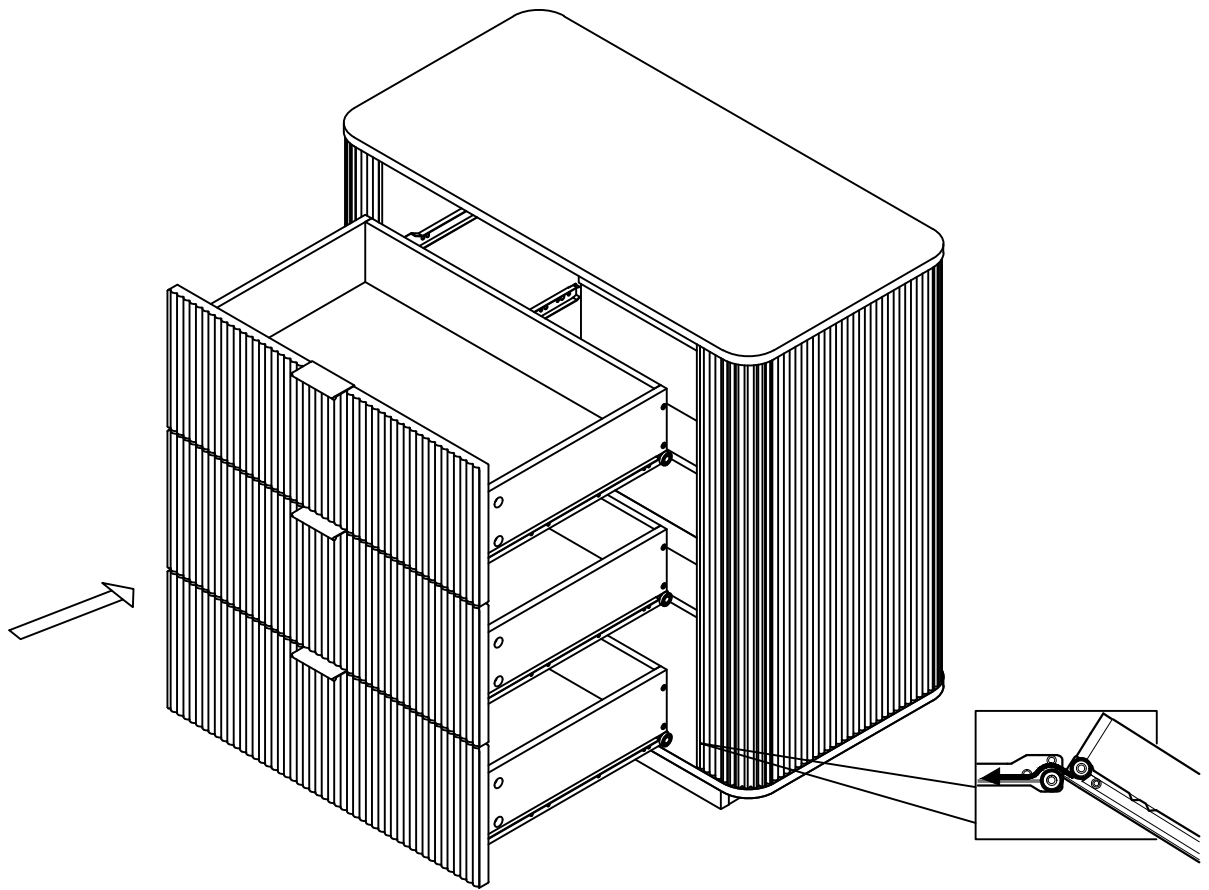

STEP 23

