


anko

CLAIRE 3 DRAWER CHEST

Instruction Manual

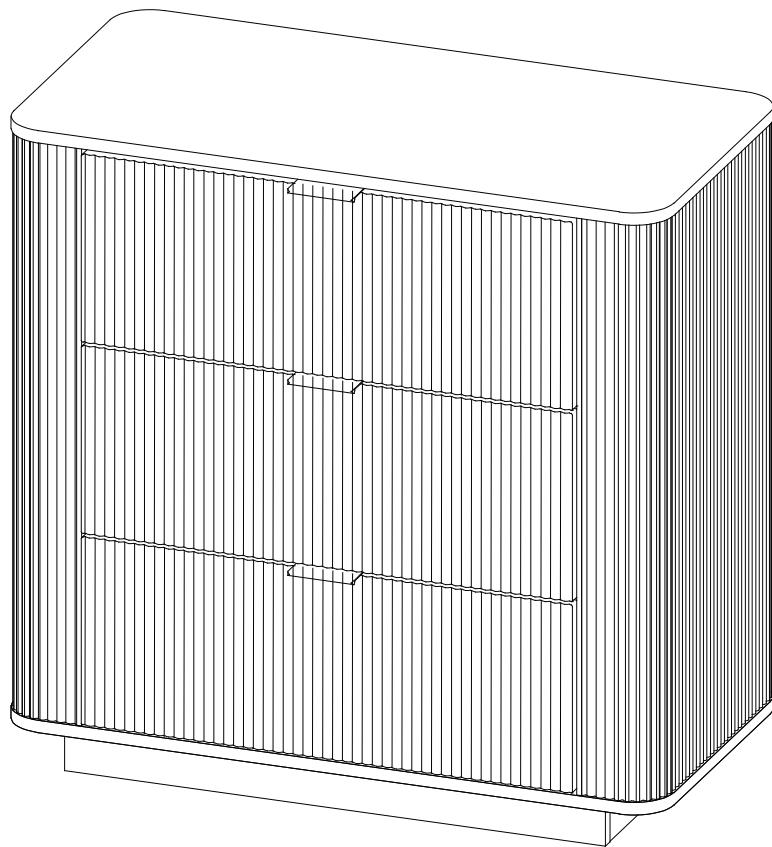

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Assembly Instructions

43635818 CLAIRE 3 DRAWER CHEST

WARNING:

DO NOT STAND, SIT OR LEAN ON THIS UNIT.

DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE.

KEEP AWAY FROM CHILDREN AND BABIES.

ADULT ASSEMBLY REQUIRED.

USE ONLY ON A FLAT SURFACE.

DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS:

TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE.

WIPE CLEAN WITH A SOFT DAMP CLOTH.

NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS.

CHECK AND TIGHTEN ALL PARTS REGULARLY.

KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT.

STORE IN A DRY PLACE.

FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD:


15KG FOR TOP PANEL, 7KG FOR EACH DRAWER.

1 Hardware List

A		6x35mm	37pcs	B		15x10mm	37pcs	C		8x30mm	18pcs
D		7x38mm	4pcs	E		3.5x14mm	66pcs	F		4x48mm	10pcs
G		19*19*1.5mm	4pcs	H		4mm	1pc	I			3pcs
J			8pcs	K		25*15*3mm	4pcs	L			2pcs
M		4x35mm	17pcs	N		6x30mm	2pcs				





2 Parts List

			
①	1pc	②	1pc
③	1pc	④	1pc
⑤	2pcs	⑥	1pc
⑦	1pc	⑧	2pcs
⑨	2pcs	⑩	1pc
⑪	1pc	⑫	3pcs
⑬	3pcs	⑭	3pcs
⑮	3pcs	⑯	3pcs
⑰	3pcs	CR	3pcs
DL	3pcs	DR	3pcs
		CL	3pcs

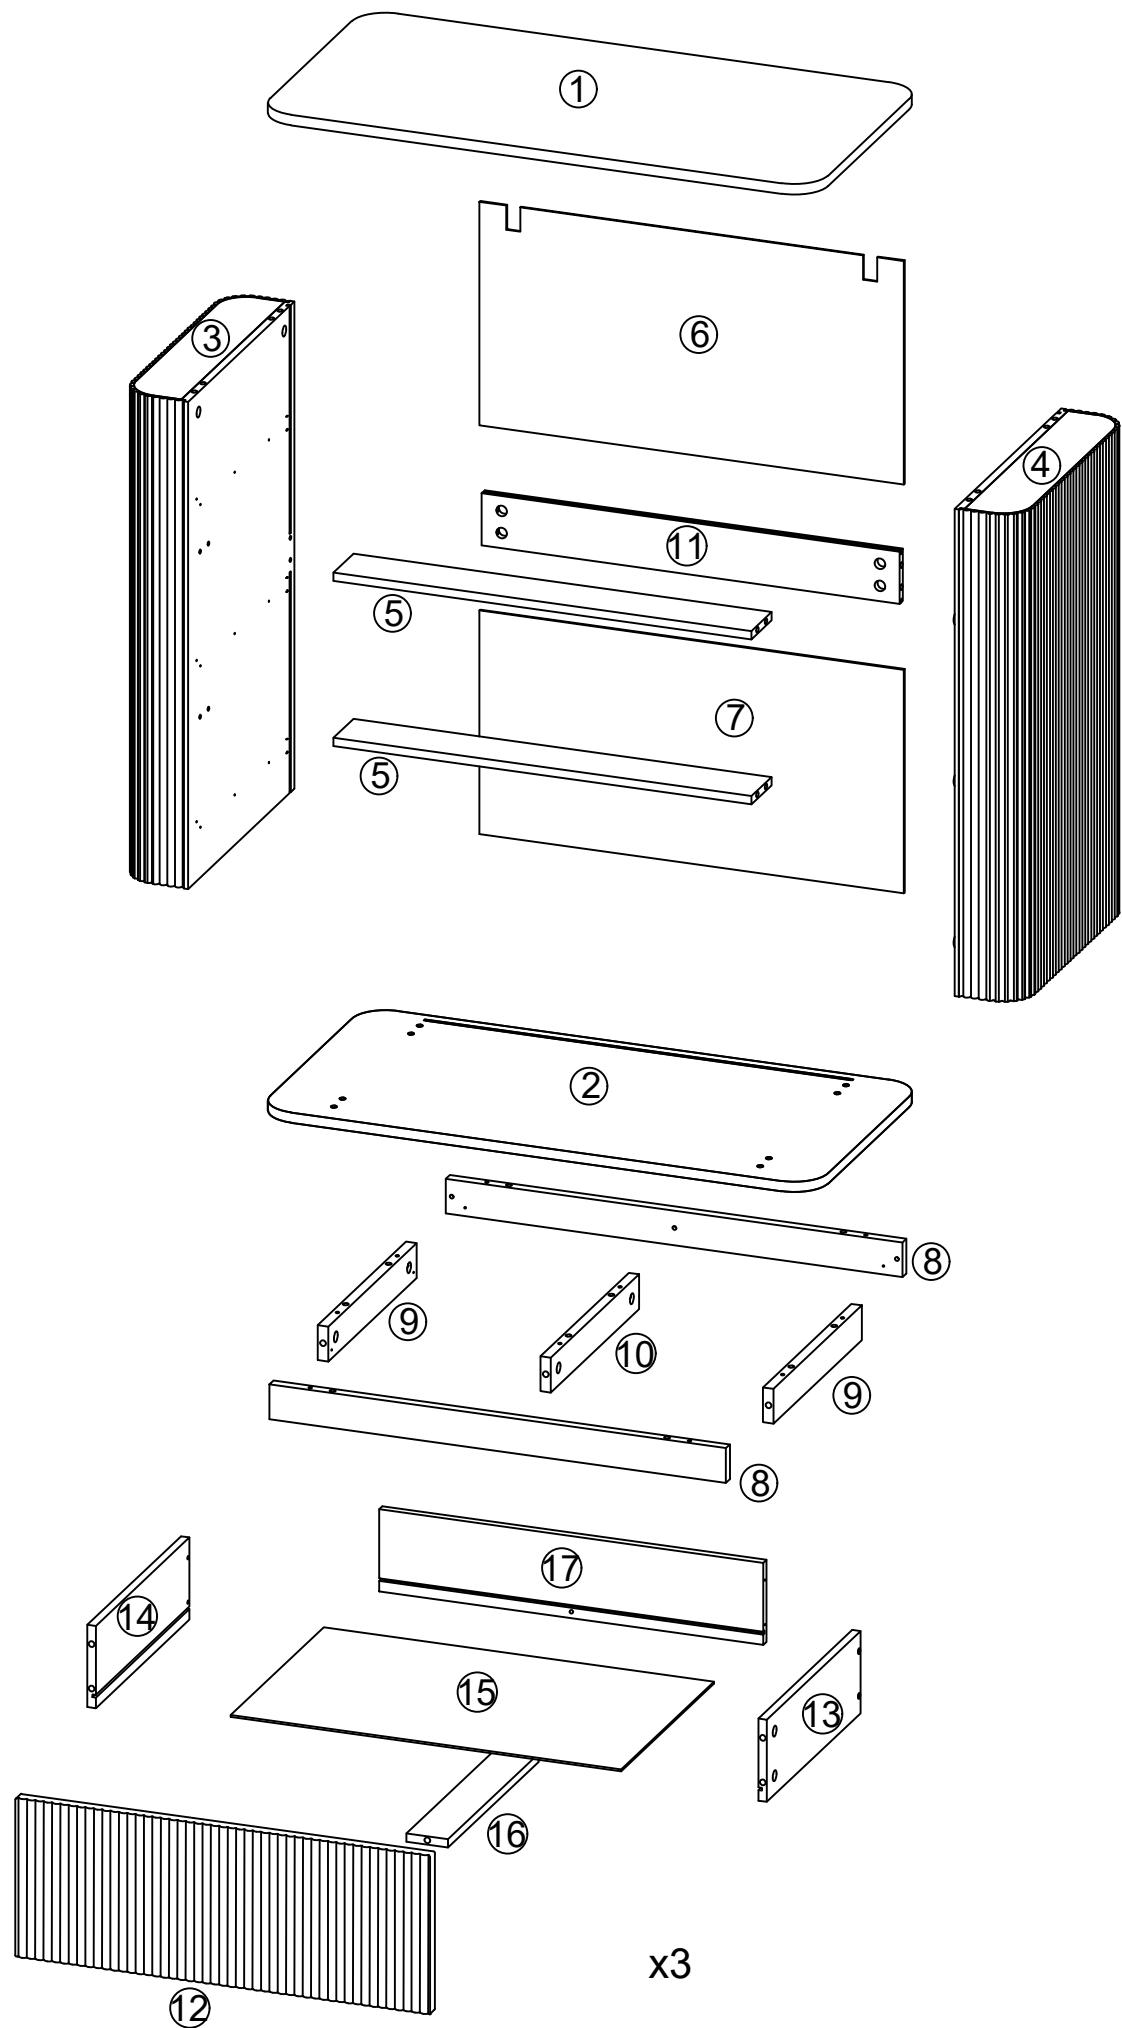



STEP 1

→ E×24

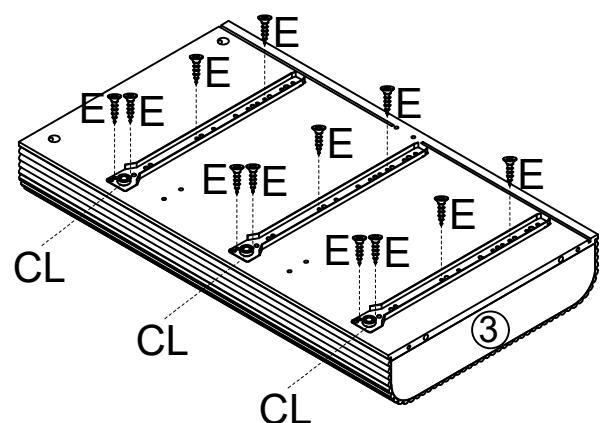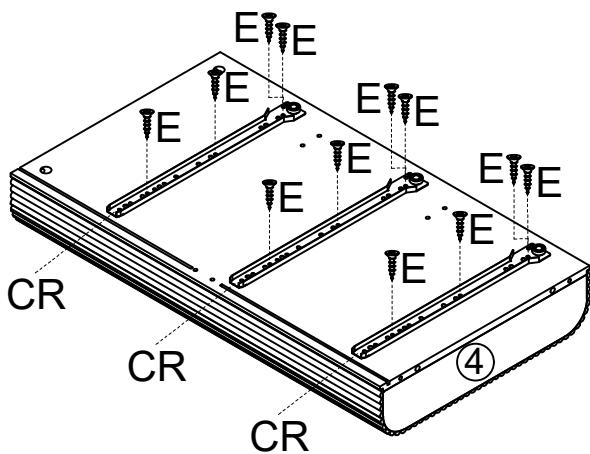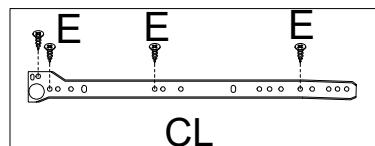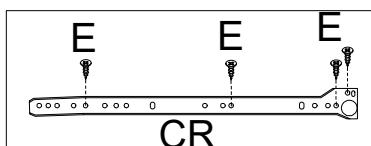


STEP 2


→ A×12

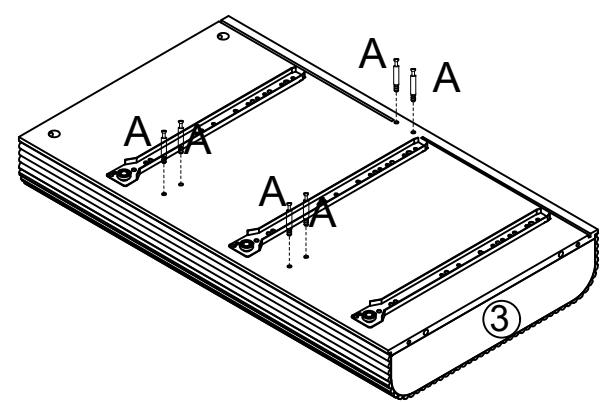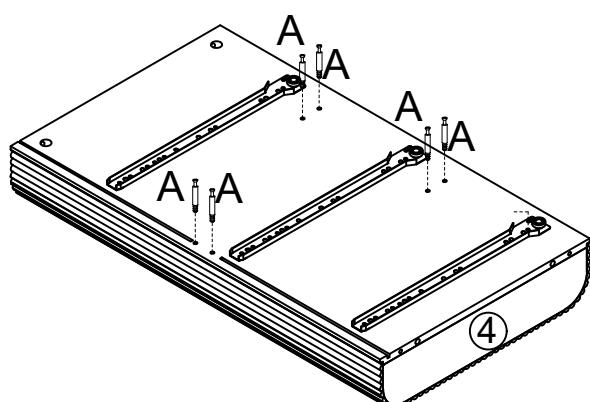


STEP 3  B×6

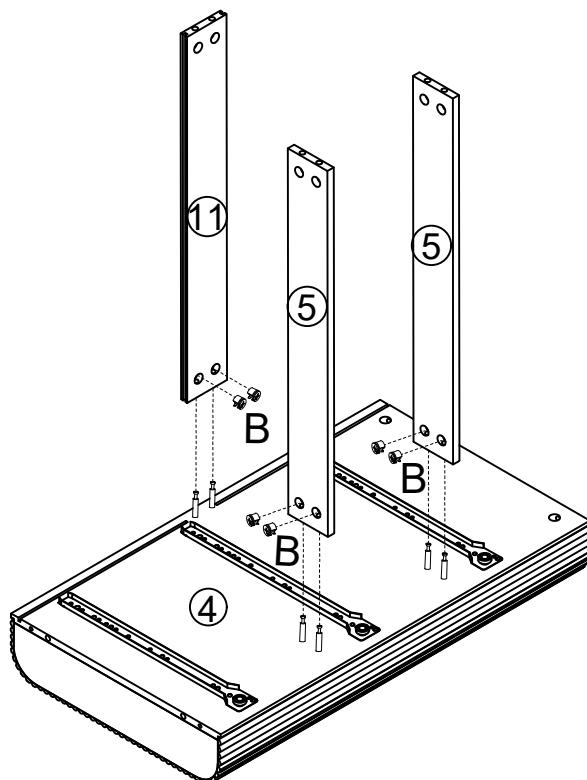

STEP 4  B×6

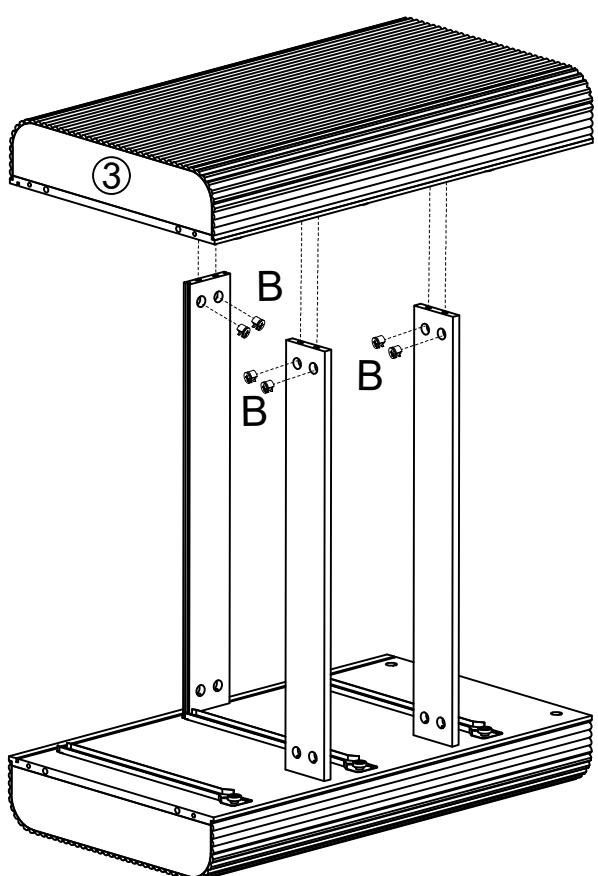


STEP 5

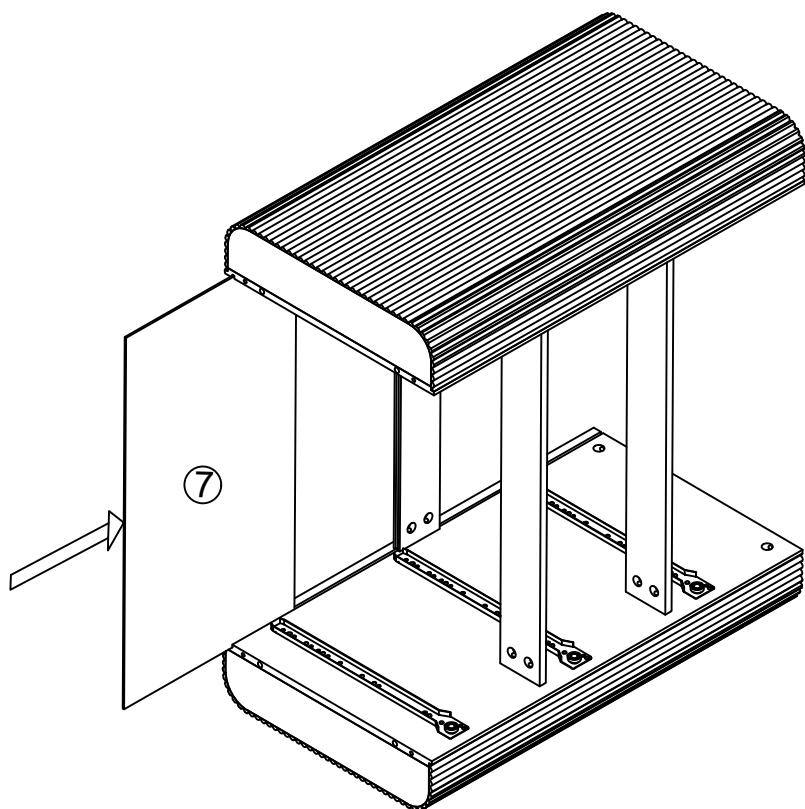


STEP 6

— D×4 — C×4

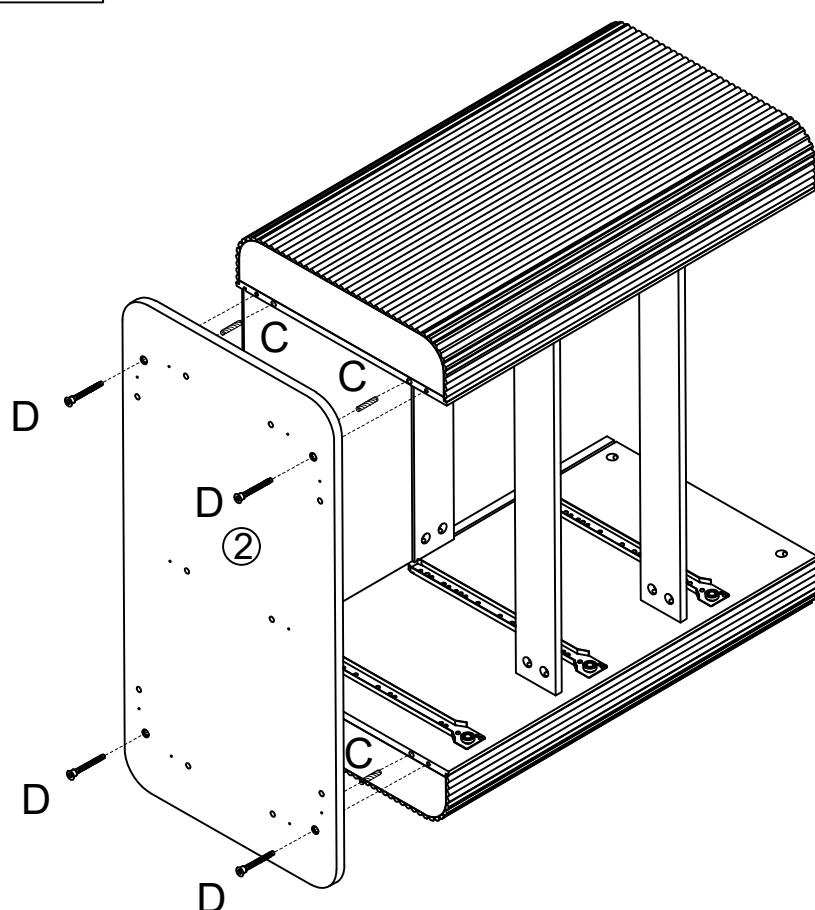


STEP 7

— A×6  B×6 

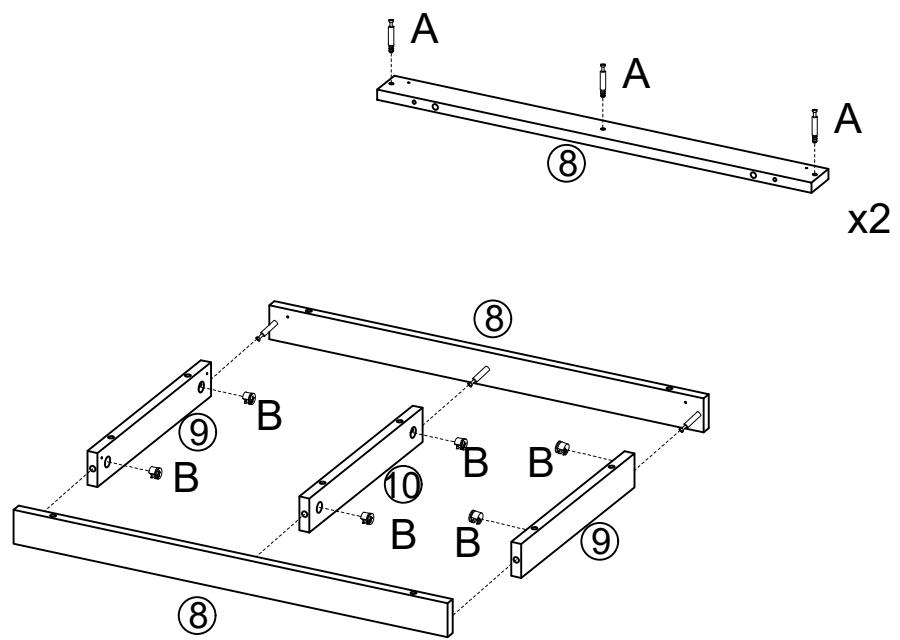


STEP 8

— Fx10 — Cx10

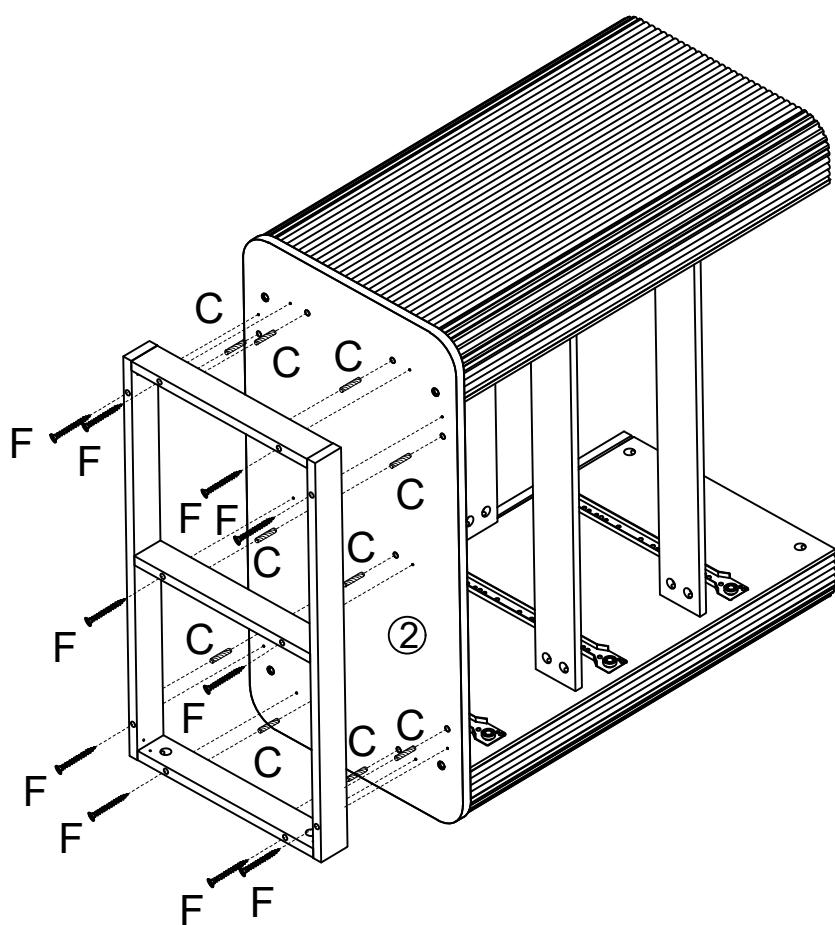


STEP 9

K×4 G×4 E×8

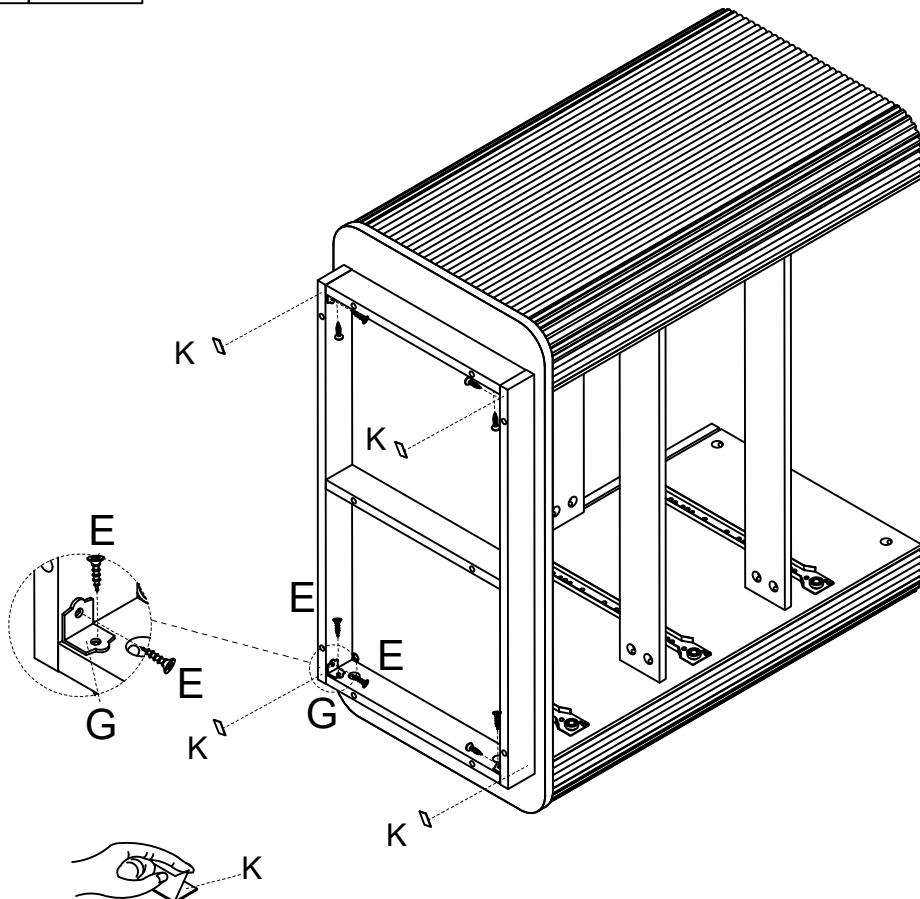


STEP 10


A×4 L×2 E×2

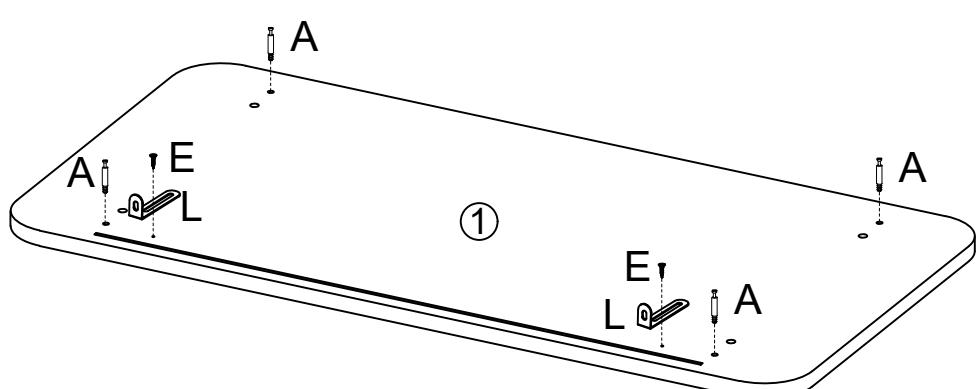

STEP 11

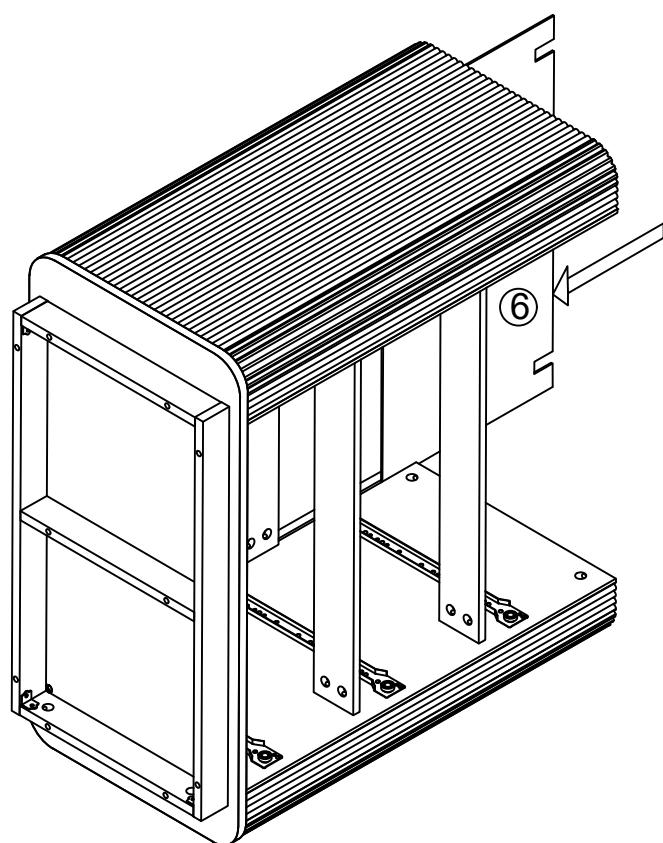


STEP 12 B×4 C×4

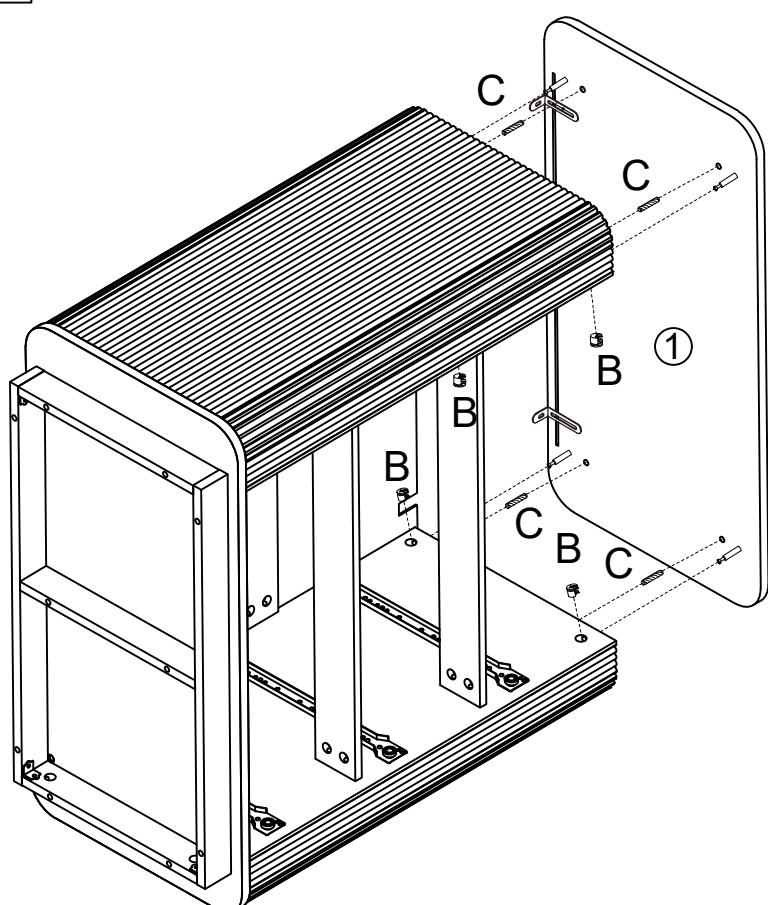


STEP 13

 J×8  E×8

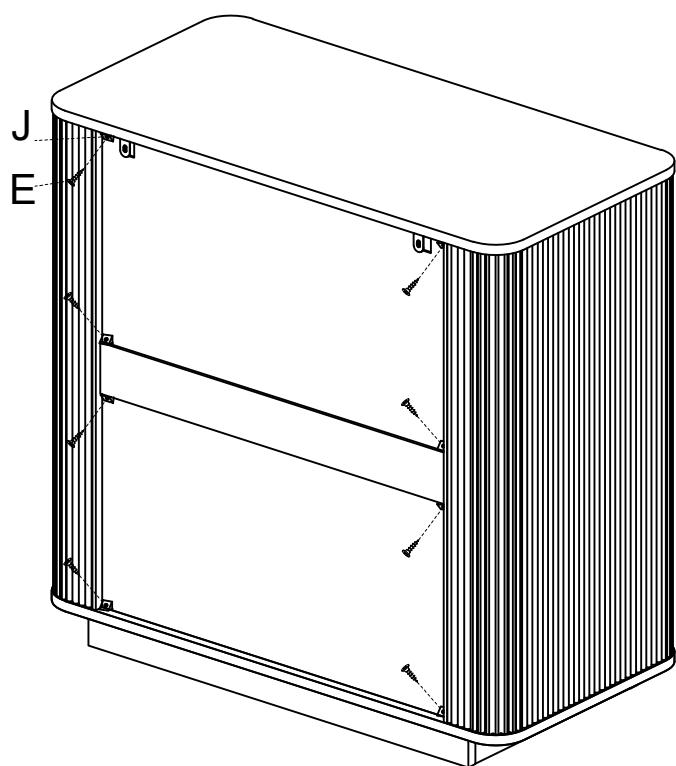

STEP 14


 A×15

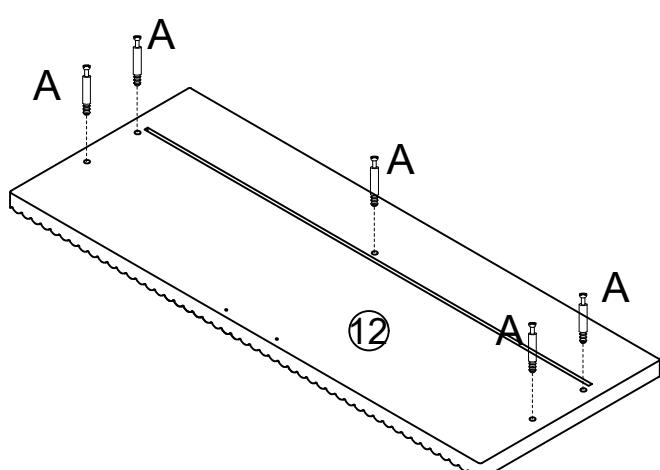


x3

STEP 15

 B×12

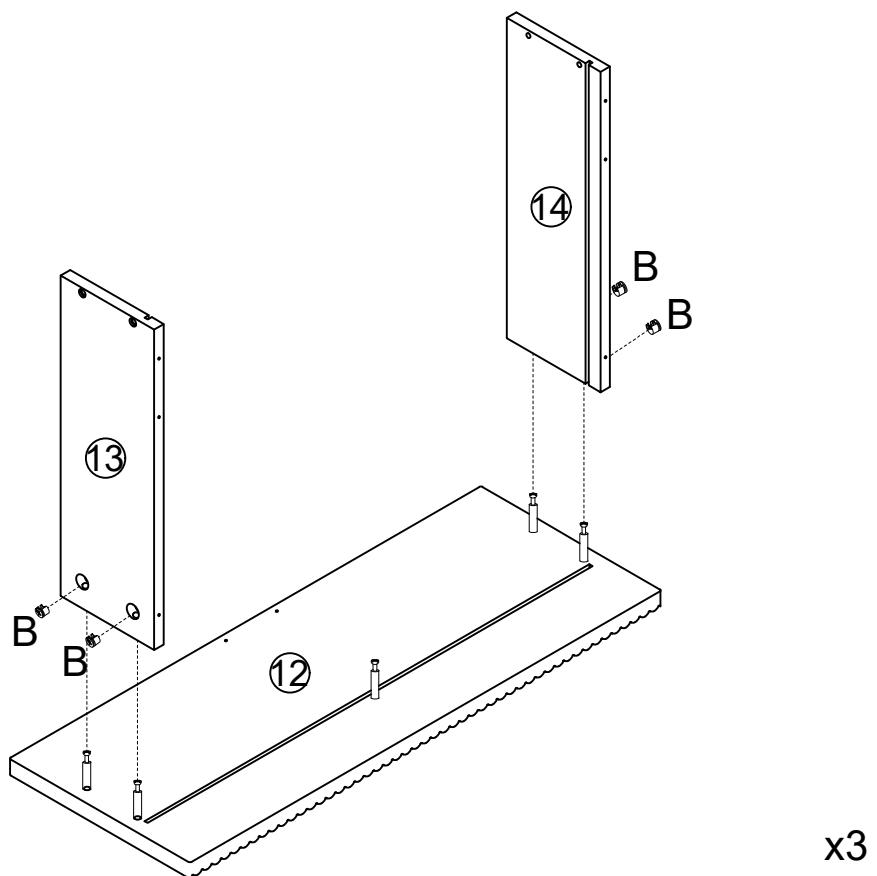


STEP 16

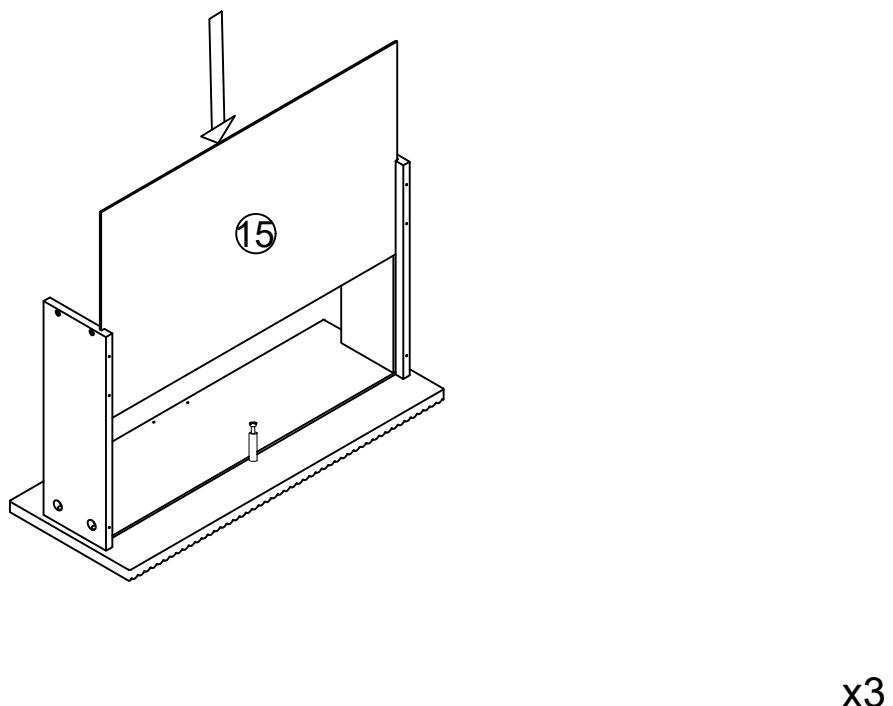

STEP 17


 B×3

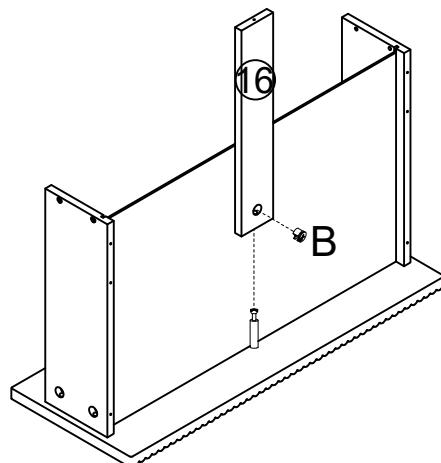

x3

STEP 18


 M×15

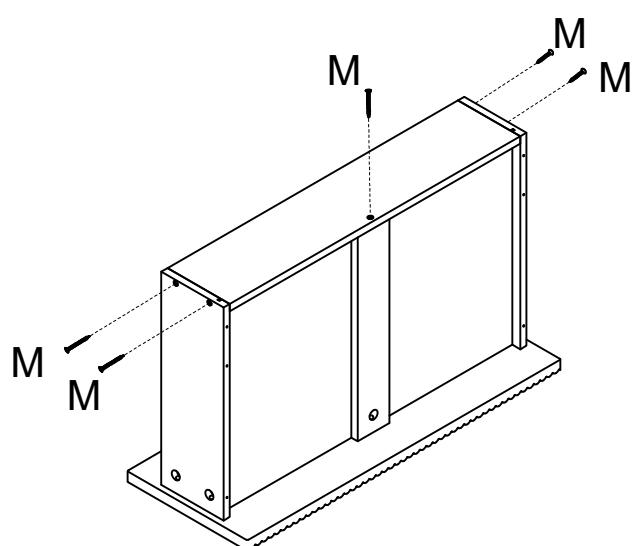

x3

STEP 19


► E×18

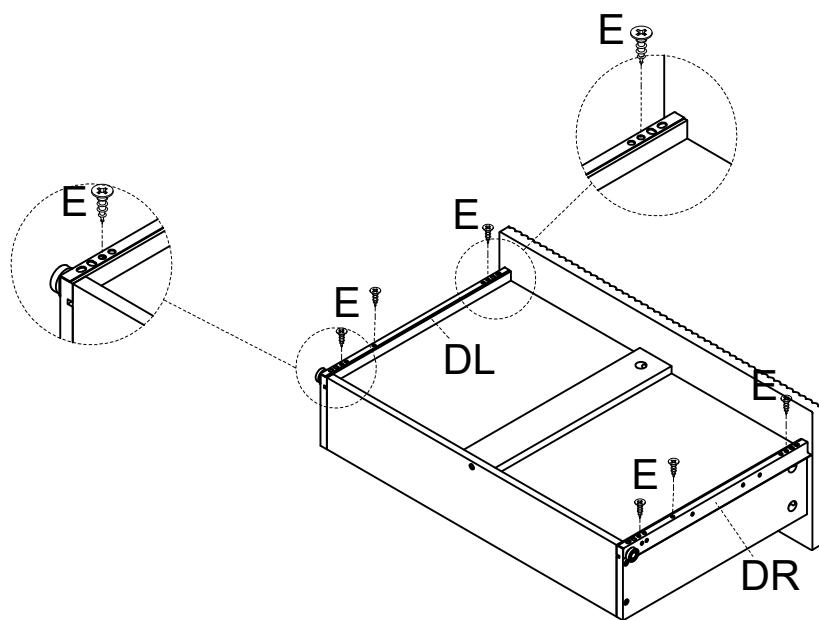

x3

STEP 20



► E×6 ◀ I×3

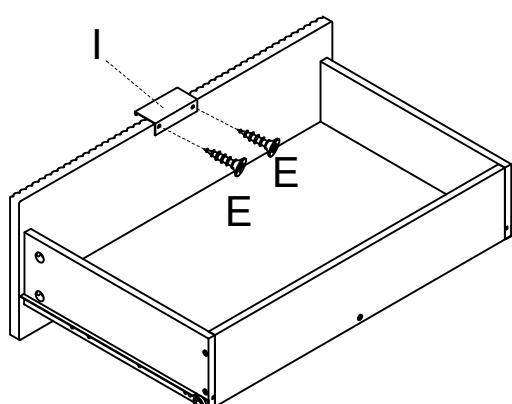

x3

STEP 21


M×2 N×2

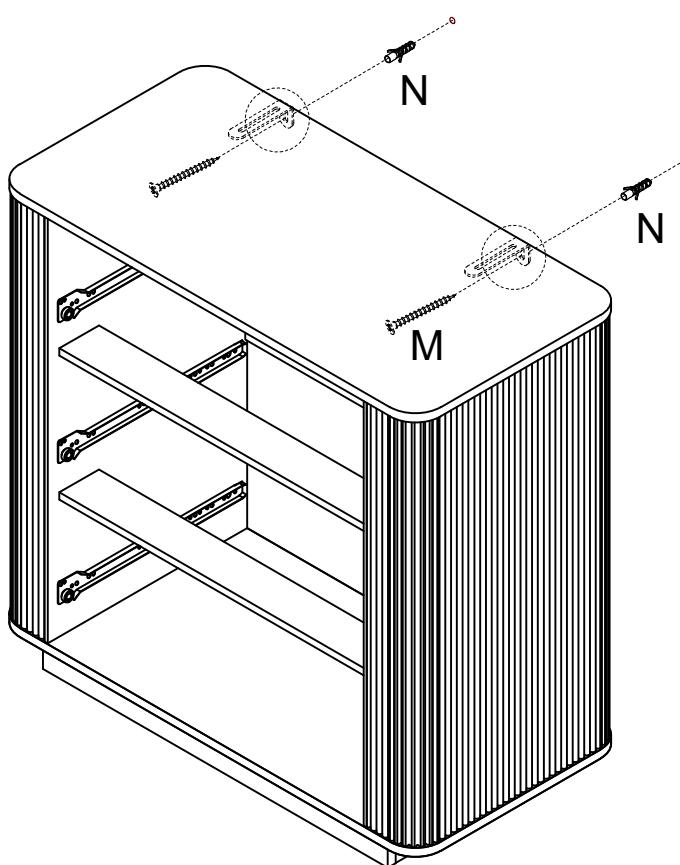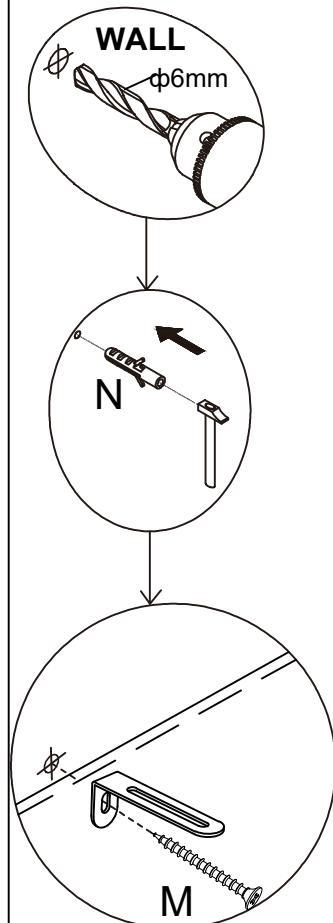

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- Use safety drawer locks to prevent children climbing.
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

WARNING

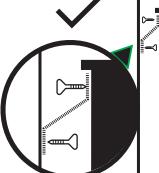

Children have died from furniture tipover.

- **ALWAYS** secure it with an anchor device.
- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

CAUTION: for your safety when attaching the anchor fixing please note the following:


- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



STEP 22

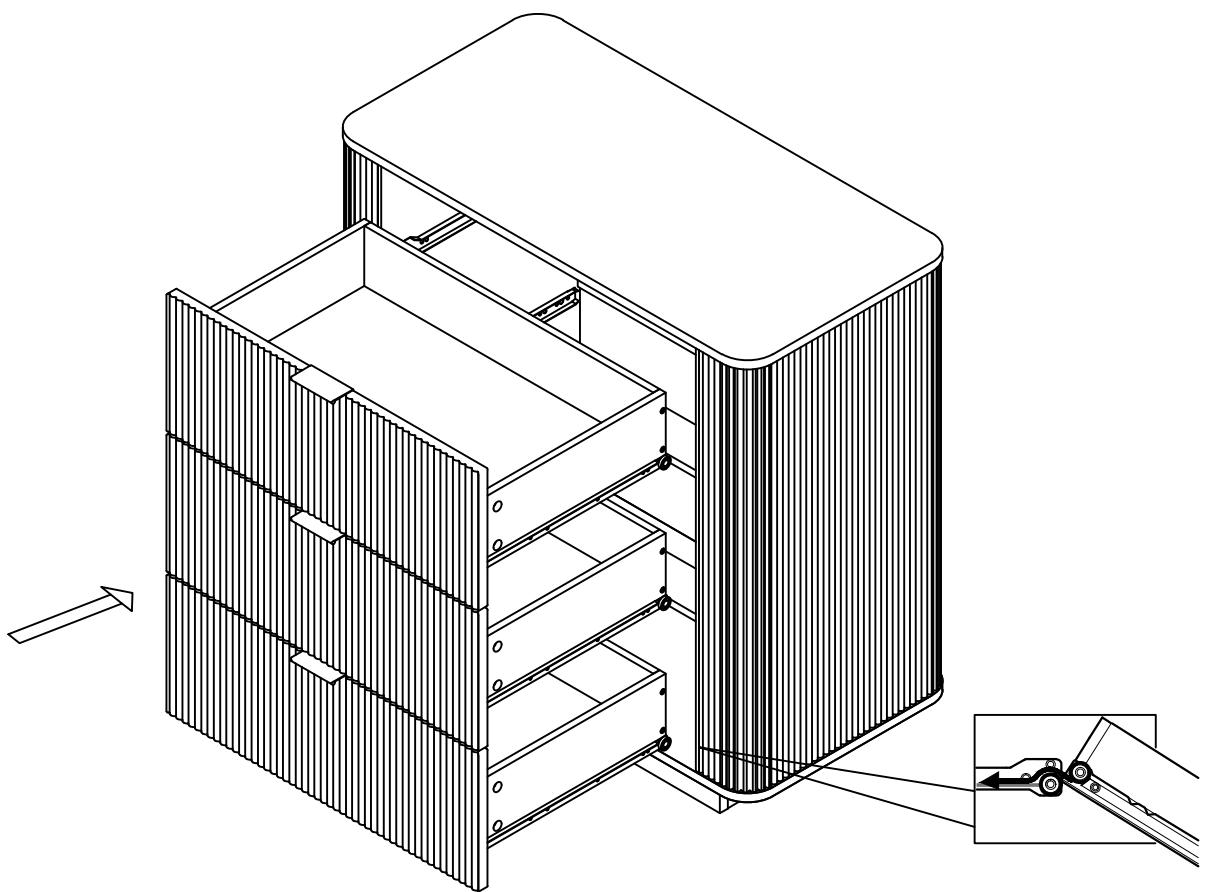

STEP 23

