

115 mm

80 mm

anko

20MP 4K Digital Camera Instruction Manual

K: 43635962 | T: 7802510 Model: JLR-81224



Please read this manual carefully before using the product and retain for future reference.

Package contents:

- 1x Digital Camera
- 1x Instruction Manual
- 1x Camera bag
- 1x Lanyard
- 1x USB-C Cable (Type A to Type C)
- 1x 32GB microSD Memory Card (Pre-installed)


Product Specifications:

- 2.8-inch LCD screen
- Input rating: 5V ~1A
- Video file format: .MOV
- Photo file format: .JPG
- Up to 18x digital zoom
- Up to 4K video resolution
- Up to 20MP image resolution
- Expandable microSD card slot up to 128GB (32GB microSD memory card included)
- Battery capacity: 3.7V, 2000mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

- Replacement of a **battery** with an incorrect type can defeat **safeguard** (for example, in the case of some lithium **battery** types);
- Disposal of a **battery** into fire or a hot oven, or mechanically crushing or cutting of a **battery**, can result in an **explosion**;
- Leaving a **battery** in an extremely high temperature environment that result in an **explosion** or the leakage of flammable liquid or gas;
- A **battery** subjected to extremely low air pressure that may result in an **explosion** or the leakage of flammable liquid or gas;
- This product contains a **rechargeable lithium-ion battery** (non-replaceable).
- Do not leave the device connected to the charger for extended periods.
- Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
- Do not allow the battery to fully discharge before recharging.
- Do not disassemble, crush, puncture, or modify the battery or device.
- Handle with care and avoid strong impacts or dropping.
- Do not charge the device unattended.

Product diagram

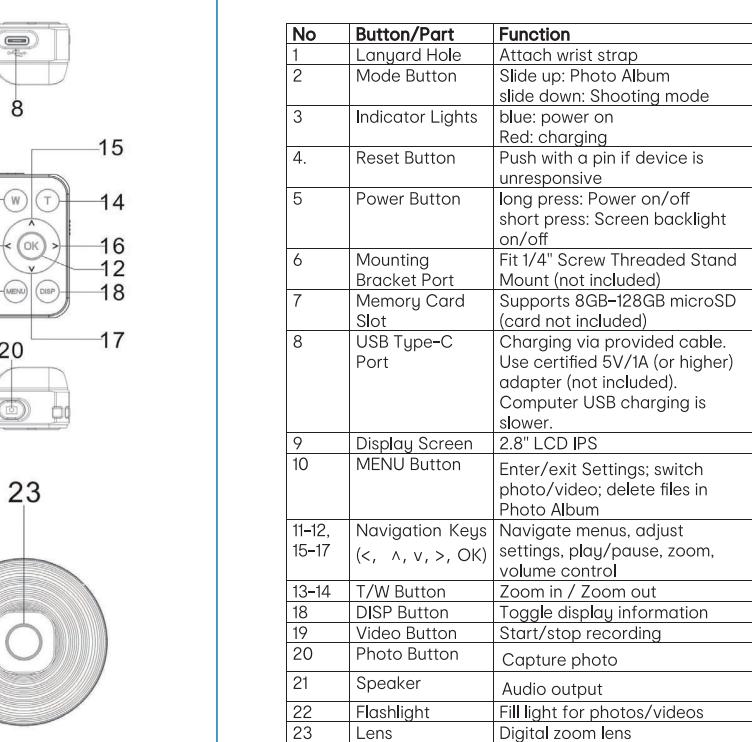

Buttons Instructions:


No	Button/Part	Function
1	Lanyard Hole	Attach wrist strap
2	Mode Button	Slide up: Photo Album slide down: Shooting mode
3	Indicator Lights	blue: power on red: charging
4.	Reset Button	Push with a pin if device is unresponsive
5	Power Button	long press: Power on/off short press: Screen backlight on/off
6	Mounting Bracket Port	Fit 1/4" Screw Threaded Stand Mount (not included)
7	Memory Card Slot	Supports 8GB-128GB microSD (card not included)
8	USB Type-C Port	Charging via provided cable. Use certified 5V/1A (or higher) adapter (not included). Computer USB charging is slower.
9	Display Screen	2.8" LCD IPS
10	MENU Button	Enter/exit Settings: switch photo/video; delete files in Photo Album
11-12	Navigation Keys (<, ^, v, >, OK)	Navigate menus, adjust settings, play/pause, zoom, volume control
13-14	T/W Button	Zoom in / Zoom out
15	OK	The red indicator light stays on while charging and turns off when fully charged.
16	DISP	Toggle display information
17	Video Button	Start/stop recording
18	Photo Button	Capture photo
19	Speaker	Audio output
20	Flashlight	Fill light for photos/videos
21	Lens	Digital zoom lens

OPERATION INSTRUCTIONS

Prepare to Use

Install the memory card

Insert the microSD card as shown until it clicks into place.

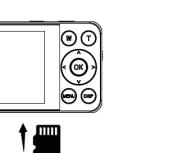


Device Defaults (No Operation)

- Screen turns off after 1 minute.
- Device powers off after 3 minutes.
- To adjust these settings: enter **Settings > Screensaver/Auto Shutdown**, select a time, then press **OK** to save.

Power on/off

- Insert a memory card before using the camera.
- Long press the **Power button** for 3 seconds to turn on or off.

How to take photos

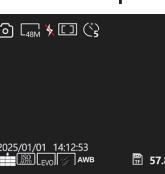

- Set the Mode Button to **Shooting**.
- Short press the **Photo button** to take a picture.
- Use the **[T/W] buttons** to zoom in/out.
- Use the **Up button** to enable/disable flash.
- Use the **[Left < / Right >] buttons** to apply filters.
- Use the **Down button** to set time-lapse (3s/5s/10s/20s).
- To enable Selfie mode, go to **Settings > Selfie Mode**.

How to record a video




- Set the Mode Button to **Shooting**.
- Short press **MENU button** to switch to video mode.
- Short press the **Video button** to start/stop recording.
- Use **[T/W] buttons** to zoom.
- Use the **Up button** to enable fill light.
- Use the **[Left < / Right >] buttons** to select filters.

How to view/delete files

- Set the Mode Button to **Photo Album**.
- Use **[Left < / Right >] buttons** to browse files.
- For photos: use **[T/W] buttons** to zoom; use **[Up/Down/Left/Right] buttons** to move view.
- For videos: Short press **OK** to play/pause; adjust volume (0-8) with **Up/Down buttons**; Long press **[Left < / Right >] buttons** to fast-rewind(-2x)/fast-forward(2x).
- To delete: Short press **MENU button**, confirm with **OK**.

Note: Deleted files cannot be restored. Backup important data.

How to Enter the Settings Menu/Save Settings

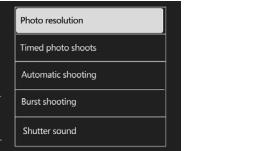

- Ensure the camera is not recording.
- Set Mode Button to **Shooting**.
- Long press **MENU button** to open Settings.
- Select from three menus:
 - Photo Settings**
 - Video Settings**
 - System Settings**
- Navigate with **Up/Down**, confirm with **OK**, return with **MENU**.

Menu Option 1 -- [Photo Settings]

Function	More
Photo resolution	Default: 48M. Option: 3M/5M/8M/10M/12M/16M/20M/24M/30M/44M/48M/56M/64M. Set as you need.
Timed photo shoots	Default: Close Option: Close/3S/5S/10S/20S. Set as you need.
Automatic shooting	Default: Close Option: Close/3S/10S/15S/20S/30S. Set as you need. NOTE: After setting the time, please short press the [Photo] button to turn it on.
Burst	Default: Close Option: OFF/ON. Set as you need.

Function	More
Video resolution	Default: 4K. Option: 4K/2K/1080P/720P. Set as you need.
Mute video recording	Default: OFF Option: ON/OFF. Set as you need.
Burst	Default: Close Option: OFF/ON. Set as you need.

Menu Option 2--[Video Settings]

Function	More
Video resolution	Default: 4K. Option: 4K/2K/1080P/720P. Set as you need.
Focus mode	Default: Auto focus. Option: Fixed focus/Auto focus. Set as you need.
Beauty mode	Default: OFF Option: OFF/ON. Set as you need.
LED indicator	Default: OFF Option: ON/OFF. Set as you need.
Focus mode	Default: Auto focus. Option: Fixed focus/Auto focus. Set as you need.
Beauty mode	Default: OFF Option: OFF/ON. Set as you need.

Menu Option 3--[System Settings]

Function	More
Language	Default: English. Total is 11 Languages Long press [MENU] button, enter [Setting] menu, enter [Language] - Select your native language, short press [OK] to save.
Date-time	Slide down to [Shooting Mode] . Up/Down buttons: increase/decrease the value, Left/Right buttons: switch between year, month, day, hour, minute and second. short press [OK] to save.
Screen rotation	Default: Normal Option: Normal/Black and white/Negative film/Lomo/Dog eye/High Saturation/Binary/Blue/Red/Green/Twinkling Hibiscus purple/Monochrome retro/Landscape/Japanese style/Retro/Beauty skin/Overset/Purple/Sunset. Set as you need.
Selfie mode	Default: OFF Option: ON/OFF. Set as you need. Note: Enable mirror effect when taking photos after set ON option.
Screensaver	Default: 1 Min Option: Close/1 Min/3 Min/5 Min. Set as you need.
Auto shutdown	Default: 3 Min Option: Close/1 Min/3 Min/5 Min. Set as you need.
Power on/off sound	Default: ON Option: ON/OFF. Set as you need.
Focus sound	Default: OFF Option: ON/OFF. Set as you need.
Exposure	Default: 0 Option: 3/2/1/-1/-2/-3. Set as you need.
Light frequency	Default: 50Hz Option: 50Hz/60Hz. Set as you need.
Fill light	Default: OFF Option: ON/OFF. Set as you need.
Key tone	Default: OFF Option: ON/OFF. Set as you need.
Time stamp	Default: OFF Option: ON/OFF. Set as you need.
Format	Slide down to [Shooting Mode] .

Notes:

- Use care when ejecting the removable disk to avoid data loss.
- If the computer does not recognise the device, reconnect or try another USB port/cable.


Common Issues and solutions

Problem	Possible cause	Solution
Device will not power on	Battery low	Charge the battery
Screen turns black suddenly	Power saving enabled/Low battery	Restart or recharge
Cannot record video or take photos	Memory card not formatted/Incompatible or slow card/Write protection enabled	Format the card, use Class 10 or higher, remove write protection
"Memory card error" displayed	Card corrupted or incompatible	Format or replace with a compatible card
Device freezes/unresponsive	Memory card issue	Use a high-quality memory card; press Reset if needed
Photos/videos have abnormal colors	Incorrect settings (exposure, effects, etc.)	Adjust settings or restore factory defaults
Cannot connect to computer	Faulty connection or damaged cable	Reconnect or replace the USB cable
Battery not charging	Unsupported charger	Use a certified 5V/1A (or higher) USB power adapter

Connect to Computer

Use the provided USB-C cable to connect the camera to your computer.

The camera will display selectable modes:

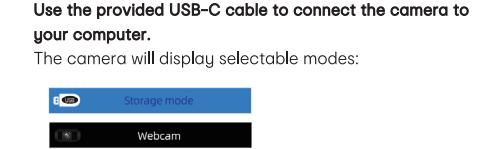

- Storage Mode:** Transfer photos and videos as a removable disk.
- Webcam:** Use the camera as a PC webcam with video chat software.
- Charging Mode:** Charge the camera only (no data transfer).

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

<p