


anko

# 3 Cube with Cubby Storage

## Instruction Manual

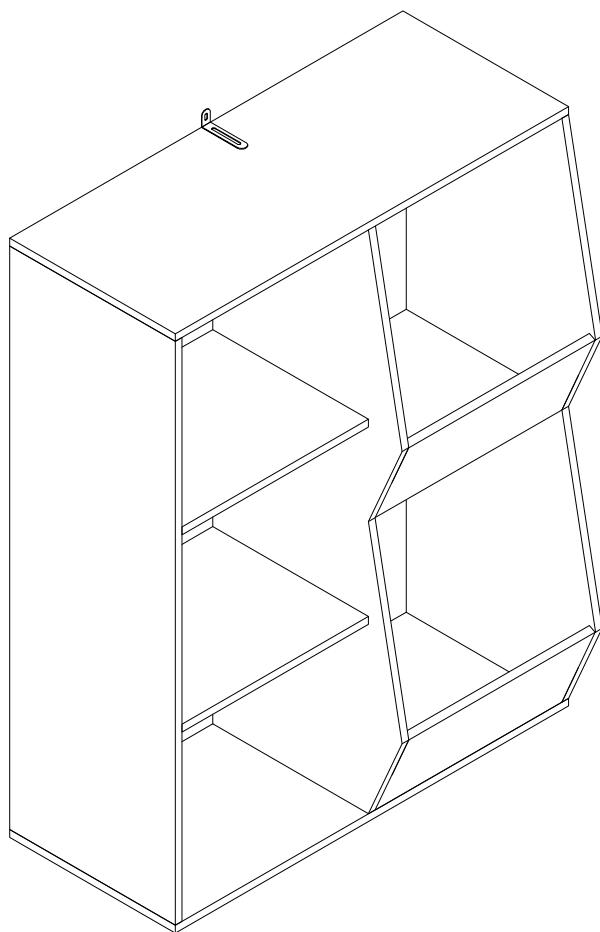

The photos and illustrations shown in this instruction manual are generic.

The manufacturer reserves the right to change any specification or feature without prior notice.

**IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.**

# Assembly Instructions

## 43643462 3 Cube with Cubby Storage

### **WARNING:**

DO NOT STAND, SIT OR LEAN ON THIS UNIT.

DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE.

KEEP AWAY FROM CHILDREN AND BABIES.

ADULT ASSEMBLY REQUIRED.

USE ONLY ON A FLAT SURFACE.

DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

### **CARE INSTRUCTIONS:**

TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE.

WIPE CLEAN WITH A SOFT DAMP CLOTH.

NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS.

CHECK AND TIGHTEN ALL PARTS REGULARLY.

KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT.

STORE IN A DRY PLACE.

FOR INDOOR AND DOMESTIC USE ONLY.

### **MAXIMUM SAFE LOAD:**

**10KG FOR TOP PANEL, 5KG FOR EACH SHELF.**


## 1 Hardware List

A		M6x35mm	26pcs	B		Ø15x9mm	26pcs	C		Ø6x30mm	28pcs	D		M4x35mm	7pcs
E			8pcs	F		M3x16mm	8pcs	G			1pcs	H		M4x12mm	2pcs
I			1pcs	J			14pcs								


## 2 Parts List

① 1PC	② 1PC	③ 1PC	④ 1PC
⑤ 1PC	⑥ 2PCS	⑦ 2PCS	⑧ 1PC
⑨ 1PC	⑩ 1PC		


## PANEL LAYOUT

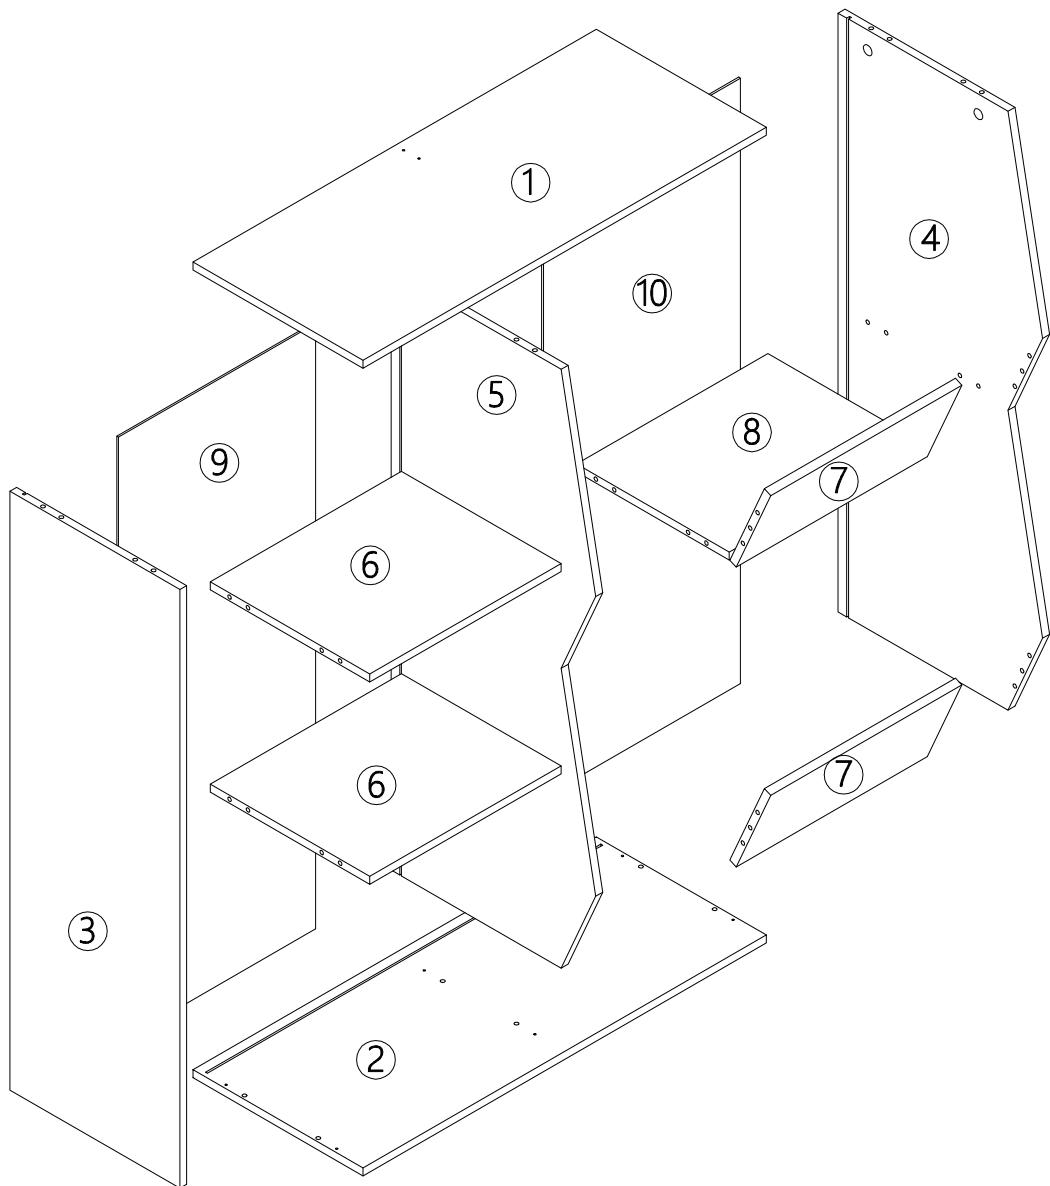



## STEP 1

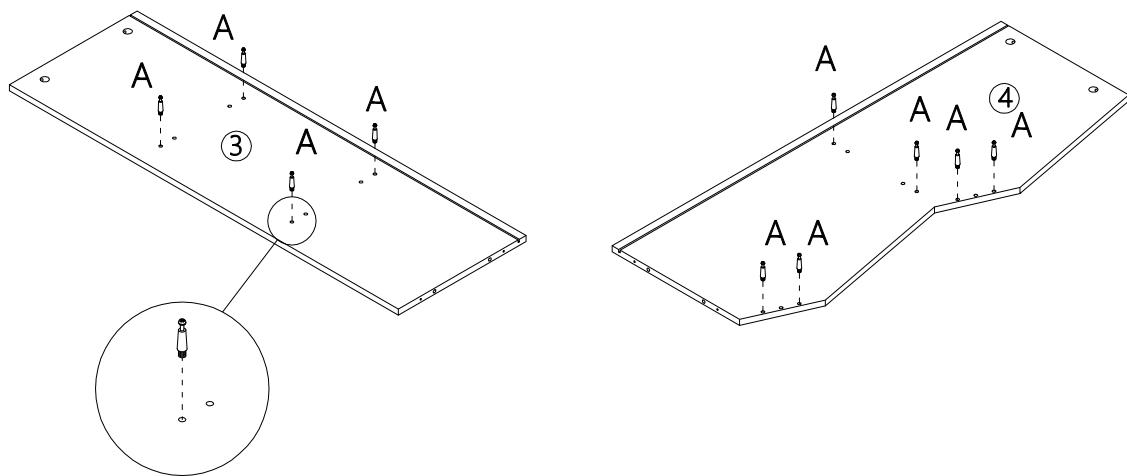

## STEP 2


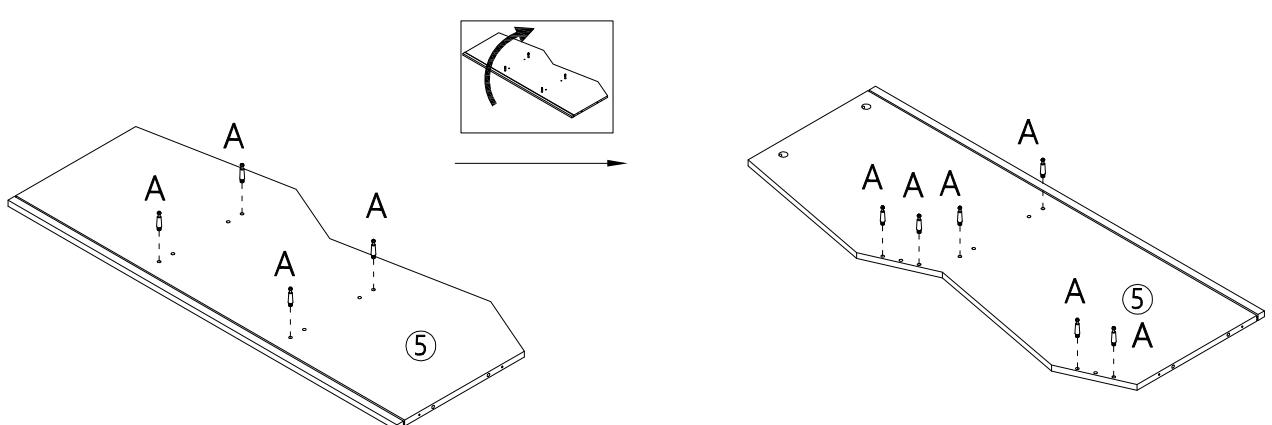


## STEP 3

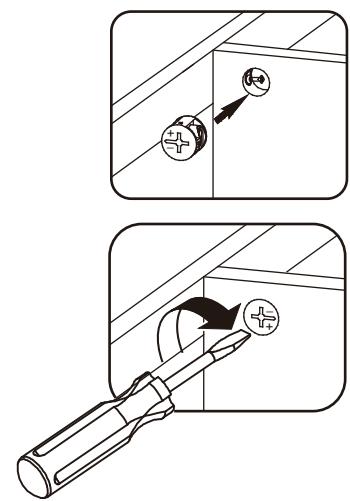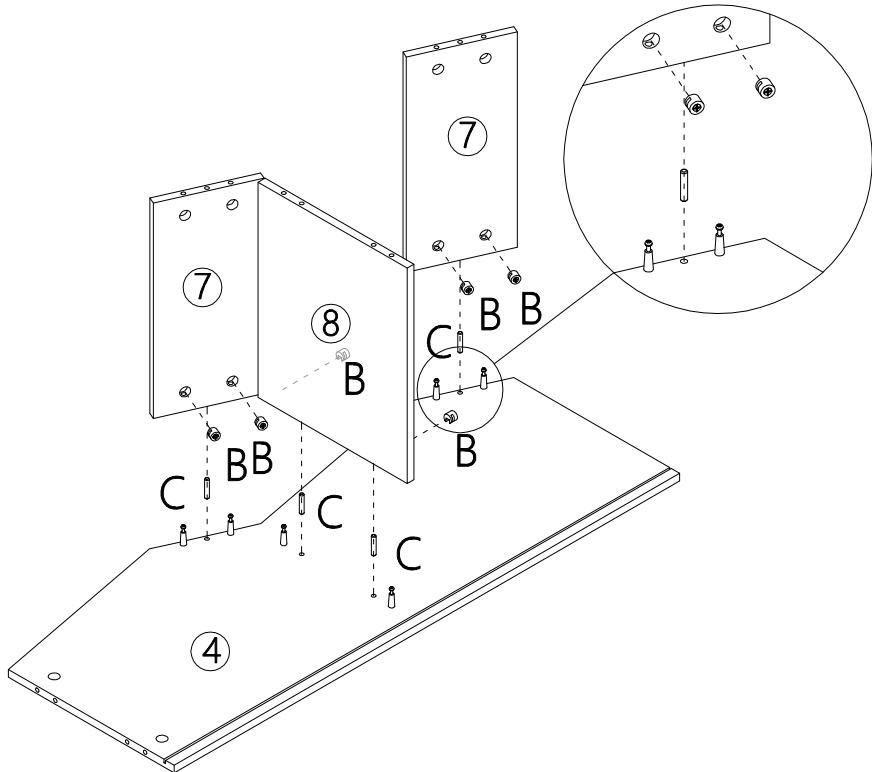




B - x 6 C - x 4

## STEP 4

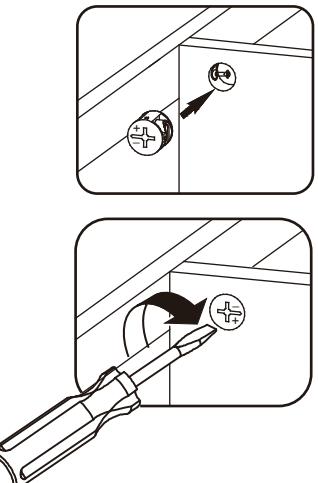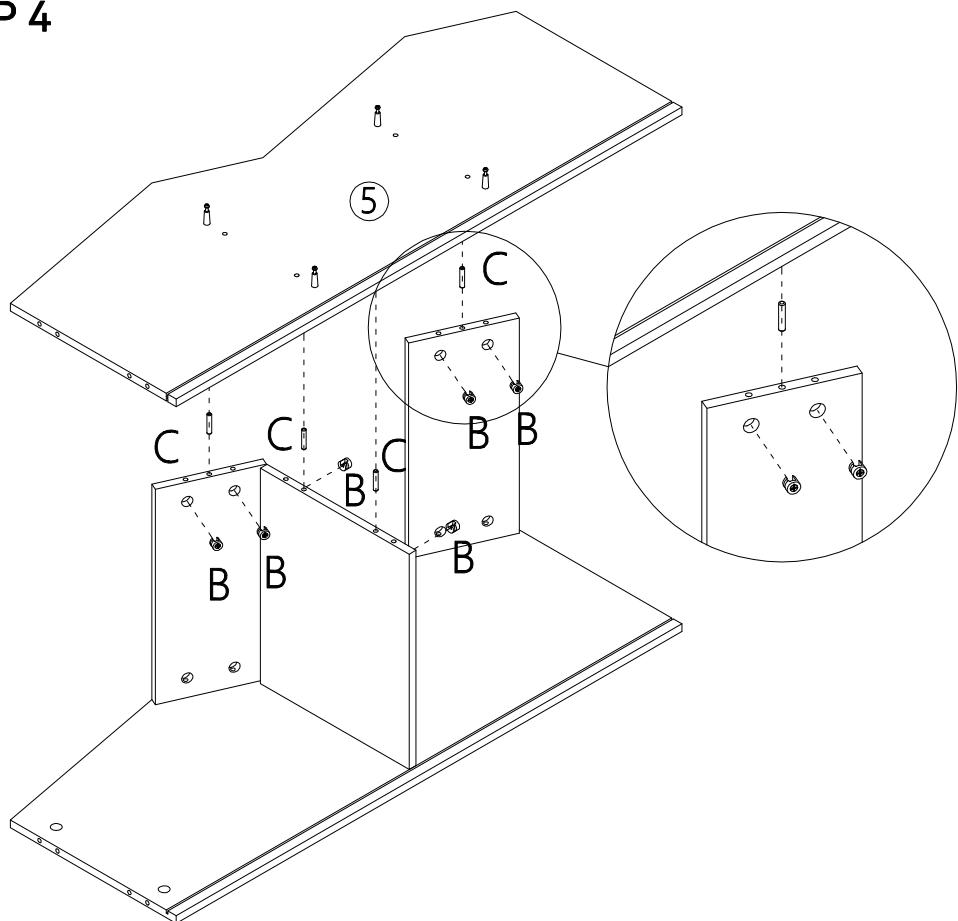




B - x 6 C - x 4

## STEP 5

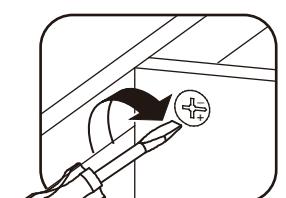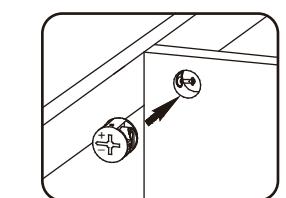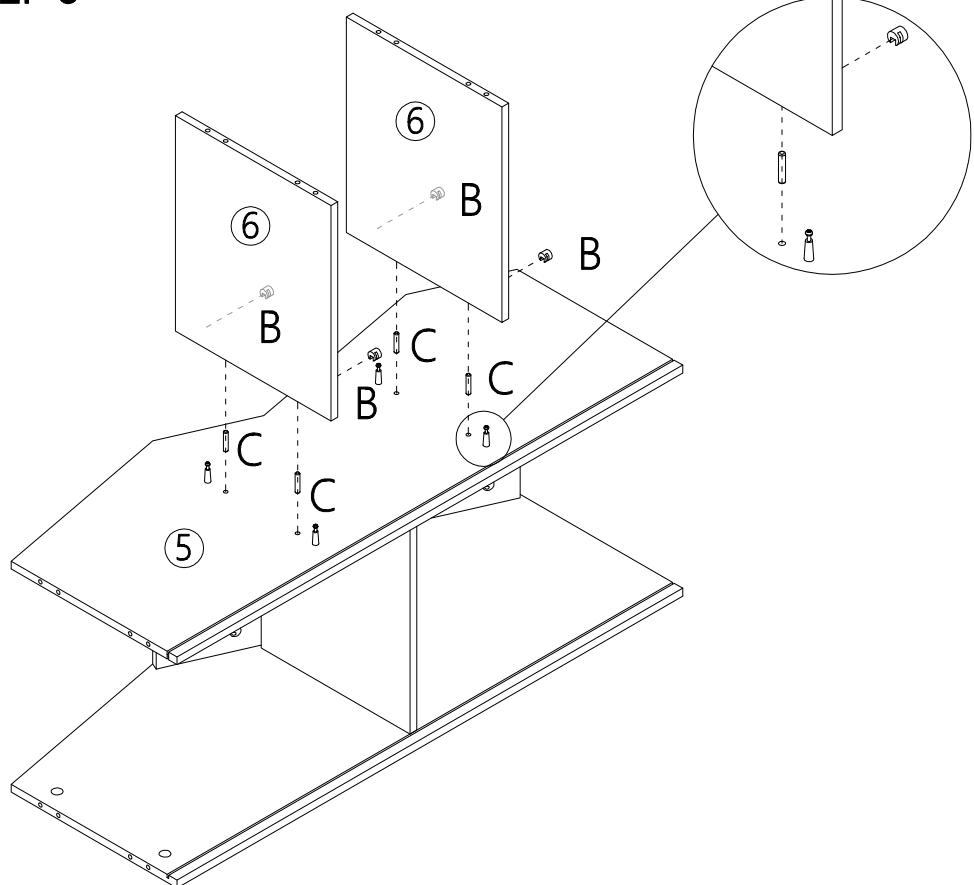


B - x 4 C - x 4

## STEP 6

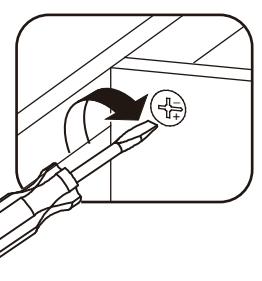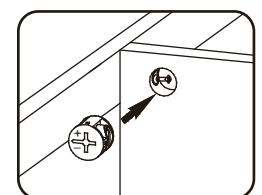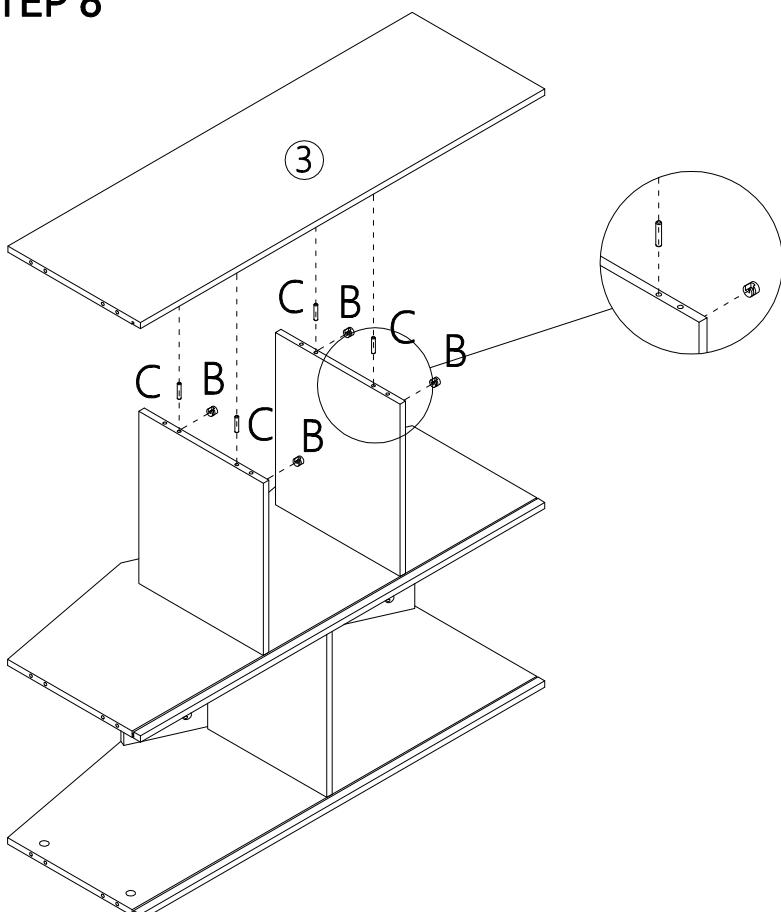



B - x 4 C - x 4

## STEP 7

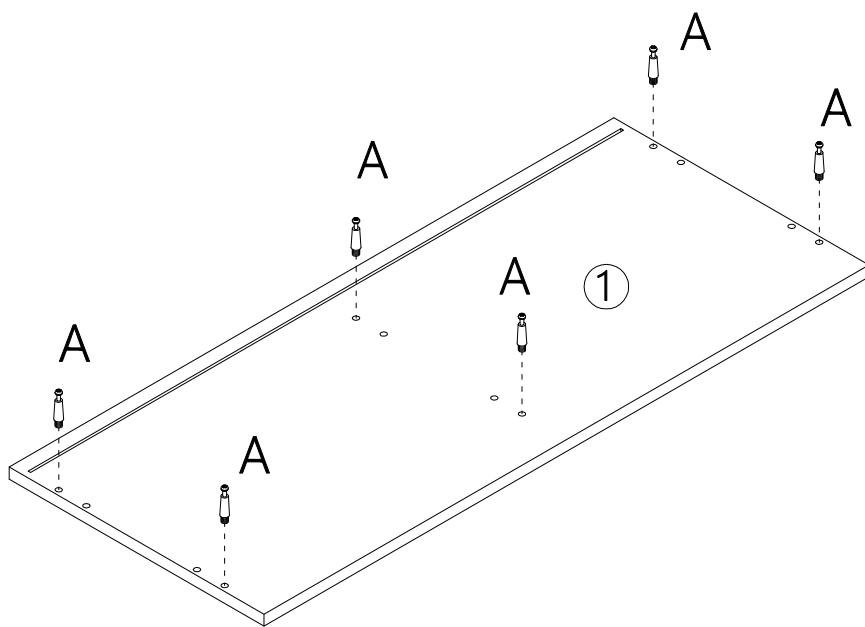


A -  x 6

## STEP 8

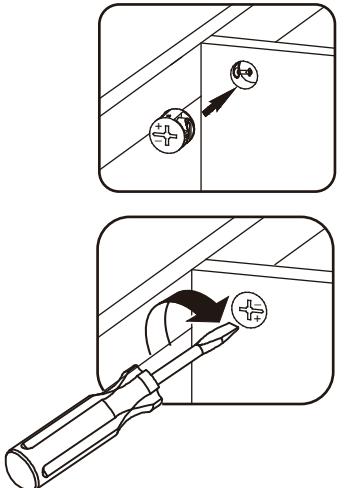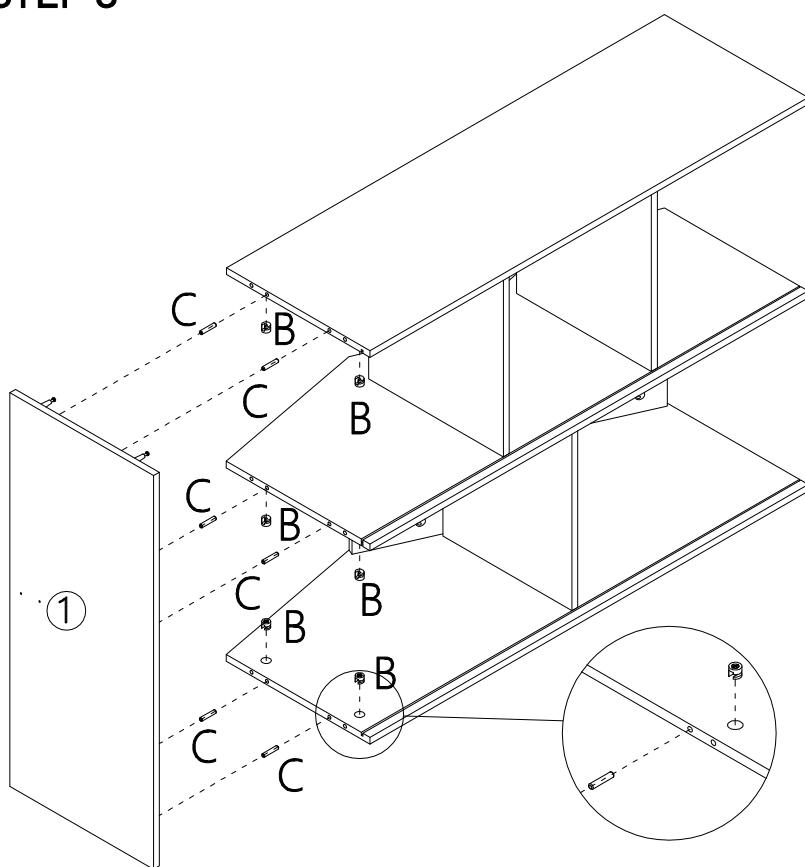


B -  x 6 C -  x 6

## STEP 9

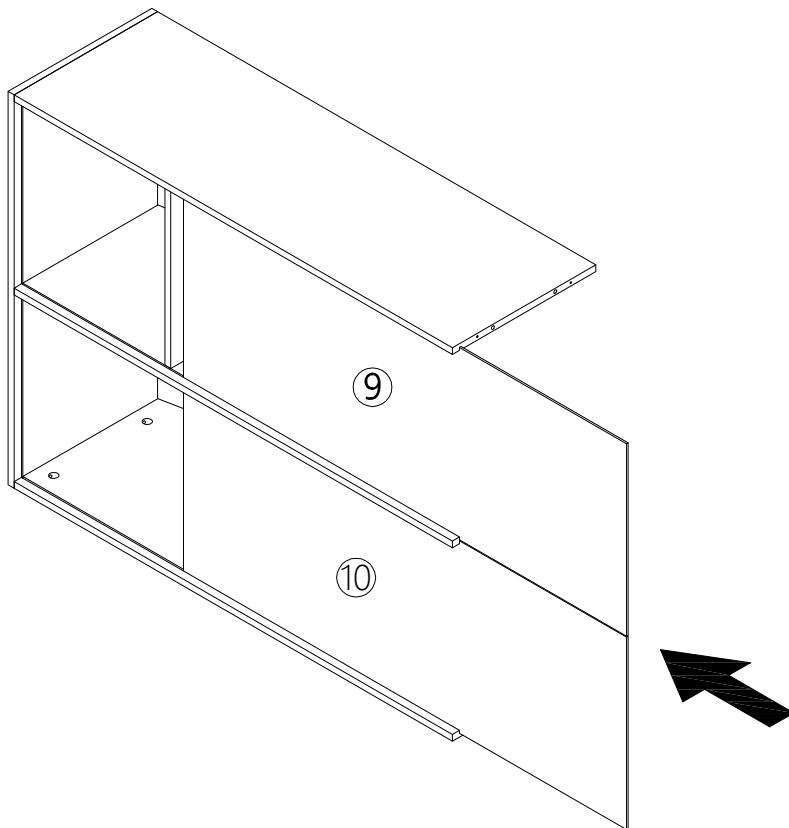


## STEP 10

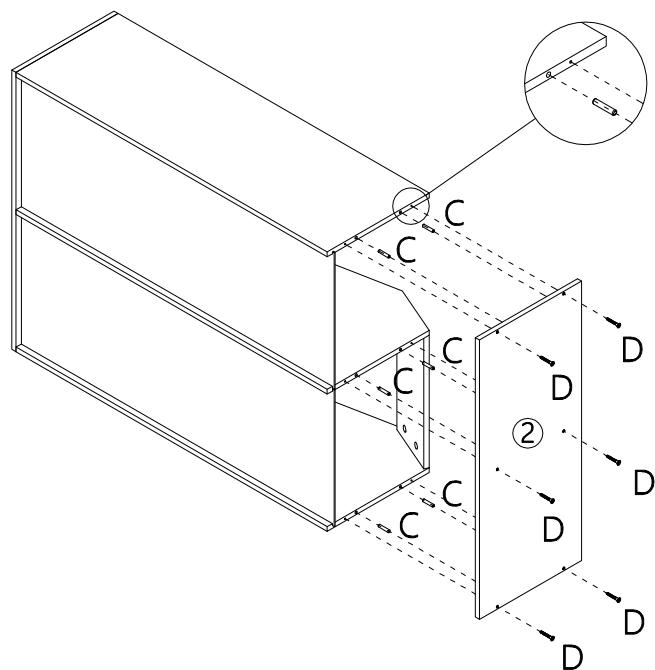


C - x 6 D - x 6

## STEP 11

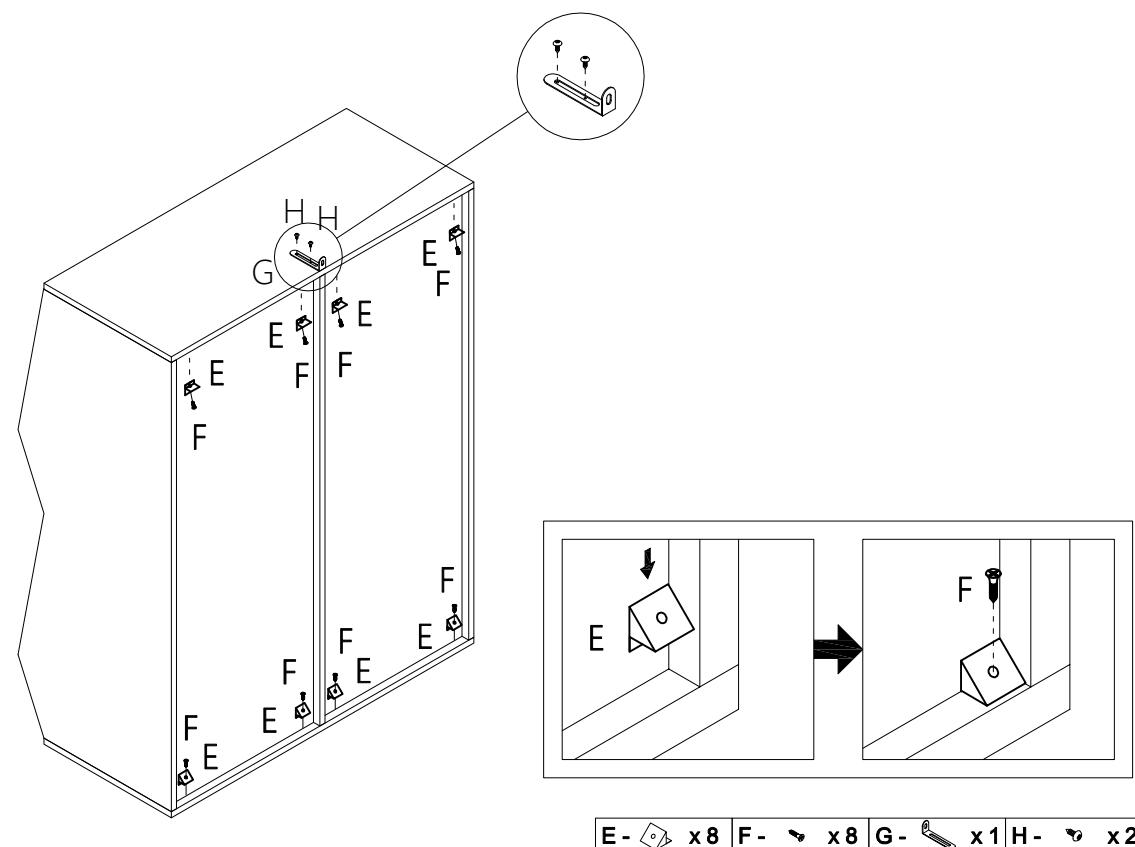


## STEP 12

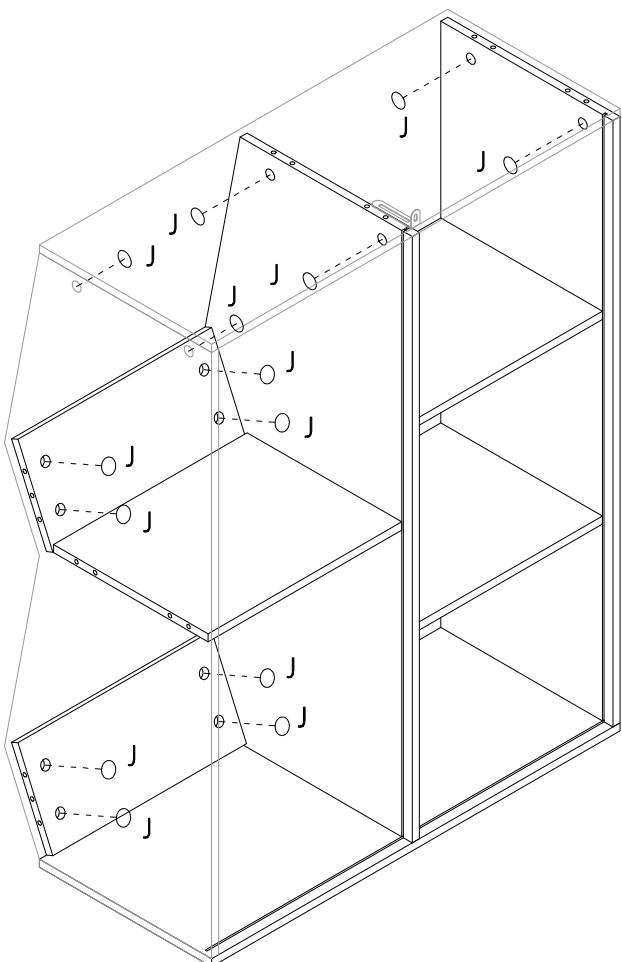

J - x14

## STEP 13

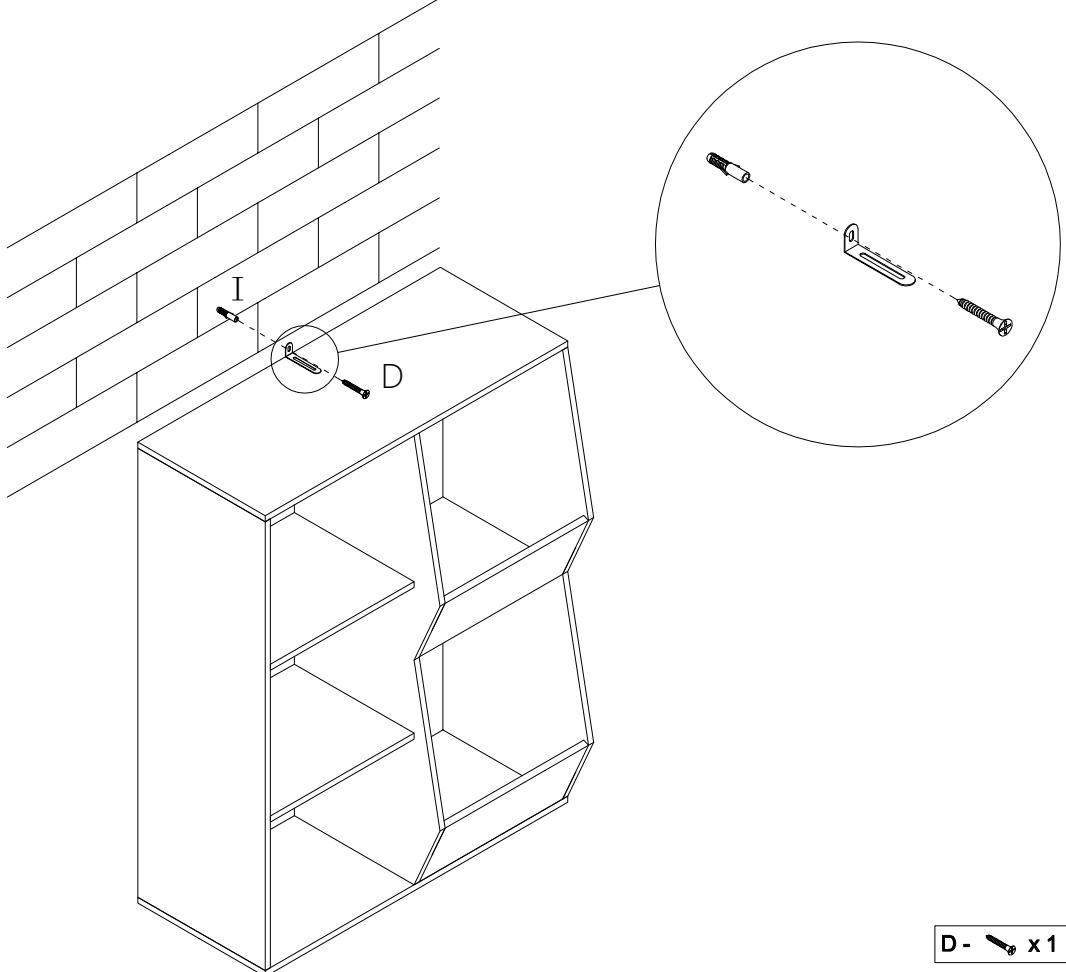

D - screw x 1 | I - screw x 1



### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

