 


5+

HELLO KITTY AND FRIENDS CLAW MACHINE

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.

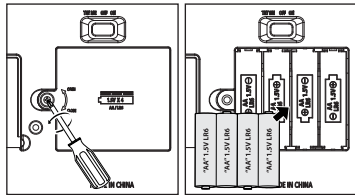

 
WARNING:
CHOKING HAZARD- Small parts and small balls.
Not for children under 3 years.

ATTENTION! The small toys and balls in this machine are not real food. Do not eat! This machine is not designed to contact with real food, please do not put real food in the machine.

IMPORTANT

READ THIS MANUAL before attempting to operate the device.
SAVE THIS MANUAL. This manual contains important operating instructions for this device.

PARTS DETAIL

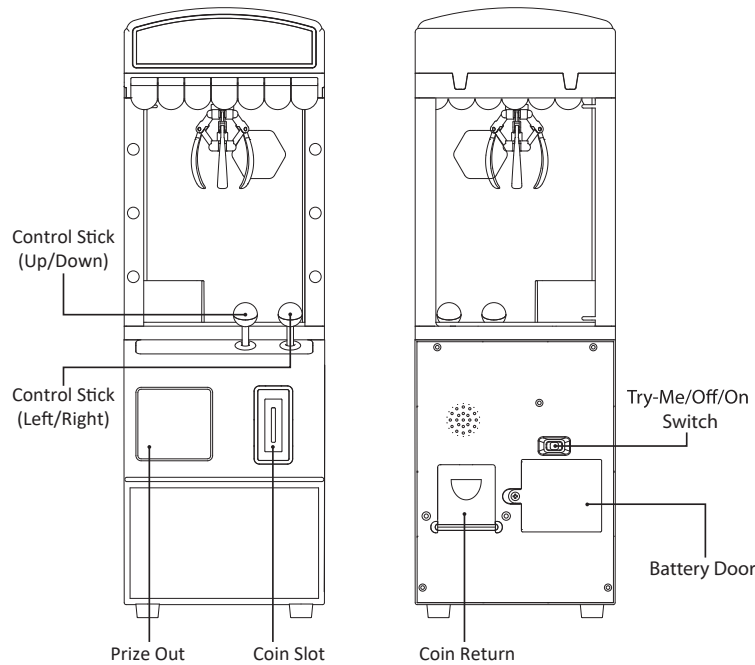

Empty Balls X 8



Mini Sanrio Figures x 4

 


Surprise Ball x 4
Catch the Ultra
Rare Surprise!




Play Coins X 10

OPERATION INSTRUCTION

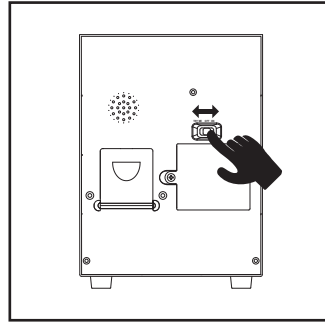

 
For normal play, turn Switch to **ON** position

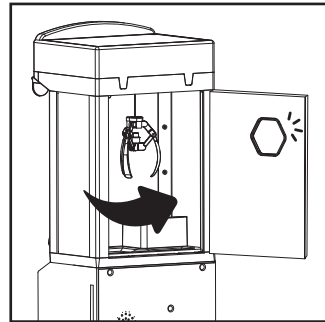

To insert prizes, open back door of the device or place prizes through small hole on the back door.

ATTENTION! The mechanism of the claw and or the Drop Area may not be compatible with objects other than items supplied with this set.

 Use only Play Coins, Prizes and Balls supplied with this device to ensure the safety of the user and the proper function of the device.

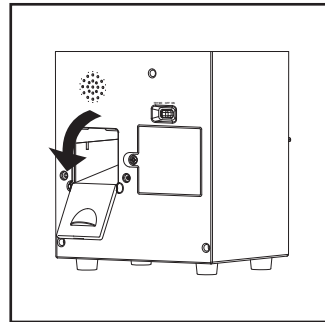


Inserted play coins can be retrieved from the Coin Return

HOW TO PLAY

1. Insert **Play Coin** into **Coin Slot** to start game. User will have 30 seconds to successfully win a **Prize**!

 ***NOTE:** One game requires one **Play Coin** to be inserted

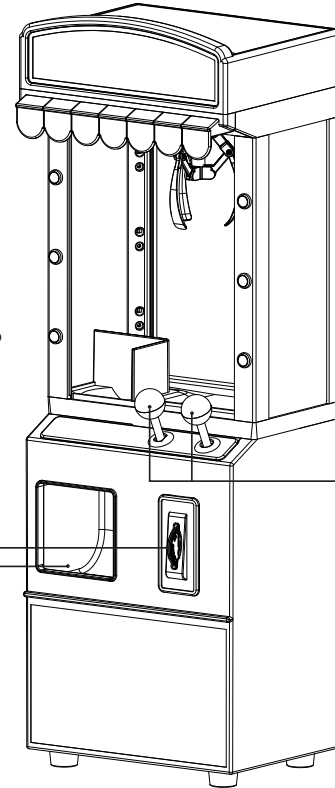


2. **Control**
- Use the **Left Control** to move Claw Up and Down.
- Use **Right Control** to move Claw Front, Back, Left, Right

3. If you successfully deliver the **Prize** into the **Prize Out**, Congratulations! Listen for reward music and grab your Prize.

4. If you were unsuccessful getting a **Prize**, do not be discouraged! Insert another **Play Coin** and try again!

 CARE INSTRUCTION

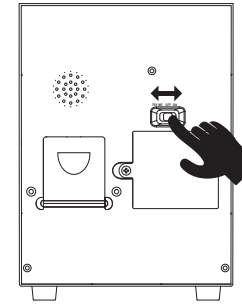

- For better battery life, please switch the device to OFF after play.



ATTENTION!
Please DO NOT try to move/pull the claw manually!



USED UNDER LICENSE.
SANRIO GMBH
©2026 SANRIO CO., LTD.