

Jungle Baby Bouncer Instruction Manual

0-6
months

9
kg
MAXIMUM
WEIGHT
OF CHILD

IMPORTANT: KEEP FOR FUTURE REFERENCE



Scan here to view
assembly video.

IMPORTANT!
KEEP FOR FUTURE REFERENCE

WARNING

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE
USE AND RETAIN THEM IN A SAFE PLACE FOR FUTURE
REFERENCE.

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT
IN SERIOUS INJURY OR DEATH.

Adult assembly required.

K: 43-691-371 | T: 72-389-034

MADE IN CHINA


CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

PARTS

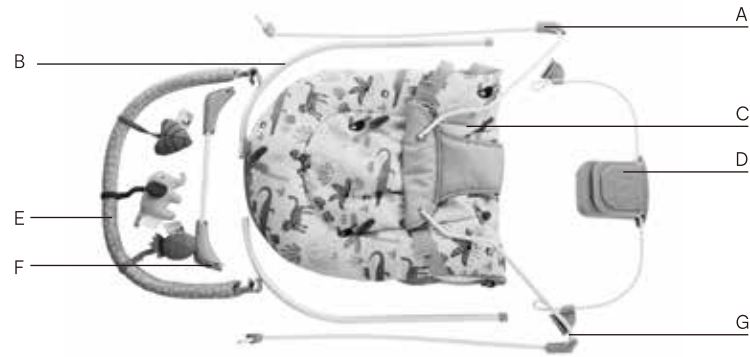

A

Left Base Frame

B

Split Back Frame-
Left And Right
Sides Need To Be
Connected

C

Seat Pad

D

Foot Rest Frame
With Vibration Unit

E

Toy Bar And
Detachables
Toys (Toys
May Vary)

F

Base Connector
with flip clips

G

Right Base Frame

ASSEMBLY

1 - Base Assembly

Place the left and right base frames and base connector on a flat surface. Ensure the edge of the rubber grip is touching the ends of the base connector. Slide the base connector into the left base frame. Push gently on the flip clip until you hear a 'click'. Repeat step 1 with the right base frame. (Fig 1a , b and c)

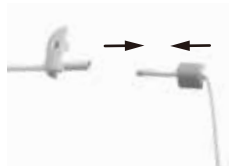


Fig 1a



Fig 1b



Fig 1c

2 - Foot rest frame

Slide the looped ends of the foot rest over the left and right base frames. Please follow the direction of the 'wings'. (Fig 2)

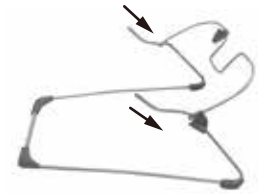


Fig 2

3 - Split back frame

Slide the left and right sides into each other, ensuring that the silver locking button is securely locked into place. (Fig 3a)

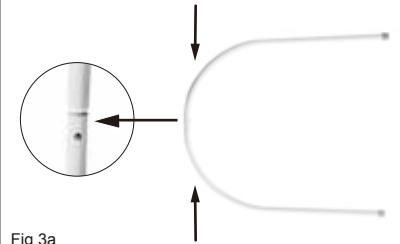


Fig 3a

Slide the connected back frame onto the left and right base frame and press securely into place. Ensure the silver buttons are locked into place. (Fig 3b)

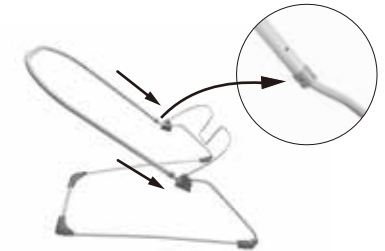


Fig 3b

4 - Battery Installation

Using a small Phillips head screwdriver, open the battery compartment cover on the vibration unit. Insert the number of alkaline batteries as indicated inside the battery compartment. Close the compartment door. Replace and tighten the screw. The vibration unit can then be slotted into the foot rest frame. (Fig 4)

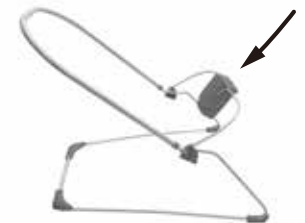


Fig 4

5 - Seat pad

Slide the seat pad over the back frame.
Raise the foot rest frame and slide the seat pad over it. (Fig 5a)

The front of the vibration unit should be visible through the seat pad opening.
(Fig 5b)

6 - Foot rest clips

Once the seat pad has been positioned into place, push on the foot rest using one hand and snap in plastic clip using the other hand until you hear a 'click'. Repeat on the other side (Fig 6)

IMPORTANT

Ensure the foot rest clips are snapped securely into place prior to use.

7 - Adjustable seat restraint

Place baby in the bouncer with the seat restraint positioned between its legs.

Fasten the buckles on both sides of the restraint, pressing until you hear a 'click'. Ensure the restraint is secured correctly by pulling it away from baby's body.

It should remain fastened. (Fig 7a and b)

Fig 5a

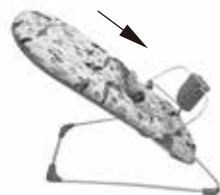


Fig 5b

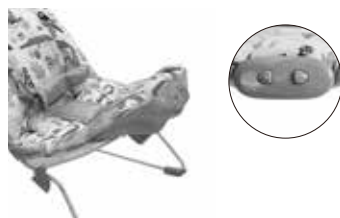


Fig 6

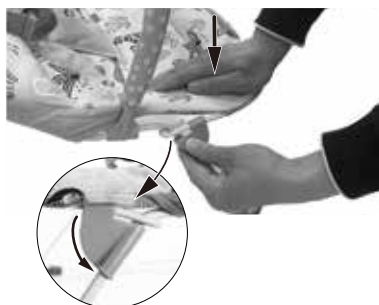


Fig 7a

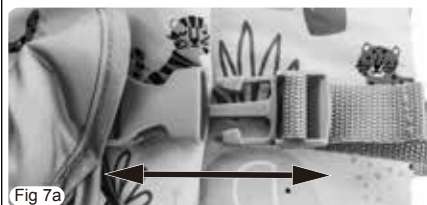


Fig 7b



8 - Toy bar

Clip the toy bar to the seat frame just above the seat restraint. (Fig 8)

9 - vibration unit

To activate the vibration and musical feature, press the buttons on the front of the unit. (Fig 9)

Fig 8


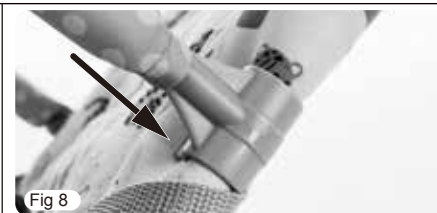


Fig 9

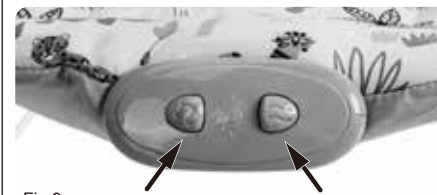

CAUTION

- This product requires 2 x 1.5V C batteries. (Not Included).
- To insert /replace the batteries:
Loosen the screw on the battery compartment cover of the vibration unit and open the compartment. Insert batteries into space provided with the correct polarity (as shown on the product). Close the compartment, and screw shut securely.
- CAUTION : Battery Safety
Always keep batteries and tools out of reach of babies and children.
Always remove exhausted batteries from the toy to avoid leakage from the batteries which can be dangerous and damage the product.
Remove the batteries if the toy will not be used for a long period of time.
Only use alkaline batteries of the same type or equivalent to the type recommended for the correct function of this product.
Never mix new and old or different types of batteries.
When fitting new batteries, always ensure that they have been fitted in the correct polarity (+ AND -) as shown on the product.
Do not burn or dispose of exhausted batteries into the environment.
Dispose of batteries at an appropriate differentiated collection point.
Do not short circuit the battery terminals.
Never attempt to recharge non-rechargeable batteries, they may explode.

GENERAL CARE & CLEANING

CARE INSTRUCTIONS:

SEAT PAD:

WIPE CLEAN WITH DAMP CLOTH

DO NOT BLEACH

DO NOT TUMBLE DRY

DO NOT IRON

DO NOT DRY CLEAN ☒

BOUNCER:

WIPE WITH A DAMP CLOTH AND DRY IMMEDIATELY WITH A SOFT CLEAN CLOTH.

DO NOT USE ABRASIVE PADS, BLEACH OR STRONG HOUSEHOLD CLEANERS AS DAMAGE MAY RESULT.

TOY/TOY BAR:

WIPE CLEAN WITH DAMP CLOTH

DO NOT BLEACH

DO NOT IRON

DO NOT DRY CLEAN ☒

MAINTENANCE

General Care

- Regularly inspect all tubes and fixings. Ensure that all are secure before each use of the product.
- Do not use if any parts are broken / missing.
- Regularly inspect fabric and stitching to ensure that it is undamaged.
- Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

SAFETY WARNINGS

WARNING

- DO NOT USE THIS PRODUCT FOR INFANT SLEEP.
- DO NOT LEAVE AN INFANT IN THIS PRODUCT UNSUPERVISED.
- INFANT SHOULD BE PLACED TO SLEEP ON A FIRM, FLAT SURFACE.
- PLACE INFANT ON THEIR BACK WHEN USING THIS PRODUCT.
- DO NOT PUT OBJECTS OR ACCESSORIES IN AN INFANT'S SLEEP ENVIRONMENT.
- DO NOT PLACE THIS PRODUCT NEAR A BLIND, CORD, STRAP OR SIMILAR ITEM THAT COULD BECOME WRAPPED AROUND AN INFANT'S NECK.

- Check this product regularly before using it, and do not use it if any part is loose or missing or if there are any signs of damage. Do not substitute parts. Contact the retailer if replacement parts or additional instructions are needed.
- WARNING: Never leave the child unattended in the bouncer.
- WARNING: It is dangerous to put this bouncer on an elevated surface.
- Always use this bouncer on a level floor.
- Always ensure that the harness is fastened and adjusted at all times.
- Do not use near stairs / steps.
- Do not position the bouncer close to a source of heat e.g. household electric fires etc.
- Do not position close to items such as curtains and electrical cables as they could pose a danger of suffocation or strangulation.
- Never use in a vehicle as a child restraint.
- Never pick the bouncer up when the child is in it.
- Store the bouncer out of the reach of children when not in use.
- WARNING : Do not use the bouncer once your child can sit up unaided. (approximately 6 months or 9kg).
- WARNING : Never use the toy bar to carry the bouncer.
- This bouncer does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.