

Electric Tabletop BBQ

JB-B05W

User Manual

PLEASE READ AND SAVE THESE

INSTRUCTIONS FOR FUTURE REFERENCE

When using any electrical product, always follow these basic safety precautions:

READ ALL INSTRUCTIONS BEFORE USE.

Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

To protect against risk of electrical hazards, do not immerse the main unit with heating element and power cord or plug in water or any other liquid.

For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.

Place the cord in such a way that pulling or tripping over it is not possible.

Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.

The power socket must be readily accessible so that the appliance can be unplugged in an emergency.

This appliance is intended to be used indoors in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

The appliance is intended for household use only. Do not use outdoors or for commercial purpose.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.

Do not operate the appliance if damaged or malfunctions.

Do not touch hot surfaces and heating element.

Do not place on or near a hot gas or electric burner, or in a heated oven.

Do not use an extension cord with this appliance.

Do not attempt to dismantle and repair the appliance by yourself. DANGER OF AN ELECTRIC SHOCK AND/OR FIRE! Any repairs to the product should be carried out by a qualified electrical person.

Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.

IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.

Do not operate your appliance inside a cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.

This appliance is not intended to be operated by means of an external timer or separate remote-control system.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

Caution! hot surface. Care must be taken. The surfaces will get hot during and immediately after use.

WARNING: Charcoal or similar combustible fuels must not be used with this appliance.

For cleaning, please refer to section "CLEANING AND STORAGE".

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

IMPORTANT! Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

Unpack the appliance and check if all parts are there and undamaged.

Clean the appliance following the section "Cleaning and Storage".

WARNING! Do not immerse the main unit in water or any other liquid to clean.

Assemble the appliance, make sure that the main unit is firmly locked by the Locating pin that it can't be moved in a horizontal direction.

Place the appliance on a flat, solid, clean, dry and heat-resistant surface. Ensure a minimum of 30 cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.

Fill water into the drip tray. The water level should not be below the MIN line or beyond the MAX level line marked on the drip tray.

NOTES: The greasy dirt may drop during cooking, the water will not only help to reduce haze and odour, but also makes cleaning the drip tray much easier after use.

Make sure the On/Off/Temperature control knob is at the "OFF" position. Connect the appliance to a mains power outlet socket.

WARNING! Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V~ 50-60Hz.

Rotate the On/Off/Temperature control knob to set the desired temperature, the red heating indicator lights up and the appliance will begin to heat.

It will take approximately 5 minutes to reach the recommended grill temperature. The red heating light will turn ON and OFF during use to maintain the set temperature.

Note: On first use, there may be a small amount of haze / smoke and an odour emitted from the appliance. This is perfectly normal and will subside after a few minutes of use.

WARNING! DO NOT touch hot surfaces, the surface will get hot during use.

Brush the grill with a small amount of vegetable oil.

Place the food on the grill. It takes approx. 15 minutes to cook the chicken wings and chops, approx. 10 minutes to cook vegetables.

Rotate the On/Off/Temperature control knob to adjust the temperature during cooking if needed.

Rotate the On/Off/Temperature control knob to the "OFF" position after cooking and remove the food from the grill with a heat-proof plastic, silicone or wooden utensil.

WARNING!

Never use sharp forks, knives or other metal utensils to remove or cut food on the grill, as this would damage the cooking surface.

After using the appliance, disconnect the power plug from the mains power outlet socket.

WARNING! Do not leave the appliance unattended during and immediately after use.

This appliance should be cleaned after each use.

CAUTION: Do not immerse the main unit in water or in a dishwasher!

Always unplug the appliance from the mains power supply before cleaning or during maintenance.

Ensure that the appliance has completely cooled down before cleaning, as it gets very hot during use.

Clean the main unit with a damp cloth, dry thoroughly.

Clean the grill with warm soapy water, rinse and dry thoroughly.

Wipe the heating element with a damp cloth, or apply dish soap on any stubborn oil stains, let sit for 5 minutes, then gently wipe to remove. Wipe off foam with a damp cloth, dry the heating element with a dry cloth. Air dry thoroughly.

WARNING! Do not use any abrasive cleaners (steel wool, etc.) or chemical solutions to clean any part of the product. They could damage the surfaces or cause personal injury.

Store the appliance in a clean dry location and out of the reach of children.

Voltage: 220-240V~ 50-60Hz

Power: 1900-2300W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.