

anko

Pizza Maker

GP9023PRD

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

Read all instructions before using the oven and its accessories.

- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Take inventory of all contents to ensure you have all the parts needed to operate your oven properly and safely.
- DO NOT use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord. Also, Appliances are not intended to be operated using an external timer or separate remote-control system.
- NEVER use the outlet below the counter.
- Keep the appliance and its cord out of reach of children. Do not allow the appliance to be used by children. Close supervision is necessary when used near children.
- DO NOT let cord hang over edges of tables or counters or touch hot surfaces, including stoves and other heating ovens.
- NEVER leave the oven unattended while in use.
- In high-temperature professional programs, NEVER place baking paper on top of accessories. This can cause a fire.
- To protect against electrical shock, DO NOT immerse the cord, plugs, or main unit housing in water or other liquid.
- For electrical safety, do not operate this appliance if the power cord or plug is damaged, if the appliance is damaged in any way, or if it is malfunctioning.
- DO NOT cover the air intake or outlet vents while the unit is operating. Doing so may damage the unit or cause it to overheat.

- DO NOT insert anything in the ventilation slots and do not obstruct them.
- DO NOT place items on top of the surface while the unit is operating.
- Before placing any accessories into the oven ensure they are clean and dry.
- Intended for countertop use only.
- DO NOT place the oven near the edge of a countertop. Ensure the surface is level, clean, and dry.
- DO NOT store any materials, other than supplied accessories into this oven when not in use.
- This appliance is for household and indoor use only. And not for commercial or industrial use
- DO NOT use accessories and attachments not recommended or sold.
- When using this oven, provide adequate space above and on all sides for air circulation. When operating the oven, the rear surface of appliances shall be placed against a wall. Allow a gap of at least 30cm from the wall
- When in operation, keep the appliance away from flammable material. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, or the like.
- Avoid scratching door surfaces or nicking edges.
- DO NOT spray any type of aerosol spray or flavoring inside the oven while cooking.
- Use caution when inserting and removing anything from the oven, especially when hot.
- DO NOT let the food contact with heating element inside. Excessive food loads may cause personal injury or property damage or affect the safe use of the oven.
- DO NOT place any of the following materials in the oven: paper, cardboard, plastic, roasting bags, and the like.

- Extreme caution should be exercised when using containers constructed of any materials other than metal or heat resistive glass.



- **Caution:** The temperature of the accessible surface may be high when the appliance is operating. To prevent burns or personal injury, ALWAYS use protective hot pads or insulated oven mitts.
- Spilled food can cause serious burns. Extreme caution must be used when the oven contains hot food. Improper use may result in personal injury.
- Unplug from the outlet when not in use. To unplug, grasp the plug by the body and pull it from the outlet. Never unplug by grasping and pulling the flexible cord.
- Allow the oven to cool completely before cleaning, moving, and storing. Please refer to the cleaning section for regular maintenance of the oven.
- Cleaning and maintenance shall not be done by children.
- DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing a risk of electrical shock.
- DO NOT use the oven as a source of heat or for drying.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- For cleaning, please refer to the "DAILY CLEANING" section.


VERY IMPORTANT:

If the housing overheats, it is necessary to cool the oven down before using it again. Switch off, then open the door for faster cooling.

BEFORE FIRST USE

- Remove and discard any packaging material, promotional labels, and tape from the unit.
- Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- Wash the accessories (**except** “Pizza Stone”) in warm, soapy water, then rinse and dry thoroughly. **NEVER clean the main unit or accessories in the dishwasher.**
- We recommend placing all accessories inside the oven and running it on the “BAKE” function at max temperature for 10 minutes without adding any food.
- Some odour and smoke may appear when used for the first time. This is completely normal and should disappear after few minutes of use.
- Make sure the area is well-ventilated during use, especially when the appliance is new.

KNOW MORE ON THIS ITEM

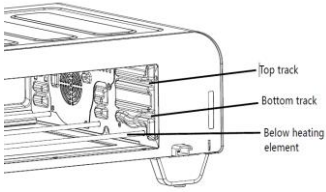Accessories	description
	Product unit
	Parts location
	Crumb Tray (1 pcs) * Keep in the "below heating element" position * The edge with a raised shape needs to be inserted into the oven as the front side. * Clean it immediately after use to prevent it from rusting.
	Oven Rack (1 pcs) * Keep in the "bottom track" position * The edge with a raised shape needs to be inserted into the oven as the rear side. * Clean it immediately after use to prevent it from rusting.
	Pizza Stone tray (1 pcs) * Always lay on top of the Oven Rack * The stone is fragile and can break if bumped or dropped. * The stone is very hot during use and stays hot for a long time after use. Allow the pizza oven to cool before moving, cleaning or

	<p>storing it.</p> <p>* DO NOT cool the stone with water when the stone is hot. After cleaning the stone with water, ensure to dry the stone before using it again.</p> <p>* Store the pizza stone in a dry and warm place.</p>
	<p>Pizza Shovel (1 pcs)</p> <p>Easy to place the pizza or take out the pizza from the oven.</p>


** The above accessories shown are for reference only and may look different to the actual product.

SMART DOOR SWITCH:

The smart door switch is made of A and B parts.

A is in the housing, and B is in the door.

The smart door switch works for below functions:

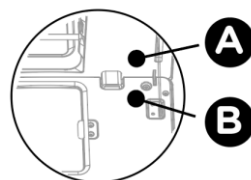

1) When the door is opened,


- the interior lamp will turn on
- the appliance will pause operation

2) When the door is closed,

the appliance resumes operation or automatically carry on with the functions.

During use, ensure the door is closed to the housing and no interference. Otherwise, the appliance will not work smoothly.

KNOW MORE ON THE CONTROL PANEL:

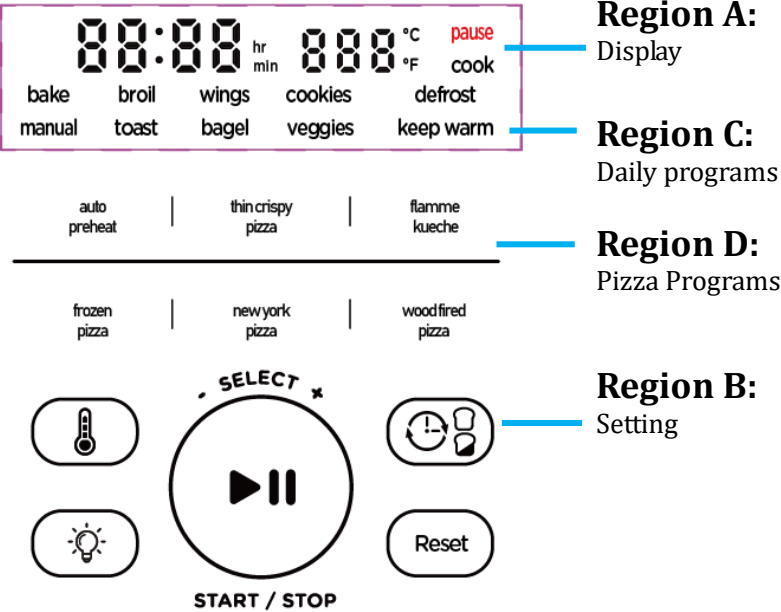

** Panel final content information is subjected to the real product

Region A: Display

Time display	Shows the TIME information
Temperature display	Shows the TEMP. information (It will only show one format “°C” or “°F”)
“Pause”	Lights up when the unit is paused.
“Cook”	Lights up when the unit is cooking
“min.”	Shows the time in “minute” format
“hour”	Shows the time in “hour” format

Region B: Setting

	Dial	Turn to select a cooking function or adjust time or temperature (or number of slices and darkness level when using the TOAST mode functions).
		<p>For the same mode/button:</p> <ul style="list-style-type: none"> * The first press-down dial is for START operation. * The second press-down dial is for PAUSE. * Under working (not pause) status, any time you press it for 2 seconds, it will cancel the function and reset the unit back into the default Region C/D selection.
	Interior Lamp	Press to turn the oven's interior light on and off. NOTE: The light will automatically turn off after 30 seconds.
	Reset	Press this button, function will be cancelled, and the unit goes into standby mode (display showing "00:00"). Press this button again, and the product will reset to the original default program function list.
	Time/ Darkness	Press the TIME/DARKNESS button, then use the dial to adjust the temperature. When using the TOAST mode function, this button will adjust the darkness level instead of the temperature.
	Temp.	Press the TEMP button, then use the dial to adjust the temperature.

** Panel final content/icon information is subjected to the real product

Region C: Daily programs

● ***Function list***

Daily programs are preset with default time and temperature. You can change these settings for the performance you need.

BAKE	For cookies and similar food.
BROIL	For steaks, fish, nachos, and for finishing casseroles.
WINGS	Program for wings
COOKIES	Program for Cookies
DEFROST	Speed up the frozen food thawing.
MANUAL	User DIY setting cooking time and temperature. (Temperature can be adjusted max to 400°C)
TOAST	For max 9 slices of bread (10X10 cm) at one time. Can set darkness (6 levels) for different quantities.
BAGEL	For bagel halves (placed cut-side up on the Oven Rack). Can set darkness (6 levels) for different quantities.
VEGGIES	Program for vegetable
KEEP WARM	Warm up the food without overcooking

● ***Using the functions of Region C***

Step 1	Place ingredients on the accessories then put them into the oven Tips: To get even baking, it is better to preheat the oven to 160°C for 5 min. without accessories and food.
Step 2	Turn the dial to select functions. The default time and temperature settings will be displayed
Step 3	After the time and temperature are set, press the dial to begin operation.
Step 4	During cooking, if you need to change the cook time or temperature: <ul style="list-style-type: none">● Press the TEMP button and turn the dial for selection.

	<p>* The temperature of KEEP WARM mode is fixed and cannot be changed.</p> <p>* Once TOAST/ BAGEL mode has started, its temperature can't be adjusted till this function is cancelled or reset.</p> <ul style="list-style-type: none"> ● Press the TIME/ DARKNESS button and use the dial to select time.
Step 5	<p>When cooking time has completed, the unit will beep.</p> <p>If results are not perfect, add more time to recook.</p>

Region D: Pizza Programs

● Function list

Fucntion	Usage Remark: T (thickness) only for reference
Auto Preheat	<p>The unit is under preheat processing.</p> <p>This is an automatic assistant program.</p> <p>If the baking programs need high temperature, but the oven's internal is not hot enough, "preheat" will run automatically before the baking program starts. Its Time and Temperature are not adjustable.</p>
Thin Crispy	for a thin ($T \approx 0.3\text{cm}$) Fresh pizza with D.I.Y ingredients as favorite pizza.
Flamme kueche	for a French style thin pizza cake
Frozen	bought from the supermarket directly with ingredients on the top.
New York	for a thin ($T \approx 1.5\text{cm}$) Fresh pizza with D.I.Y ingredients as favorite pizza.
Wood fired (as Neapolitan / Margaret Pizza)	<p>for a thin ($T \approx 1.5\text{cm}$) Fresh pizza with tomatoes / mozzarella cheese</p> <p>(WOOD FIRED PIZZA: This product does not utilize any wood or wood by-product. The term "Wood Fired" refers to the specific heat performance characteristics of this oven that replicate that of a wood fired brick oven.)</p>

- If using **large fresh** vegetables, meat or seafood, select the "New York Pizza" mode, as these ingredients require longer cooking time.
- If using **large frozen** vegetables, meat or seafood, select the "Frozen Pizza" mode for extended cooking.

- **GUIDE FOR PIZZA SIZE & BAKING TIME**

This unit comes with a built-in reference display that shows recommended pizza sizes and corresponding baking times for users to check approximate cooking durations.

When adjusting the baking time, the temperature display will temporarily show the corresponding recommended pizza size (in inches) at specific time settings for your reference.

Important:

All on-screen guidance is for reference only. Actual baking results may vary based on food quantity, type and brand. Monitor baking progress through the viewing window and adjust the cooking time based on your pizza's actual doneness.

- **RECIPE OF DOUGH BALL for "WOOD FIRED PIZZA":**

It is recommended to buy dough balls from bakeries or supermarket. If unavailable, refer to the homemade recipe below for a 10-inch pizza.

Ingredient: Bread flour 100g; Sugar 5g; Salt 1g; Yeast 1g; Milk 63g; Butter 5g

- 1) Mix all ingredients thoroughly, then cover with plastic wrap and let stand for 1 hour.
- 2) Dust the fermented mixture with flour and knead it into a dough ball.
- 3) Lightly coat the dough ball with oil, then cover again with plastic wrap.
- 4) Put the dough ball in the refrigerator and chill for at least 6 hours.
- 5) Take the dough out and thaw for no less than 1 hour before use.

- **TIPS TO PLACE THE PIZZA ONTO THE STONE:**

- 1) Prepare the pizza only when preheating is nearly complete, for easier transfer the pizza onto the stone from shovel.
- 2) Dust the desk surface with flour. Stretch the dough by hand to form the pizza crust
- 3) Once the crust is ready, flour the pizza shovel thoroughly. This helps slide the pizza onto the stone smoothly. Do not use oil instead.

- 4) Place the crust onto the shovel and add your preferred toppings such as cheese, ham and sauce. For a thin, crispy crust and puffy edges, leave a 3 cm wide rim around the crust free of sauce and toppings.
- 5) **(Very important)** Before putting the pizza into the oven, gently move the shovel back and forth to check that the pizza slides freely.
- 6) **(Very important)** Use heat-resistant tools to pull out the rack together with the pizza stone. Slide the pizza off the shovel onto the pizza stone, then push the rack back into the oven quickly. Close the door to start the program.

● *Using the functions of Region D*

VERY IMPORTANT NOTE:

- Due to the extremely high temperatures, place the oven in a well-ventilated area, as it will emit smoke when cooking.
- **NEVER** place baking paper on top of accessories. This can cause a fire.
- We recommend monitoring and staying close to the oven as food can quickly become overdone and eventually ignite.
- Be careful of high temperature when handling accessories. If pulling accessories out of the oven, use heat-resistant tools or oven mitts for protection.
- **IMPORTANT:** In case of a lot of smoke, food may be burnt and have an acrid flavour.
 - Accessory must be cleaned. Ensure no food/oil left from last usage.
 - Use oils with a high smoke point—like canola, avocado, vegetable, or grapeseed oil—instead of olive oil.
- During usage, the following message may be displayed.

<div>OPEN</div> <div>Add In</div>	<ul style="list-style-type: none"> - Meanings: Preheat is finished - Open the door, pull the accessory out, place food on the accessory then push the accessory back inside the oven. - Close the door, and the program will start the cooking function automatically, and "Open" / "Add in" words
---------------------------------------	--

	displayed will disappear.
End	- Meanings: The program is finished

Step 1 Insert the stone	Insert the pizza stone into the oven. NO FOOD on the accessory.
Step 2: Select function	<ul style="list-style-type: none"> ● Touch the panel to select the pizza style mode. ● When a function is selected, its indicator light will begin to flash. ● To change cooking time, press the “Time” button, turn the dial for adjustment.
Step 3: Auto preheat	<ul style="list-style-type: none"> ● Press down on the dial, and “Auto Preheat” will light up. This indicates that the Preheating has started. Reminder: <ul style="list-style-type: none"> - “PREHEAT” is a self-acting program, that cannot be selected or adjusted by the user. - “PREHEAT” time is not included in cooking time. - If the door is opened, the appliance will pause (“pause” lights up on the display). Close the door and the appliance will restart and keep on working. ● When “PREHEAT” has finished, the unit will beep and “Open /Add in” will light up on the display.
Step 4 Add pizza	<ul style="list-style-type: none"> ● Open the door to place the pizza onto the stone (Refer to “TIPS TO PLACE THE PIZZA ONTO THE STONE” section.)
Step 5 Cooking	<ul style="list-style-type: none"> ● Close the door, and cooking will start with self-action, Reminder that: <ul style="list-style-type: none"> - If the door is opened, the appliance will pause (“pause” lights up on the display). Close the door and the appliance will keep on working. - If need to adjust the cooking time, press the " Time/

	Darkness " button, and turn the dial to reduce or add time.
Step 6 Cooking finished	<ul style="list-style-type: none"> ● Once "program" is finished, the unit will beep and "End" will be shown in the display. ● Pull Rack with pizza stone out from the oven and take out the pizza using the Shovel. ● Turn the dial to return to the function list or press the "Reset" button for standby mode.
Step 7 End	<ul style="list-style-type: none"> ● Unplug the supply cord plug from the power outlet socket. ● Clean the unit refer to "DAILY CLEANING" section.

DAILY CLEANING

The unit should be cleaned after every use.

NEVER clean the main unit/ accessories in the dishwasher.

- Unplug the unit and allow the unit and accessories to cool down before cleaning.
- Remove all accessories from the unit, including the Crumb Tray.
- Except "Pizza Stone", soak other accessories in warm, soapy water for 30min. Use the soft bristle brush to clean. Do not use hard tools for cleaning. Then rinse with fresh water for 2 times and dry thoroughly.
- Wipe the interior walls of the unit with a soft, damp sponge.
- Clean the main unit and the control panel with a slightly damp cloth.
- For "Pizza Stone", use a dry cloth for cleaning.

TROUBLESHOOTING GUIDE

Problem	Potential cause and solution
1. The oven is not turning on.	<ul style="list-style-type: none"> • Check and ensure that you have selected a function and a temperature and set the timer. • Check and ensure that the power cord is plugged in, the power is turned on, and that the outlet is working (check the appliance at a different outlet).
2. After preheating, when I close the door, the unit is not working	<ul style="list-style-type: none"> • Clean up the door and housing, and keep them dry there is a smart door switch for safety. (Refer to section “SMART DOOR SWITCH”) • The door is too hot, allow it to cool down. • If still does not work, the appliance may be faulty.
3. Should I add my ingredients before or after preheating?	<p>For Region C: Daily programs</p> <ul style="list-style-type: none"> * If the appliance is cold, manual preheating at 160°C for 5 minutes is recommended * Adding ingredients on the accessory, then insert the accessory into the oven and select/start the program <p>For Region D: Pizza Programs</p> <p>Preheating is always required.</p> <ul style="list-style-type: none"> * Insert accessories into the oven (WITHOUT ANY FOOD) then select/start the programs. The product will be preheated. * After preheating, pull out the accessory and add ingredients to the accessory surface. * Close the door to start cooking.

4. Food is undercooked.	<ul style="list-style-type: none"> • You may have overfilled. Use smaller quantity of food. • Check and ensure that the temperature is set correctly, it may have been set too low.
5. Smoke is coming from the appliance when I switch it on.	<ul style="list-style-type: none"> • If you are using the appliance for the first time, this is normal and no cause for concern; it should subside soon. Ensure good ventilation. • Try cleaning the appliance properly and it continues to emit smoke, stop using the appliance and have it checked by a technician.
6. Steam coming out from the oven door	This is normal. The door is vented to release steam created by foods with a high moisture content.
7. The circuit breaker or safety switch tripped	<ul style="list-style-type: none"> • This appliance draws high current in operation, when used in conjunction with other kitchen appliances on the same power circuit at the same time, it may trip the circuit breaker or safety switch with incorporated overload protection. • Check to ensure that other appliances are operating at the same time (E.g. Kettles, toasters, microwaves) to isolate them from the same circuit, then operate the appliance separately to confirm that the circuit is no longer tripping.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 2000W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

