

Disney FROZEN

3+
years

POP UP PLAY TENT

IMPORTANT KEEP FOR FUTURE REFERENCE

PLEASE READ ALL INSTRUCTIONS BEFORE SETUP OR FOLDAWAY

CAUTION: DO NOT FOLD OR UNFOLD THIS PRODUCT NEARBY PEOPLE, PETS OR OBSTACLES.



©Disney

PARTS LIST



Tent X 1



Connectable Play Tunnel X 1

ASSEMBLY INSTRUCTIONS

Part 1:

Tunnel Assembly (Steps 1–5)

1. Remove the folded tunnel from the packaging.
2. Unfold to release the spring frame.
3. The tunnel will automatically open into a straight tube shape.
4. Adjust and smooth out the fabric to set the shape.
5. Connect the two tunnels together.

Step 1



Step 2



Step 3



Step 4



Step 5



Part 2:

Tent Assembly (Steps 6-11)

6. Remove the folded tent from the packaging.
7. Unfold the fabric, pull apart to release the tent frame.
8. Lay flat and fully expand the tent.
9. Adjust the sides to prop up the tent into a stable playhouse shape.
10. Smooth all fabric edges to complete the tent assembly.
11. Align the opening of the tent with the end of the connected tunnels, fasten the connecting loops.

Step 6



Step 7



Step 8



Step 9



Step 10



Step 11




FOLDING INSTRUCTIONS FOR TENT

Part 1:

Fold Down the Main Play Tent (FOLDAWAY Main Tent Steps 1–7)


1. Fully separate the tunnel set completely from the tent.
2. Hold both sides of the tent, twist inward to start collapsing.
3. Keep twisting to fold the structure in half.
4. Flatten the folded piece fully.
5. Fold the rounded edge over towards the flat panel.
6. Continue twisting the frame to coil into a small loop.
7. Press firmly into a compact round bundle for storage.

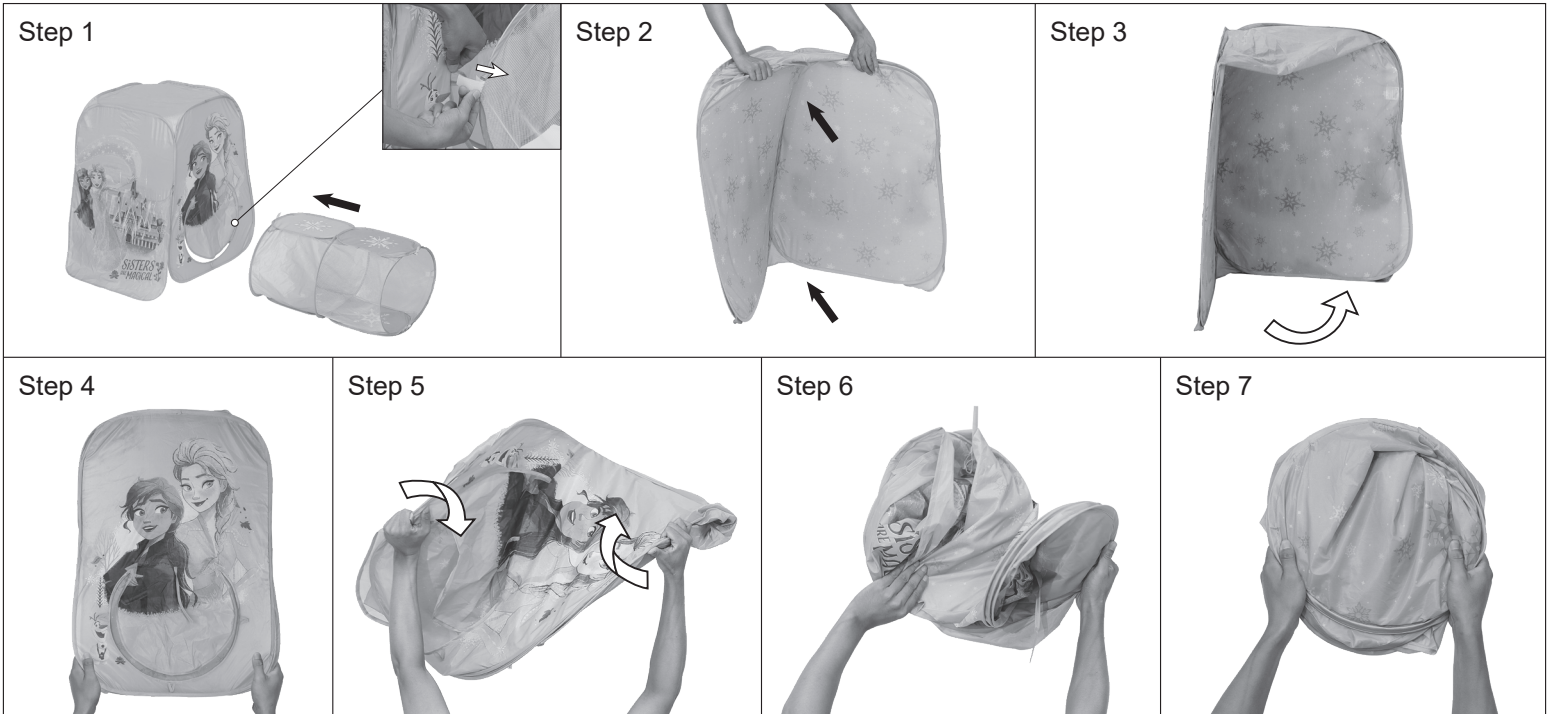

Part 2:

Fold Down the Tunnel (FOLDAWAY: TUNNEL Steps 1–5)

1. Separate the two connected tunnel sections.
2. Pinch the circular wire rim at one tunnel end, twist inward.
3. Push down to flatten the tunnel into a flat oval shape.
4. Twist the opposite rim to coil the tunnel further.
5. Press fully into a thin flat storage disc.

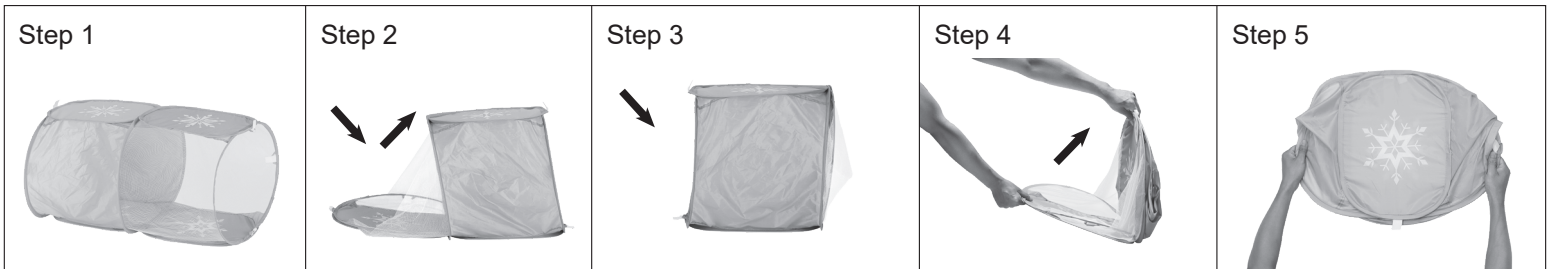

CARE INSTRUCTIONS: WIPE CLEAN WITH A DAMP CLOTH. FOR INDOOR USE ONLY.

WARNING: THIS PRODUCT HAS AN INTERNAL SPRING FRAME THAT WILL POP OPEN WITH SOME FORCE. NEVER LET SMALL CHILDREN UNFOLD OR FOLD THIS PRODUCT. CAUTION MUST BE USED IN THE HANDLING OF THIS PRODUCT.

WARNING: KEEP AWAY FROM FIRE AND ALL HEAT SOURCES. NEVER ALLOW A NAKED FLAME NEAR THIS PRODUCT. IT IS NOT FIREPROOF THE FABRIC WILL BURN IF IT IS LEFT IN CONTINUOUS CONTACT WITH FLAME AND HEAT SOURCES. PLEASE THOROUGHLY READ INSTRUCTION MANUAL BEFORE USING THIS PRODUCT.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

ADULT ASSEMBLY REQUIRED.
PRODUCT MAY VARY FROM THE IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.