

Backpack Water Blaster

 

Instruction Manual

3+
years


IMPORTANT: KEEP FOR FUTURE REFERENCE

PLEASE READ ALL INSTRUCTIONS BEFORE SETUP OR FOLDAWAY


CAUTION: DO NOT FOLD OR UNFOLD THIS PRODUCT NEAR PEOPLE, PETS OR OBSTACLES.

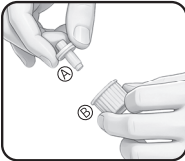


1. Assemble the bottle cap.

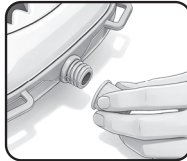


2. Screw the cap tightly onto the bottom of the backpack.

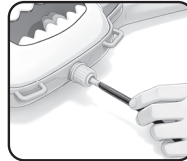


3. Connect the tube to the bottle cap.

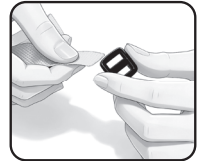


4. Thread the strap through the first opening of the slider buckle.

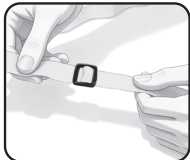


5. Thread the strap back through the second opening of the slider buckle.

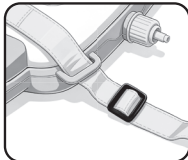

6. Feed one end of the strap through the buckle at the bottom of the backpack.

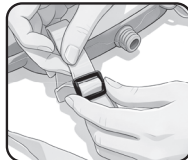

7. Thread the strap through the SECOND opening of the slider buckle.

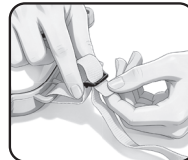

8. Thread the strap back through the FIRST opening of the slider buckle.



9. Repeat steps 4-7 for the remaining 3 buckles. Strap installation is complete.



WARNING: CHOKING HAZARD

SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING! TO AVOID INJURY, DO NOT SHOOT AT A PERSON'S OR ANIMAL'S FACE OR EYES. USE ONLY CLEAN TAP WATER. USE OF OTHER LIQUID MAY BE HARMFUL OR MAY DAMAGE THE WATER GUN. DO NOT LEAVE WATER GUN PRESSURISED WHEN NOT IN USE. EMPTY THE WATER GUN WHEN NOT IN USE.

ADULT ASSEMBLY AND SUPERVISION REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.