

90 mm

63 mm

anko

2K Mini Magnetic Camera
Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

Includes:
1 x Camera
1 x Magnetic Lanyard
1 x USB-A to USB-C cable
1 x Instruction Manual



K: 43716500 | T: 72451793
Model: JLR-82203

Product Specifications:


1.47-inch IPS touchscreen
Lens: 180° Rotatable
Photo format: JPG
Video format: MP4
Video resolution: 2K / 1080P / 720P
Photo resolution: 20MP / 12MP / 10MP / 8MP
Wi-Fi: 2.4GHz
App: Viipulse
Input Rating: 5V – 1A
Charging time: Approx. 2 hours
Storage: Support MicroSD card to 256GB max (not included)
Battery Capacity: 3.7V 400mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

- › This product contains a **rechargeable lithium-ion battery** (non-replaceable).
- › **Keep the product out of reach of children and pets.**
- › **Small parts may present a choking hazard.**
- › Do not disassemble, crush, puncture, or modify the product or battery.

- › Do not expose the product to high temperatures, direct sunlight, or fire.
- › Do not charge the device unattended or near flammable materials.
- › Do not leave the device connected to power after it is fully charged.
- › Avoid allowing the battery to remain at a very low charge level for extended periods.
- › Avoid dropping or subjecting the product to strong impact.
- › Do not use the product if it is damaged or malfunctioning.
- › Dispose of the product in accordance with local regulations.
- › Use a certified 5V/1A USB power adapter (not included) that complies with local safety standards.

Product Diagram

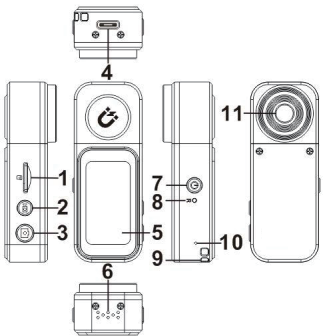

1. MicroSD card slot	7. Power button
2. Video button	8. Reset button
3. Photo button	9. Lanyard slot
4. USB A-C charging Port	10. Charging indicator
5. Display screen	11. Lens
6. Speaker	

Button Functions:

1	Video button	Short press to record/stop video recording
2	Photo button	Short press to take a photo
3	Power button	Press and hold to turn the device on or off Short press to turn the screen on or off

Insert MicroSD Memory Card

Insert the microSD card gently into the slot until it clicks into place.



Note:

- › Insert the card in the correct orientation to avoid damage
- › Use a Class 10 or higher microSD card
- › Format the card before first use
- › Back up important data regularly
- › Keep memory cards out of reach of children

Operation Instructions

Power on/off

- › Press and hold the power button to turn the device on or off.
- › The device will automatically power off after 5 minutes of inactivity.

Note: Please insert the TF card before using, otherwise it cannot be operated.

Video Recording


- › Press the video button to start recording.
- › Press again to stop and save the video.

Note: Video files are automatically saved every 3 minutes.

APP Operations

APP Setup:

Option 1: Download the “**Viipulse**” app from the App Store or Google Play.

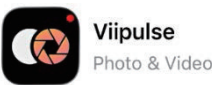

Option 2: Scan the **QR code** displayed on the device.



Connecting to the Camera

- › Turn on the device
- › Enable Wi-Fi on the camera
- › Open your phone's Wi-Fi settings and connect to the camera hotspot.
- › Enter the password displayed on the device
- › Open the app to complete the connection

Note:

- › Camera hotspot name: “anko - XXXXXXXX”
- › “XXXXXXX” represents a fixed 8-digit MAC address (random alphanumeric characters).
- › If your phone shows “No Internet Connection”, select “Keep Connection” or “Cancel”.

Playback and File Management

- › Tap the playback icon “” to view recorded videos and photos
- › Select a file to play
- › Tap the left icon “” or right icon “” to switch between previous and next files

During playback:

- › Tap the screen to pause or resume playback
- › Swipe up or down on the screen to adjust the volume
- › Tap the left icon “” or right icon “” for slow-motion and fast-forward playback.

To delete a file:

- › Select the file
- › Tap the delete icon “” and confirm

Photo and Video Modes

- Tap the mode icon “” to switch between recording modes:
- › Video Recording
 - › Photo Capture
 - › Time-lapse Recording
 - › Burst Shooting

Photo Mode

- › Select photo mode
- › Set resolution if required
- › Press the photo button to take a picture

Time-lapse Mode

- › Select time-lapse mode
- › Set recording resolution and time-lapse (1s, 2s, .5s, 1min)
- › Press the video button to start recording

Burst Mode

- › Select burst mode
- › Press the photo button to capture multiple images

Photo capture settings

- In photo mode, tap the settings icon “” to adjust:
- › Photo resolution: 8M, 20M, 34M, 48M
 - › Photo sound: off/on
 - › Sharpness: Low/ Medium/ High

Video recording settings

In video mode, tap the settings icon “” to adjust:

- › **Video resolution:** 720P/30fps, 720P/60fps, 720P-V, 1080P/30fps, 1080P/60fps, 1080P-V, 2K/30fps, 2K-V, 4K.
- › **Loop recording:** off / 1 min/ 3 min/ 5 min
- › **Video sound:** off/on.

System Settings

Tap the settings icon to access system options:

- › **Set**
- › **Date &Time**
- › **Wi-Fi**
- › **Language**
- › **key Tone**
- › **Format options**

Additional settings include:


- › **Time stamp:** Off/On
- › **Screensaver:** Always On/ 30s/ 1min/ 3min
- › **Auto power off:** Off/ 1min/ 3min/ 5min.
- › **Mirror:** Off/On
- › **EIS:** Off/On

- › **Volume:** Low/Medium/High

- › **Factory Reset**
- › **Firmware version**
- › **Follow on-screen instructions to adjust settings.**

Connecting to a Computer

Use the provided USB-C cable to connect the camera to your computer.

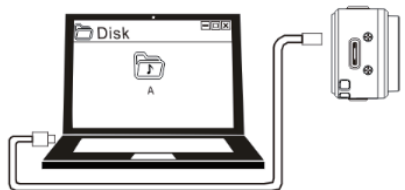

The camera will display selectable modes:

- › **Storage Mode:** Transfer photos and videos as a removable disk.

- › **PC Camera:** Use the camera as a PC camera with video chat software.
- › **Charge:** Charge the camera only (no data transfer).

Note:

- › **Always eject the removable disk safely to avoid data loss.**
- › **If the computer does not recognize the device, reconnect or try another**
- › **USB port/cable.**

Charge the Product

Before first use, please fully charge the device

- › **Use a certified 5V/1A USB power adaptor (not included). Only use the supplied charging cable.**
- › **The indicator light is red during charging and turns off when fully charged**
- › **Charging time is approximately 2 hours**
- › **Charge the device at least once every month to maintain battery performance.**

Trouble shooting

Problem	Possible reasons	Solutions
Cannot power on	(1) Battery may be low (2) System error	(1) Charge the device (2) Restart or press reset
Device not recognised by computer	(1) USB cable may be damaged. (2) USB cable is incorrectly connected. (3) The computer may have a software or hardware issue.	(1) Check the USB cable for damage and ensure it is firmly connected. (2) Try connecting to a different USB port on the computer. (3) Restart the computer.
Cannot record video	(1) Using a low-quality microSD card may	(1) Ensure a microSD card is correctly inserted.

	result in file errors or recording failure. (2) The memory card is full.	(2) Use a Class 10 or higher microSD card. (3) Format the memory card via the device settings.
--	---	---

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you have any cybersecurity-related concerns or queries, please contact us online via our 'Contact Us' page at <https://www.kmart.com.au/contact-us/> or reach us by phone using the numbers listed below.



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567



Statement of Compliance

Security standard for consumer grade relevant connectable products
AUSTRALIA

This statement of compliance has been prepared by, or on behalf of Kmart Australia Limited, who is the manufacturer of the below product. The statement of compliance is made in accordance with the Cyber Security (Security Standards for Smart Devices) Rules 2025, authorized by the Cyber Security Act 2024.

Product manufacturer details	
Name of the manufacturer	Kmart Australia Limited
Address of the manufacturer	1 Middle Rd, Chadstone VIC 3148
Name of the authorized representative	Jerry Or (Product Technologist)
Address of the authorized representative	Room 1018-1023A, 10/F, Trade Square, No. 881 Cheung Sha Wan Road, Cheung Sha Wan, Kowloon, Hong Kong
Name(s) of other authorized representatives in Australia (if applicable)	N/A
Address(es) of other authorized representatives in Australia (if applicable)	N/A
Product details	
Product type	2K MINI MAG CAMERA
Product type	43716500
Batch identifier	We will provide security updates for App until 2 June 2028. This device will receive all available security updates until 2 June 2028.
Defined support period for the product	

Declaration

It is declared that, in the opinion of the manufacturer:

- The product listed in the table above has been manufactured in compliance with the requirements of Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.
- The manufacturer has complied with any other obligations relating to the product in Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.

It is declared that this statement of compliance has been prepared by, or on behalf of, the manufacturer of the product listed in the table above and is accurate at the date of issue of 3 Mar 2026.

Prepared by or on behalf of Kmart Australia Limited

Jerry Or

3 Mar 2026

(Name, function and signature of the signatory of the manufacturer)

(Place and date of issue of the statement of compliance)