

 
Powerful Water Blaster

Instruction Manual

3+
years



HOW TO INSTALL BATTERY:

Unscrew the battery cover, install the battery(black connector), then close the battery cover.


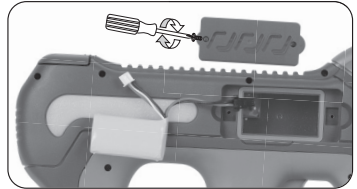


HOW TO CHARGE:

  - Loosen the screw to open battery cover.
- Separate the rechargeable battery from connector.
- Connect the USB charging cable with white connector on rechargeable battery/first (the battery connector will only fit in one way, do not force the connectors together), then plug the large end of the USB cable into a 5Vd.c. 2A charger (not supplied) or USB port. The green LED light on the USB charging will light up and the red LED light will flash when charging.
- The green LED light extinguishes and the red LED light will light up and will be solid after it has finished charging. Disconnect the USB charging cable from the USB port and then disconnect the rechargeable battery with USB charging cable.

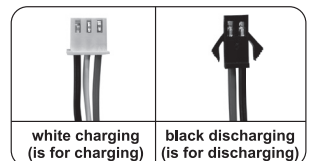

HOW TO PLAY:

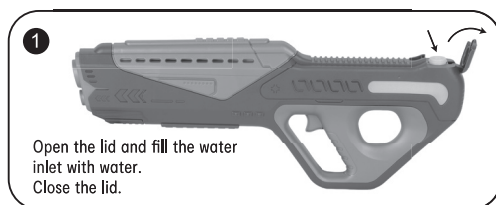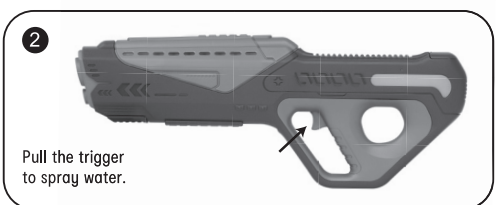  

WARNING: TO AVOID INJURY: DO NOT SHOOT AT A PERSON'S OR ANIMAL'S FACE OR EYES. USE ONLY CLEAR TAP WATER. USE OF OTHER LIQUID MAY BE HARMFUL OR DAMAGE PRODUCT. WHEN NOT IN USE DO NOT LEAVE PRODUCT PRESSURISED. EMPTY THE WATER TANK WHEN NOT IN USE.

WARNING: THE BATTERY CHARGER USED WITH THE TOY SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.



WARNING: RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. CHARGE THE BATTERY BY SUPPLIED USB ONLY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: THE TOY IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL.

ADULT SUPERVISION REQUIRED.
PRODUCT MAY VARY FROM IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

CAUTION: THE PRODUCT HAS A RECHARGEABLE LITHIUM-ION BATTERY. ONLY CHARGE THE PRODUCT BY PLUGGING THE LARGE END OF THE USB CABLE INTO A 5Vd.c. 2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY. ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.

MADE IN CHINA
CUSTOMER SERVICE:
KMARZ AU: 1800 124 125
KMARZ NZ: 0800 945 995
TARGET AU: 1300 753 567

43-722-242