

Disney FROZEN Secret Journal

6+ years




©Disney

CONTENTS

• Secret Journal x 1 • Notebook x 1 • Marker x 1 • Sticker Sheet x 1

SECRET JOURNAL

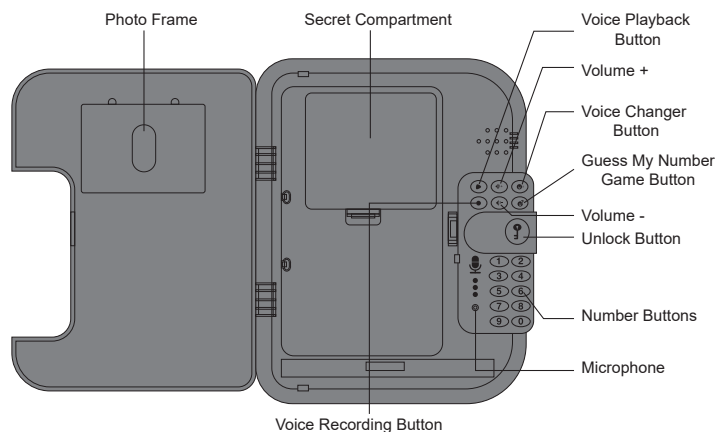

PASSCODE SETTING AND UNLOCKING INSTRUCTIONS

The passcode for the journal consists of four digits. The journal will be opened automatically when the battery is loaded. In the unlocking state, press the unlock button and input the passcode twice according to the prompt to complete the passcode set up.

1

HOW TO CHANGE YOUR PASSWORD

Press and hold the unlock button for 1.5 seconds in the unlocking state to reset the passcode. Then wait for the prompt to input the new passcode twice to set your passcode. If you forget the passcode, please remove the batteries and re-install them. The journal will automatically unlock and delete the old passcode.

FUNCTION INSTRUCTIONS

1. Unlock Button

Press this button and then enter your 4-digit passcode to open the cover.

2. Voice Recoding Button

Press the voice recording button to enter the recording mode, then press a 'number' button to record your voice. Each number button can only store around 40-seconds of recording. The Secret journal will prompt you to press the number button again to clear the old recording if the number button has already been recorded on. After recording, press the recording button again to end the recording. You can press the voice playback button to start the voice playback mode and then press the number button to play back the recording. Note: The recording and voice playback recording functions can only be used in the unlocked state.

3. Voice Playback Button

Press this button to enter voice playback mode, then press a number button to playback the voice input assigned to that number. You have to enter your passcode before entering this mode if the journal is locked.

4. Voice Changer Mode Button

Press this button to enter the voice changer mode, then you can say anything and hear your voice play back with a sound effect.

5. Volume + Button

Press this button to increase the volume.

6. Volume - Button

Press this button to lower the volume.

2

7. Guess My Number Game Button

Press this button to enter the game mode. Listen to the instructions and answer the question by pressing the correct number button.

How to Play:

1. Listen carefully to the question or clue.
2. Enter your answer by pressing the corresponding number button.
3. The game will tell you whether your answer is too high or too low when applicable.
4. Continue guessing until you find the correct number.
5. After three incorrect attempts, the game will reveal the correct answer and automatically proceed to the next question.

Tips:

1. Listen to each question carefully before answering.
2. Pay attention to the game's feedback to narrow down your choices.
3. Respond promptly to avoid automatic exit from the game mode.

8. Number Buttons

Press the buttons to enter your passcode or to input numbers in certain activities (Fig.1).

Fig.1



9. Microphone

The microphone is used for the voice activation feature (Fig.2).

The recommended distance between the microphone and your mouth is around 10-15 cm.

10. Secret Compartment

The compartment can be used to store small objects in to keep them a secret (Fig.3).

11. Notebook replacement

The included notebook can be replaced with other notebook in standard A6 size (Fig 4). It is recommended that the maximum page count of the replacement notebook is 100 pages (50 sheets).

Note: The replacement notebook can be secured with the two book holders included in the journal.




3

12. Automatic Shut-Off

The journal will shut off automatically if it has not had any input after several minutes. It can be turned on again by pressing the unlock button or any functional buttons.

Note: The journal will automatically turn off if the batteries are low on power.

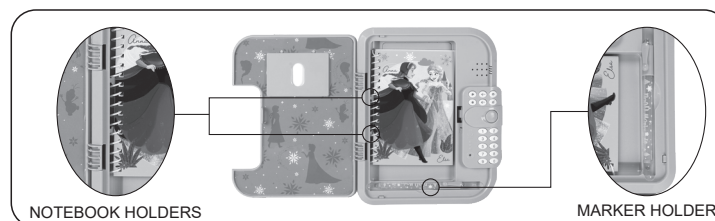

13. Clear Plastic Frame

You can insert a photo (not included) into the front cover of the journal. To make sure the photo is the right size, you can place the provided clear plastic frame on top of it, then cut along the outline.

Note: Adult supervision required.



WARNING: CHOKING HAZARD
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.



WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

ATTENTION: ALL ART MATERIALS LIKE MARKERS, MAY CAUSE STAINS. ALWAYS PROTECT CLOTHES, CARPETS, WORK SURFACES, FURNITURE AND OTHER OBJECTS. ALWAYS USE A PROTECTIVE COVER TO PREVENT STAINS. AVOID INGESTION AND EYE CONTACT. WASH HANDS AFTER USE.

PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.

43-726-134

4