



Pop-Up Beach Shelter

Instruction Manual

Keycode: 43-746-934

Set-Up Instructions:

Remove the shelter from the storage bag.
Place the shelter on the ground and allow it to pop open automatically.
Stand the shelter upright and ensure the entrance is positioned as desired.
Fully extend the frame and adjust the shape for stability.
Secure the shelter using the stakes or sand anchors to prevent movement.


Folding Instructions:

⚠ The shelter is under tension and may spring open unexpectedly.
Please follow carefully.



1. Hold the shelter upright.

2. Grasp the left and right sides of the frame. And set the shelter upright with the entrance facing upward.

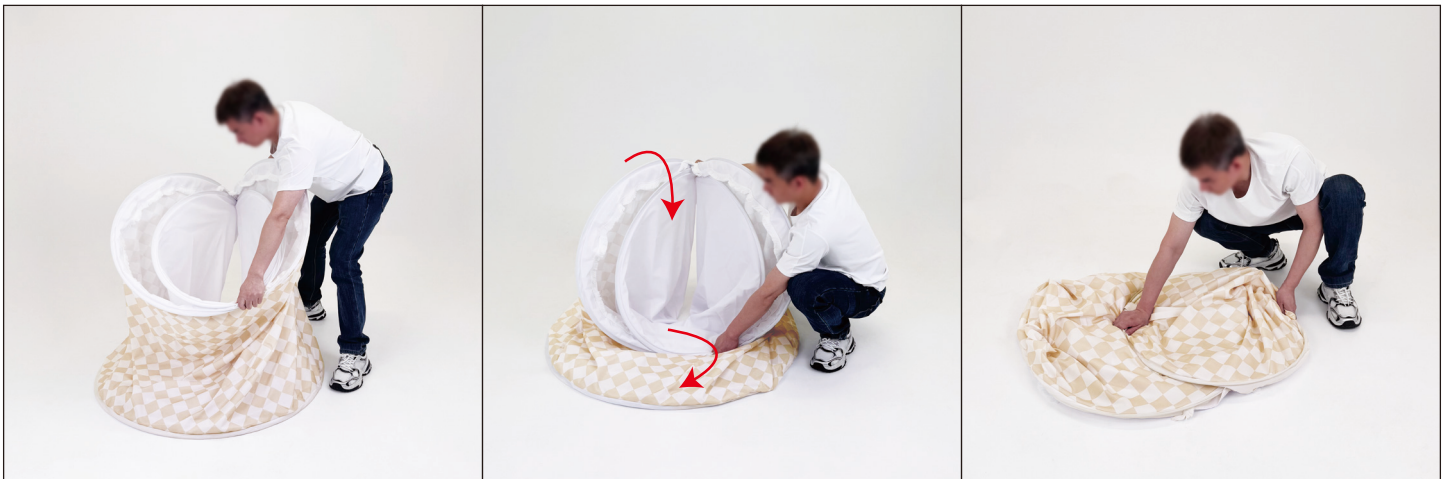

3. Bring the sides inward to form a figure "8" shape.



4. Place the ring with the white strap on top. Press down at the centre with one hand while pushing the lower ring inward with the other. Collapse the figure “8” into a smaller circular shape.



5. Secure the folded shelter with the strap. Place it back into the storage bag.

WARNINGS: THIS SHELTER PROVIDES LIMITED SUN PROTECTION ONLY. SUN EXPOSURE MAY STILL OCCUR DUE TO REFLECTED UV RAYS FROM SAND, WATER, OR SURROUNDING SURFACES. ALWAYS WEAR SUNSCREEN AND PROTECTIVE CLOTHING. ALWAYS SECURE THE SHELTER FIRMLY USING ANCHORS, PEGS, OR SAND TO PREVENT MOVEMENT OR SUDDEN COLLAPSE. DO NOT USE IN WINDY OR STORMY CONDITIONS. STRONG WINDS MAY CAUSE THE SHELTER TO BECOME UNSTABLE OR AIRBORNE, RESULTING IN INJURY OR DAMAGE. THE SHELTER FRAME IS UNDER TENSION AND MAY OPEN OR CLOSE SUDDENLY. KEEP FACE AND BODY AWAY DURING SETUP AND FOLDING. ENSURE THE SURROUNDING AREA IS CLEAR OF PEOPLE, ESPECIALLY CHILDREN, BEFORE OPENING OR COLLAPSING THE SHELTER. KEEP AWAY FROM OPEN FLAMES, HEAT SOURCES, AND SPARKS. THIS PRODUCT IS NOT FIRE-RESISTANT. DO NOT USE THE SHELTER ON SHARP OR ROUGH SURFACES (E.G., ROCKS OR GRAVEL), AS THIS MAY DAMAGE THE FABRIC OR FRAME. ADULT SUPERVISION IS REQUIRED WHEN USED NEAR CHILDREN. DO NOT MODIFY THE PRODUCT OR USE IT FOR PURPOSES OTHER THAN INTENDED. FAILURE TO FOLLOW INSTRUCTIONS AND WARNINGS MAY RESULT IN INJURY OR PRODUCT DAMAGE.

CAUTION: THE POP-UP MECHANISM OPERATES UNDER TENSION AND MAY DEPLOY RAPIDLY. OPEN SLOWLY AND CAREFULLY. WHEN FOLDING, MAINTAIN A FIRM GRIP AT ALL TIMES TO PREVENT SUDDEN RELEASE. AVOID PINCHING FINGERS OR HANDS DURING ASSEMBLY AND FOLDING.

CARE INSTRUCTIONS: WIPE CLEAN WITH A DAMP CLOTH. DO NOT USE ABRASIVE CLEANERS, CHEMICALS, OR SOLVENTS. ENSURE THE SHELTER IS COMPLETELY CLEAN AND DRY BEFORE STORAGE. STORE IN A COOL, DRY PLACE AWAY FROM MOISTURE.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567