

6+YEARS

CYBER PUP

INSTRUCTION MANUAL



PACKAGE CONTENTS

 
- Cyber Pup
- Remote Control
- USB Charger
- Rechargeable Battery

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR DOG.

1. Do not use your dog near water. Clean using a soft cloth or paper towel.
2. Do not place your dog on any wet surfaces
3. Do not allow children under age six to play with your dog without adult supervision.
4. Do not expose your dog to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your dog to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your dog to excessive trauma.
9. Your dog is not intended for commercial use.


DOG

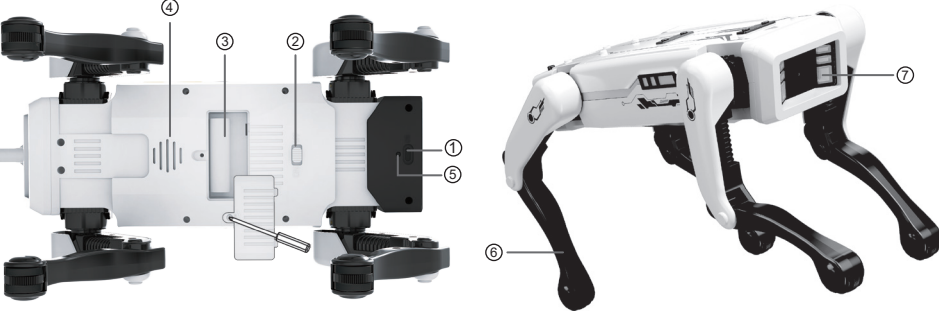

- ① USB Charging Port
- ② ON/OFF Switch
- ③ Battery Compartment
- ④ Speaker
- ⑤ Charging Light
- ⑥ Leg
- ⑦ Power Light

REMOTE CONTROL

 
- ① FORWARDS
- ② BACKWARDS
- ③ TURN LEFT
- ④ TURN RIGHT
- ⑤ STOP
- ⑥ SIT DOWN
- ⑦ GET DOWN
- ⑧ PUSH-UP
- ⑨ HANDSHAKE
- ⑩ GO POTTY
- ⑪ KUNGFU
- ⑫ HANDSTAND
- ⑬ PATROL
- ⑭ FRONT FLIP
- ⑮ BACK FLIP
- ⑯ LEFT ROLL
- ⑰ RIGHT ROLL
- ⑱ DANCE
- ⑲ GREETINGS
- ⑳ VOLUME
- ㉑ VOICE COMMAND
- ㉒ PROGRAMING
- ㉓ INDICATOR LIGHT

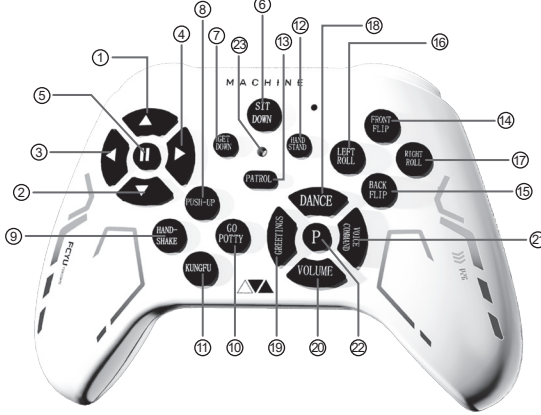

INSERTING BATTERIES


Dog

 1. Unscrew to open battery cover, connect the rechargeable battery with connector. The battery connector will only fit in one way. Do not force the connectors together.
 2. Replace battery cover.
- Attention: If the dog will not be used for an extended period, remove the battery for storage.

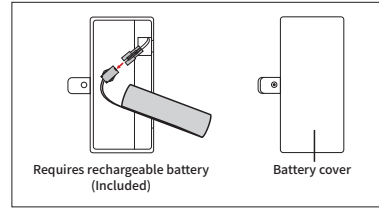

Remote control

 1. Unscrew to open battery cover, insert 3 x 1.5V AAA batteries (not included).
 2. Replace battery cover.
- Attention: Remove batteries after you have finished using your product.

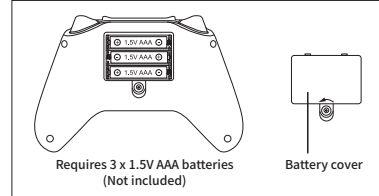


- 1 -

LITHIUM BATTERY CHARGE INSTRUCTIONS

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

 1. Turn off the dog.
2. Connect the supplied USB-C cable to the charging port on the dog, then plug the other end into a 5V d.c. 2A charger(not supplied) or a USB port. The charging light will light up when charging. When it has finished charging, the light turns off.
3. Disconnect the USB-C cable.

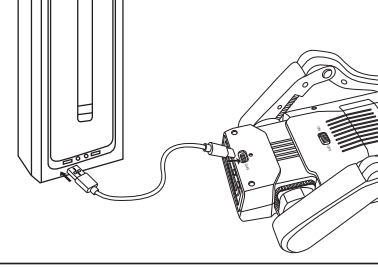

POWERING ON YOUR DOG

Once you have inserted batteries into your dog and remote control, you can go ahead and power on your dog. To do so, slide the ON/OFF switch located on the bottom of the dog to the ON position. When you do not operate the dog for about 1 minute, it will make a sound to remind you. A second sound will remind you at 2 minutes. When you do not operate the dog for 3 minutes, it will automatically power off, you can restart the ON/OFF switch to the ON position at the bottom of the dog to resume use. When you have finished playing with your dog, slide the ON/OFF switch to the OFF position. NOTE: When your dog is running low on power, it will make sounds to remind you, the power light will dim or some of the functions will not be available. Once the batteries are completely depleted, charge the battery of the dog and replace the batteries of the remote control as soon as possible to continue use.

MOVING YOUR DOG

You can use your remote control to move your dog around in different directions.

Press the forward/backward button to make the dog walk forward/backward for a distance.



Keep pressing the forward/backward button to make the dog walk forward/backward continuously.

Press the left/right button to make the dog turn left/right for a distance.



Keep pressing the left/right button to make the dog turn left/right continuously.

- 2 -

VOICE COMMAND

First, press the voice command button on the remote control. You will hear two beeps. The remote control indicator will always be red. Speak the command clearly into the remote control (within 30cm). After speech recognition, the indicator will turn off and the dog will make the requested action. After the dog has completed one action, repeat the above steps to make the dog do new tricks.



NOTE: Best receiving range between remote control and the dog is 3-5 metres. The effective range to speak to the remote control is less than or equal to 30cm.

SIT DOWN:

The dog will sit down when it receives the "sit down" signal.



GET DOWN:

The dog will get down when it receives the "get down" signal.



 
HANDSTAND:

The dog will handstand when it receives the "handstand" signal.



PUSH-UP:

The dog will do push up when it receives the "push up" signal.

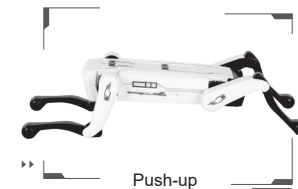

PATROL:

The dog will patrol when it receives the "patrol" signal.



GO POTTY:

 
The dog will go potty when it receives the "go potty" signal.



- 3 -

HAND-SHAKE:

The dog will hand-shake when it receives the "hand-shake" signal.

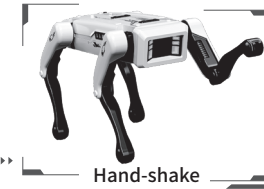

DANCE:

The dog will dance when it receives the "dance" signal.



FRONT FLIP:

The dog will do a front flip when it receives the "front flip" signal.



LEFT ROLL:

The dog will do a left roll when it receives the "left roll" signal.



KUNGFU:

The dog will perform kungfu when it receives the "kungfu" signal.



GREETINGS:

The dog will greet you when it receives the "greetings" signal.



 
BACK FLIP:

The dog will do a back flip when it receives the "back flip" signal.



RIGHT ROLL:

The dog will do a right roll when it receives the "right roll" signal.

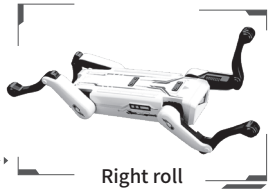

- 4 -

PROGRAMMING

Press the "programming" button to enter programming mode, the dog can be programmed with up to 19 actions. Press the "programming" button again to make the dog perform the programmed actions.

STOP

Press the "stop" button, the dog will stop all actions and enter standby mode.

VOLUME

Press the volume button on the remote control to control the volume of the dog.

PROBLEMS AND SOLUTIONS

COMMON PROBLEM	SOLUTIONS
WITHOUT REACTION WHEN TURNED ON.	Please check whether the battery is properly connected or the battery power is sufficient.
THE REMOTE CONTROL CAN'T BE OPERATED.	Please make sure the remote control is fully powered. When using the remote control, please aim at the dog signal receiver. Strong light or sunlight will affect the remote controls effect.
DOG DOES NOT FOLLOW THE CONTROL SIGNALS.	Please make sure the dog is fully powered. If the power is low, the dog might not function correctly.

43757367

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. THE SUPPLY TERMINALS ARE NOT TO BE SHORT- CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: THE BATTERY CHARGER USED WITH THE ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: THE TOY IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL.

CAUTION: THE PRODUCT HAS A RECHARGEABLE LITHIUM-ION BATTERY, ONLY CHARGE THE PRODUCT BY PLUGGING THE LARGE END OF THE USB CABLE INTO A 5VDC. 2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY. ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.

PRODUCT MAY VARY FROM THE IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE THROUGH WATER.
DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT.

2.4GHz



- 5 -