

ZC013 - Movie Fun Pack with ice packet - Instructions Manual

Size A4 = 210 x 297 mm - 1 ink

EN (Kmart)

20241128

ENG

6+ years



©Disney
www.disney.com



Manufacturer : TigerHead Toys Ltd.
Unit 811, 8/F, Shun Fat Industrial Building, 17 Wang
Hoi Road, Kowloon Bay, Kowloon, Hong Kong
info@tigerhead.es
www.tigerheadtoys.com

CONTENTS



Cup with Lid



Spoon straw



3 freezer packets



Instruction manual



Popcorn maker with lid and silicone base



3 x Popcorn boxes

ABOUT THE SLUSHY MAKER

Warning! Not suitable for children under 36 months. Small Parts. Choking Hazard. Warning! To be used under the direct supervision of an adult. Ages 6 & Up. Read the instructions inside. Please keep this package/ instruction since it contains important information. Contents may vary slightly in colour and shape shown on the packaging or in advertising. Filling shown is for demonstration purposes only and not included as part of the accessories. Wash thoroughly before and after use. MADE IN CHINA. INGREDIENTS NOT INCLUDED.

IMPORTANT

- Upon opening Slushy Maker package, the reusable freezer packets may be moist. This is normal as condensation may form during shipment temperature changes.
- IMPORTANT – NOT EDIBLE.** Do NOT cut, open, or ingest the freezer packs. Freezer packs are NOT food or drink. Use only as instructed; place packs sealed and intact inside the cup. If contents are swallowed, seek medical advice immediately.

TIPS

- Wash before and after use with dishwashing detergent and dry thoroughly.
- Put back reusable freezer packets into the freezer after use.
- Use cold beverages for faster and better results.

 
CAUTION

- Always use under adult supervision.
- Do not wash the parts in the dishwasher as they may become deformed.
- Do not sterilise by boiling.
- Do not place near fire.
- Do not use in microwave.

HOW TO MAKE THE BEST SLUSHIES!

1


Put the reusable freezer packets into freezer until they are frozen. It takes about 8-9 hours (or overnight) in most freezers.

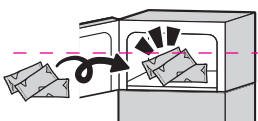

2



 Once frozen, put all 3 frozen packets into Slushy Maker cup and pour in your favourite COLD drink to the fill line.

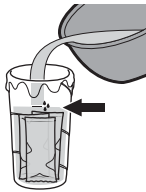

3

Screw on the lid, make sure the lid is tightly secure. Place your finger over the hole on the lid and shake for 3-5 minutes.



Note: FOR SODA AND CARBONATED DRINKS, LIFT YOUR FINGER OFF THE HOLE EVERY 2-3 SHAKES TO RELEASE SOME PRESSURE.

4

Continue shaking until your drink has become slushy.

WARNING: PLEASE REMOVE FREEZER PACKETS BEFORE CONSUMING.



CLEANING & CARE

- Slushy maker is NOT dishwasher safe.
- Hand wash. Let air dry.
- After use, thoroughly wash the packets and store them in the freezer to extend product life.

ABOUT THE POPCORN MAKER

Warning! DO NOT LEAVE MICROWAVE UNATTENDED WHILST POPPING.

*Cooking time varies depending on your microwave. Stop microwave when popping begins to slow down to 2 or 3 pops a second. Some kernels will remain unpopped. Make sure your microwave is clean before you start. Never use the grill element of your microwave while using this product. Check with the manufacturer's instruction manual for suitability of this product in your appliance before use. Be sure the silicone base is placed at the bottom of the inner bowl before using. Operating the Popcorn maker without the base may damage the product. MADE IN CHINA. INGREDIENTS NOT INCLUDED.

IMPORTANT

- Double wall designed vessel allows for cooler handling, please note that recipes with extended cooking times may result in raised temperature.
- Always show caution before removing from microwave. Lid retains heat after cooking, always use the raised grip to open.

 
CAUTION

- Always wait for the product to cool before reusing.
- If plastic shows signs of damage as a result of over cooking stop using this product.
- Some foods may stain the inner cup.
- Do not let children cook without adult supervision.
- After heating, bottom of Popcorn maker may become very hot. Always use a pot holder or oven mitt.

HOW TO OPEN AND CLOSE THE POPCORN MAKER


1

To open, twist the lid counterclockwise.

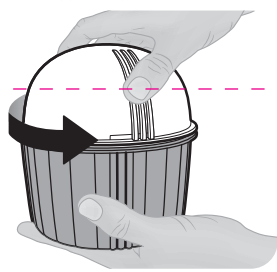

2

 To close, twist the lid clockwise until you hear a "click" sound.

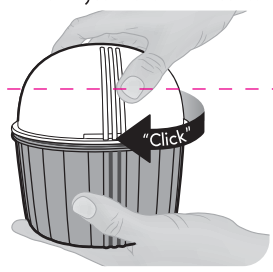

CARE INSTRUCTIONS

Be sure to wash the Popcorn maker before every use. Wash thoroughly before and after use.

PERFECT POPCORN RECIPE

WARNING: COMPLETED BY AN ADULT.

INGREDIENTS (NOT INCLUDED):

- 30 grams or 3 tablespoons of corn kernels
- Salt (optional)

METHOD:

- Add the corn kernels into the Popcorn maker
- Give it a shake to ensure they are evenly spread on the base of the Popcorn maker.
- Place the Popcorn maker in the microwave and cook on HIGH for 1 minute and 30 seconds*. (Based on cooking time for 1000W microwave, for other power ratings refer to Microwave Power Table).
- Time's Up! Remove from the microwave and enjoy straight from the Popcorn maker or season and serve into your favourite bowl.

NOTES:

- In order to cook in a healthy way it is not necessary to add oil or butter into the vessel to make it work.
- DO NOT overcook as popcorn will scorch and potentially damage this product.
- It is normal for some kernels to remain unpopped after using the Popcorn maker. DO NOT reheat the unpopped kernels.

Microwave Power Table		
Microwave Power	700W	1000W
Recommended Time	Approx. 3 minutes 10 seconds	Approx. 1 minute 30 seconds
Warning: Do not exceed recommended time!		