

 
KIBÖ INSTRUCTION MANUAL



CAUTION:
Battery is packed separately inside the packaging and must be installed before use.

Distributed Exclusively in Australia
by M.J.M Australia
ABN 40 058 141 745
www.mj-m-australia.com
Keycode 43762897 23/26


PARTS OF KIBO

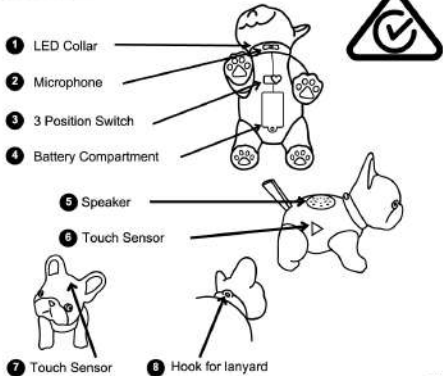

EN-1

KIBO OPERATION GUIDE

 ON/OFF MODE

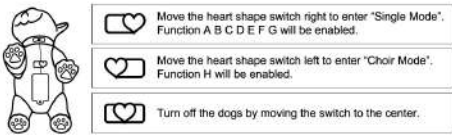

SINGLE MODE

Play along with individual Kibos


TWO TOUCH AREAS

Touch once or twice to trigger different sounds and the collar lights up. (*Hold KIBO in your palm for a better sensitivity of the touch sensors.)



ORIENTATIONS

Different positions trigger different sounds and the collar lights up.

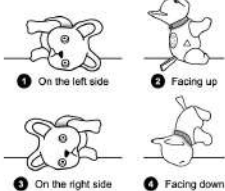

EN-2

ORIENTATION AND TOUCH

Combinations of orientation and touch will also trigger differently as well.


BLOW A KISS TO KIBO

Blow to the mic at the collar for sounds and light.



LEAVE A MESSAGE

Record secret messages to your love ones.

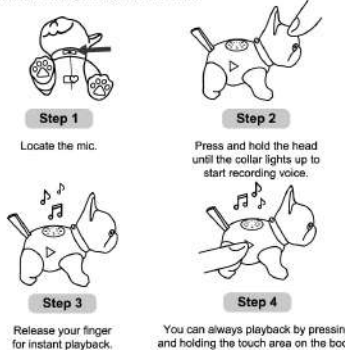

EN-3

SINGLE MODE continue

HAVE YOU TRIED A KIBO SHAKE?

Give him a shake for burps and grumbles - he's probably not a fan!



IDLE

Kibo will be switched off automatically after 2 minutes.


To switch on again, please move the heart shape to the centre position and switch on again.

CHOIR MODE

Sing along with multiple dogs (Up to 8 if ambient radio frequency is not crowded).

SING ALONG

Make sure all dogs enter the choir by moving the on/off switch to the left.

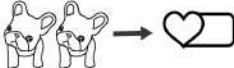

EN-4

Touch the head of either dog will trigger the songs:



IMPORTANT PRECAUTIONS CONCERNING BATTERIES

- Use only new batteries of the required size and recommended type.
- Non-rechargeable batteries cannot be charged.
- Different types of batteries of new and used batteries or accumulators must not be mixed up.
- Rechargeable batteries must be taken out of the toy before being charged. Do not connect more than the recommended number of power supplies.
- Rechargeable batteries must only be charged by persons of at least 5 years old.
- Batteries and accumulators must be inserted according to their polarity. Insert the batteries making sure that the positive (+) and negative (-) ends of the batteries are properly aligned with the (+) and (-).
- Battery or accumulator terminals must not be short-circuited.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries must be removed from the toy.
- The batteries should only be replaced by an adult.
- Always remove the batteries from the toy when you do not plan on using it for a long period of time.
- Exhausted batteries must be removed from the toy.
- Do not disassemble batteries or battery packs. Do not dispose of batteries in fire or water to avoid accidents.
- The charger and the battery will be warm during charging.
- The battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- The USB cable is not a toy. Please make sure to disconnect it before cleaning.
- Batteries should be recycled or disposed of as per state and local guidelines. Recycle the batteries appropriately, do not throw them into a fire and do not throw away in household waste. Protect the environment by not disposing of this product with household waste.
- The toy shall only be used with a power supply for toys.

EN-5


ADVICE TO KEEP INSTRUCTION FOR USE.



WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this toy. The toy is not to be connected to more than the recommended number of transformers or power supplies.
• Toys liable to be cleaned with liquids are to be disconnected from the transformer or power supply before cleaning. - The screw driver is not a toy. Please retain and store the tools where the child can't access it. The toy shall only be used with a power supply for toys.

Battery Compartment

Open the cover of the battery compartment with a phillips screwdriver (not included) and install the battery in the correct direction. Put the Li-on battery into the battery room, close the battery compartment and screwed before play. Replacement and charging of the battery have to be done by an adult only.

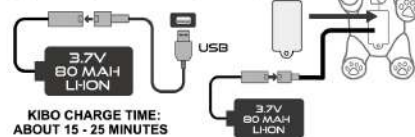

KIBO CHARGE TIME:
ABOUT 15 - 25 MINUTES

Battery Requirements



For more information about KIBO products:



SCAN ME

EN-6