

Automatic Card Dealer Manual

8+
YEARS

Please read this manual before use. The packaging and instruction manual must be retained since it contains important information.




LITHIUM BATTERY CHARGE INSTRUCTIONS

1. Turn off card dealer.
2. Connect USB charging cable plug with card dealer charging interface.
3. Plug the large end of USB cable into a 5Vd.c 2A charger (not supplied) or USB port only. The green indicator light is near the display screen will be flash when charging.
4. The green indicator light will light up and will be solid after it has finished charging. Unplug the USB charging cable from computer USB interface and disconnect with card dealer.


Note: When the card dealer is low on power, it will emit a continuous beeping sound for 30 seconds.



PRODUCT DESCRIPTION

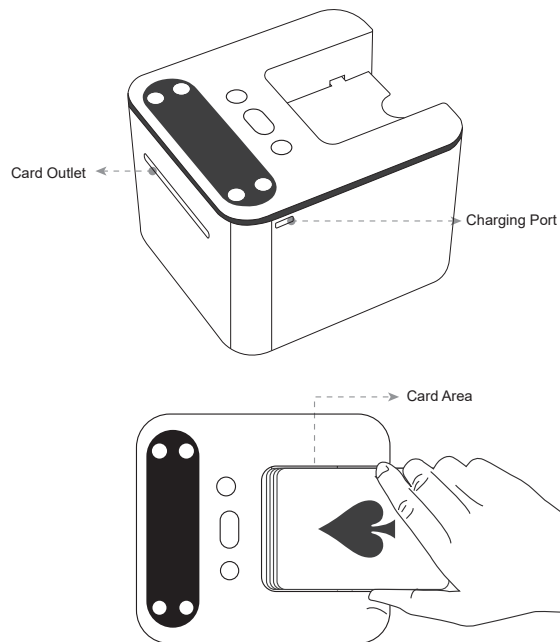

BUTTON DESCRIPTION

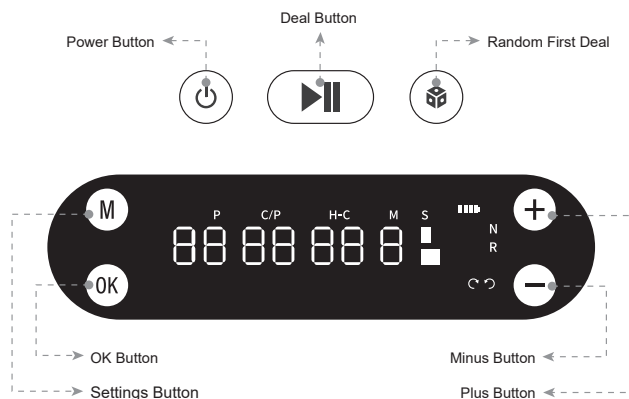

Button	Button Name	Button Description
	Power Button	Press for 0.3 seconds to power on, press for 2 seconds to power off.
	Deal Button	Press to start dealing; cards are dealt from the default outlet. Press this button during dealing to pause the process.
	Random First Deal	Randomly select one player to deal cards to.
	Settings Button	Press to enter the setting mode, press again to go to the next item.
	OK Button	After parameter setting is completed, press the "OK" button.
	Minus Button	Increase the parameter value of the option.
	Plus Button	Decrease the parameter value of the option.

SCREEN DESCRIPTION

Seq.	Option	Option Description
①		Press the "Ⓜ" button to enter the "Number of Players" . Adjust parameters using "(+) (-)" to increase or decrease values. This option supports a maximum of 8 players and requires at least 3 players.
②		Press the "Ⓜ" button to enter the "Cards per Player" option. Adjust parameters using "(+) (-)" to increase or decrease values. "Cards per Player": Number of cards each player receives per round.
③		Press the "Ⓜ" button to enter the "Hidden Cards" option. Adjust parameters using "(+) (-)" to increase or decrease values.
④		Press the "Ⓜ" button to enter the "Continuous Dealing" option. Adjust parameters using "(+) (-)" to increase or decrease values. Cards dealt to one player each time.
⑤		Press the "Ⓜ" button to enter the "Distance" option. Adjust the distance via "(+) (-)", with 2 levels in total. The farther the distance, the faster the dealing speed. Each level differs by about 5 seconds.
⑥		Press the "Ⓜ" button to enter the "Mode" option. Adjust the mode via "(+) (-)". Normal: Standard dealing. Shuffle: Randomly deal 1-3 cards to each player per round, with the same total cards dealt to everyone.
⑦		Press the "Ⓜ" button to enter the "Rotation Mode" option. Adjust the mode via "(+) (-)": Deal clockwise or counterclockwise.

Operation Steps

Step 1: Turn on the power, press button "⏻" for 0.3 seconds.

Step 2: Enter settings by pressing button "M", adjust parameters via "+/-", then press "M" to enter the next option, and so on.

Adjustable parameters: Number of Players, Cards per Player, Hidden Cards, Continuous Dealing, Speed, Mode, Rotation Direction.


Step 3: After setting all parameters, press "OK" (parameters will not be saved without pressing this button).

Step 4: To deal cards directly, press "▶||". To start dealing to a random player first, press "⊗".

Tips:

Shuffle cards before adding to the card dealer.

During dealing, the screen displays two items: the player number of the current recipient (e.g., Player 1, Player 2) and the sequence number of the card received by that player. If there are hidden cards, they will use an independent number (total players + 1; for a 4-player game, it shows No.5) and simultaneously show the sequence number of the current hidden card being dealt. After dealing is finished, the screen automatically calculates and displays the total number of cards dealt.

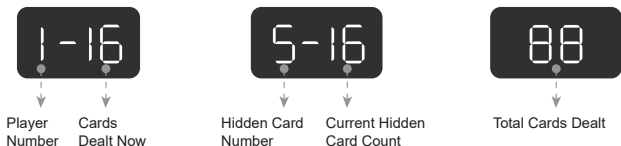

Continuous Dealing Function:

When the required number of cards exceeds 108, you may first load about 108 cards to start dealing. (Max card dimensions: 120mm x 65mm) After the current batch is dealt, add the remaining cards to the card compartment and press the deal button to continue the remaining dealing process until all cards are dealt. The continuous dealing function will not be triggered if dealing within 108 cards; it will only be activated when dealing more than 108 cards.

CAUTION: THE PRODUCT HAS A RECHARGEABLE LITHIUM-ION BATTERY. ONLY CHARGE THE PRODUCT BY PLUGGING THE LARGE END OF THE USB CABLE INTO A DC=5V/2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY. ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.



WARNING: THE BATTERY CHARGER USED WITH THE ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.



⚠ WARNING: CHOKING HAZARD

SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

⚠ WARNING: THIS PRODUCT IS NOT A TOY. NOT FOR CHILDREN UNDER 8 YEARS, ADULT SUPERVISION REQUIRED.

WARNING: RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. THE PRODUCT CONTAINS BATTERIES THAT ARE NON-REPLACEABLE. CHARGE THE BATTERY BY SUPPLIED USB ONLY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: THE PRODUCT IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

43-763-207