

front
142 mm

LIE DETECTOR! Instruction Manual

6+
years

► MISSION: FIND THE LIAR!

Step 1: Prepare the Suspect

Make sure their hands are clean and dry no sweaty palms allowed!

Step 2: Power Up the Lie Detector

Flip the ON switch. Listen for the beep, your mission has begun!

Step 3: Hook 'Em Up

Wrap the bands around the suspects fingers so the metal portion is in contact with the tips not the nails.

Step 4: Lock In!

The bands should be snug not squeezing, not slipping!

Step 5: Watch for the Signal

When connected right, the green "Fun" light comes on. Target acquired!

Step 6: Monitor Heart Rate

The Heart light flashes faster or slower depending on the suspect's stress level.

Step 7: Interrogate!

Ask a tough question and press "Analyse." Time to reveal the truth!

Step 8: Decode the Lights


Green = Most likely telling the truth.
Red = Most likely lying!

Step 9: Capture the Hacker!

Keep asking and scanning. The one with the most red lights is your prime suspect!

This Lie Detector tracks changes in skin resistance but it's all in good fun!
Spy results are just for laughs, results not 100% accurate.

1. Power On/Off Switch
2. Analyse Button
3. Sensitivity Adjustment Dial
4. True/False Indicator
5. Standby Indicator
6. Run Indicator
7. Speaker
8. Heart Indicator
9. Finger Band Port
10. Battery Compartment (Back of Unit)
11. Finger Bands

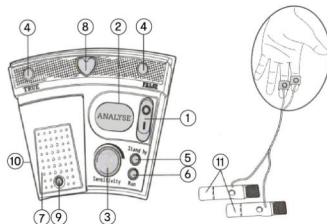


back
142 mm

LIE DETECTOR! Instruction Manual

► BATTERY INSTALLATION!

The Lie Detector requires 3 x 1.5V AAA (LR03) batteries (not included)

1. Use a small screwdriver to open the battery door on the back.
2. Remove the cover.
3. Pop in 3 AAA batteries (match the + and - symbols!)
4. Close the cover and tighten the screw.

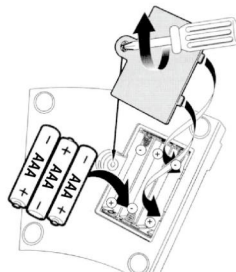

REQUIRES 3 X 1.5V AAA BATTERIES
(NOT INCLUDED)

3 X AAA

REQUIRES 3 X 1.5V AAA BATTERIES
(NOT INCLUDED)

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR KIDS UNDER 3 YEARS



WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -).
DO NOT USE DIFFERENT TYPES OF BATTERIES OR MIX AND USE BATTERIES.
NON RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY ADULT.
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
REMOVE BATTERY FROM THE TOP WHEN NOT IN USE FOR EXTENDED TIME OR WHEN
BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED.
DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.
PLEASE KEEP ALL RELEVANT INFORMATION FOR FUTURE REFERENCE.

MADE IN CHINA
CUSTOMER SERVICE:
EMART AID: 1300 124 125
EMART FID: 1300 190 190
EMART AID: 1300 753 507



10000000000000