


297x210mm

anko

Keycode:43783854

Multi Sport Net

Content List Assembly Instructions

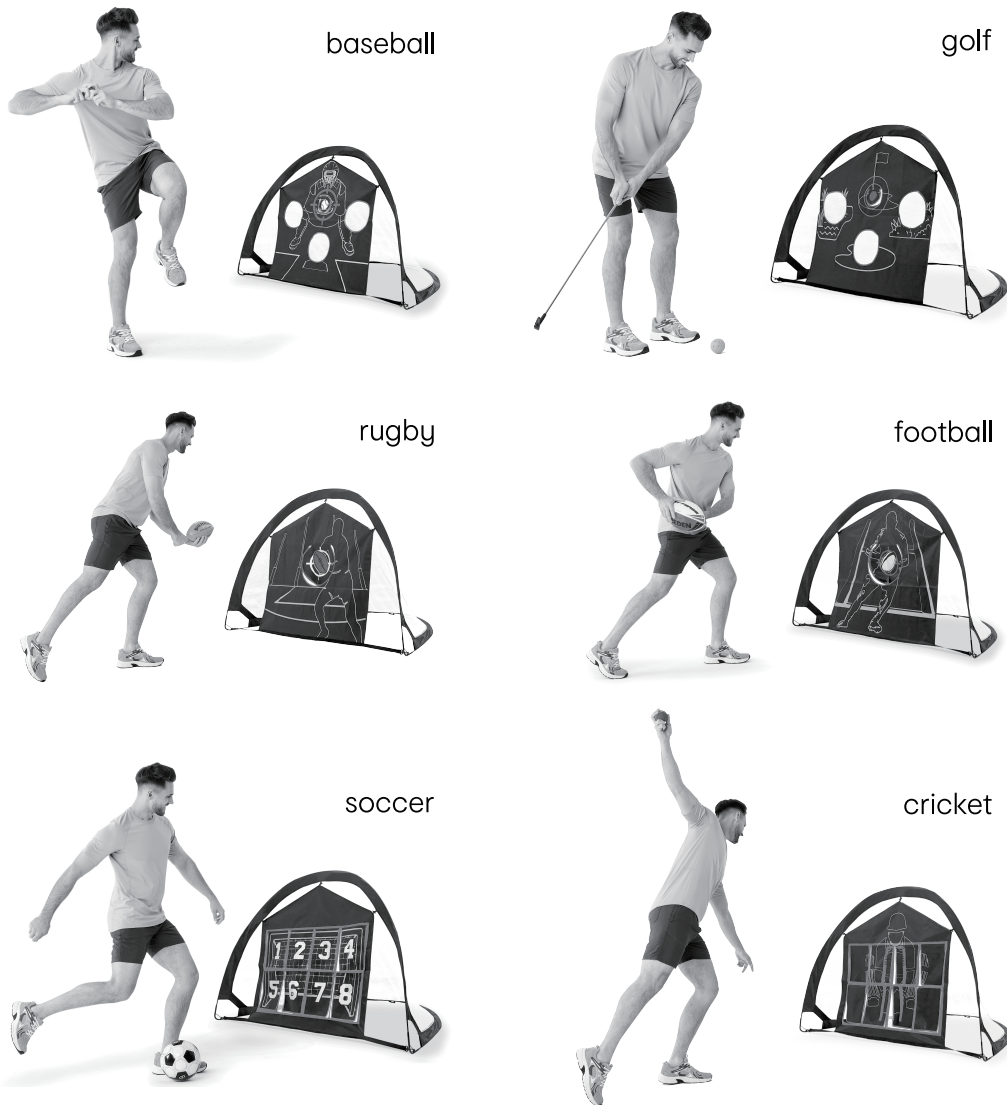



- › net dimensions: 1.8m(W) x 1.2m(Max. H)
- › portable and lightweight, perfect for backyard or camping
- › changeable goals allows 6 different sports to play
- › quick setup with hook-and-loop tension system
- › includes
 - 1 x detachable frame with net
 - 3 x reversible goals
 - 3 x ground pegs
 - 1 x carry bag

WARNING:
CHOKING HAZARD—Small Parts
Not Suitable for Children Under 3 Years

WARNING: CONSULT YOUR PHYSICIAN BEFORE ENGAGING
IN ANY EXERCISE PROGRAM. ALWAYS CHECK EQUIPMENT
AND ACCESSORIES BEFORE USE. REPLACE PRODUCT IF
ANY DEFECT IS DETECTED. KEEP AWAY FROM CHILDREN

MADE IN CHINA
CUSTOMER SERVICE:
HAWAII: 800-555-5555
HAWAII: 800-555-5555
THURSDAY: 1000-1000


ACCESSORIES LIST

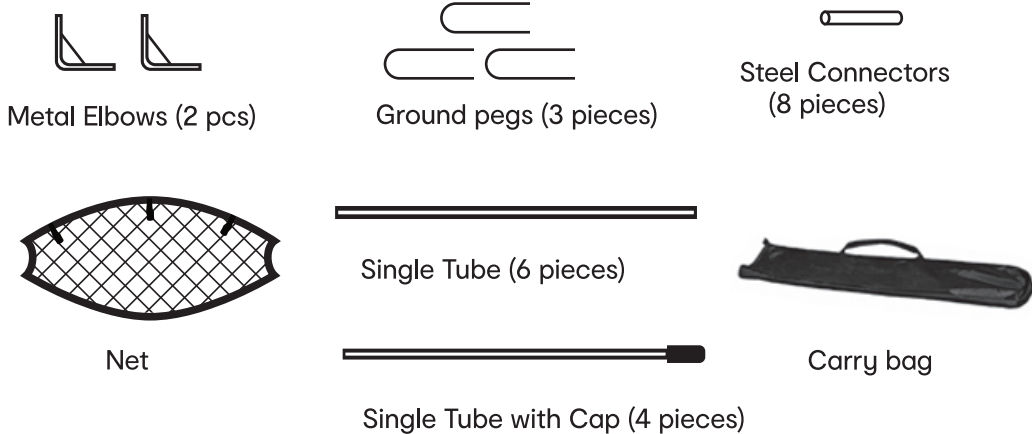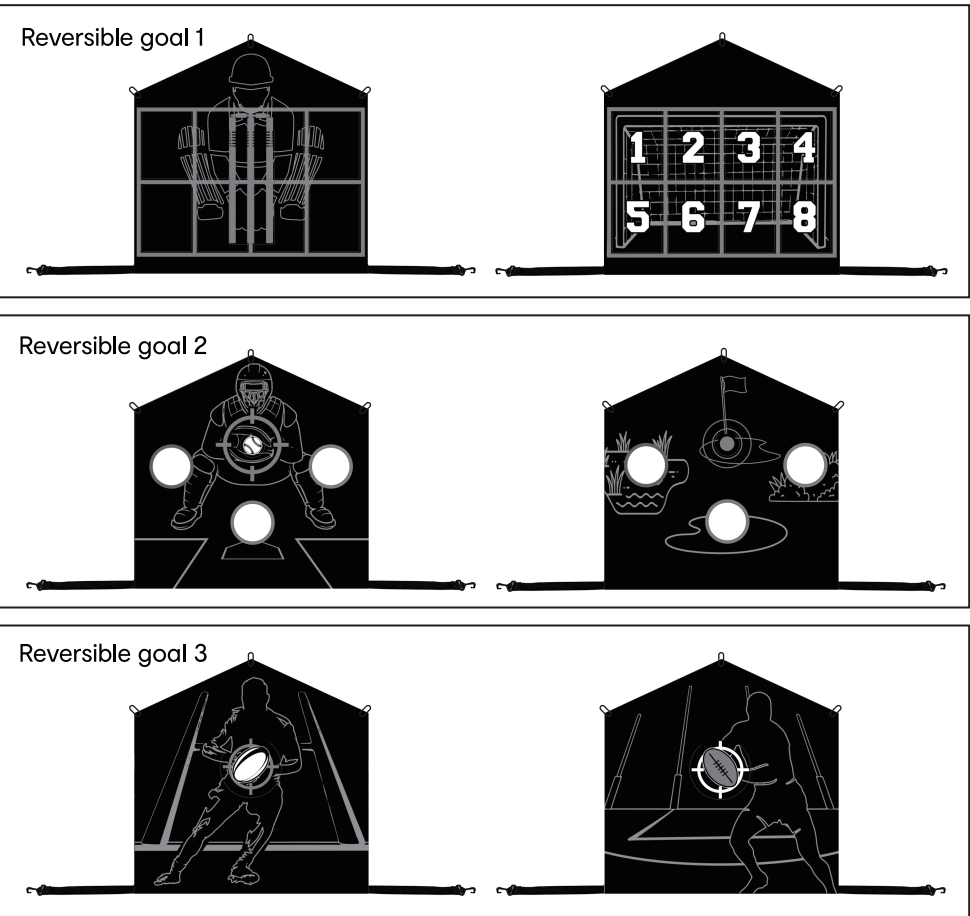


HOW TO ASSEMBLE

Installation Steps

 
1. Use Steel Connectors to connect three single tubes with two single tubes with cap to form a long rod.




2. Insert the assembled tubes into the two holes in the net.

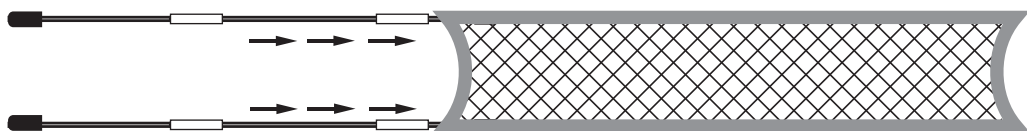


3. Connect the tubes to one of the Metal Elbows in set.

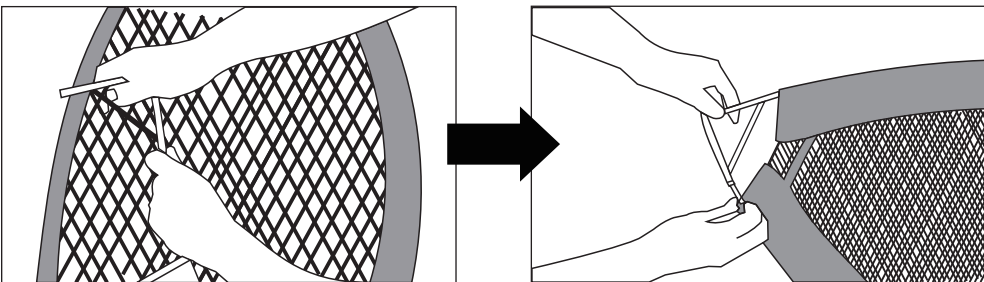


4. Step on the installed end with your foot then connect the unassembled tubes into the remaining Metal Elbow.

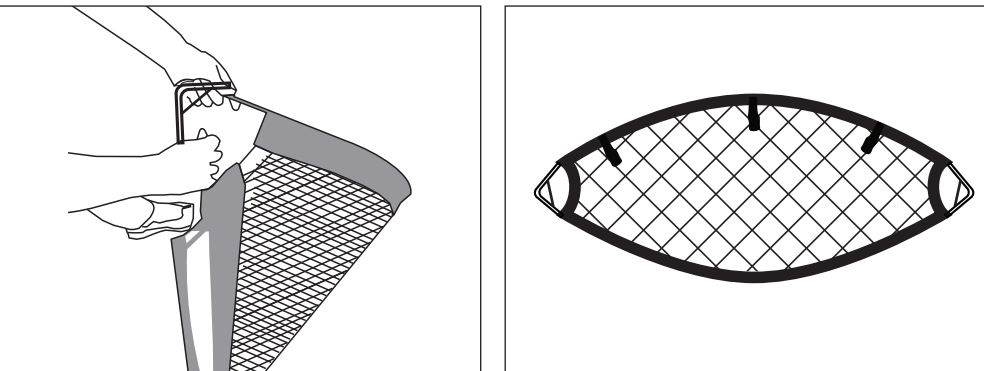

5. Connect the hooks at the bottom of (Reversible goal 1/2/3) to Metal Elbows.

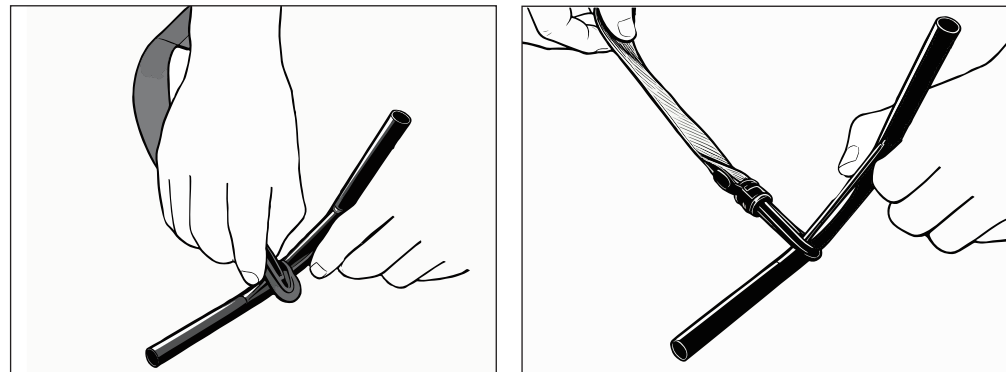

6. Connect the hooks of (Reversible goal 1/2/3) to the olive buckles of the assembled mesh.

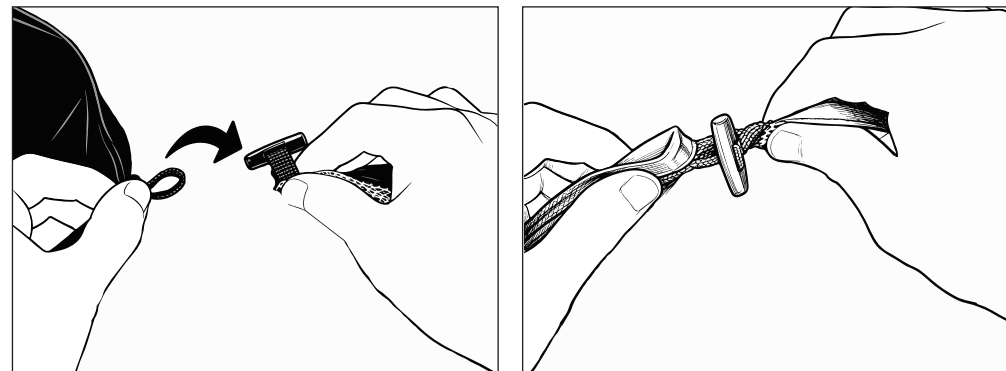

7. If using on grass, use the included Ground pegs to secure the net to the ground. On other surfaces, use sandbags or weights to hold the net to the ground.

