



## **Mini Waffle Maker**

**FS-317**

### **User Manual**



PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE

## IMPORTANT SAFEGUARDS


**When using any electrical product, always follow these basic safety precautions:**



### **READ ALL INSTRUCTIONS BEFORE USE.**

Read and understand all instructions before using this product and follow all warnings and cautions in the manual.


- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord or a power board with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**

- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Use only heat-proof synthetic or wooden utensils when making waffles, this is to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- **WARNING! User should not overfill the baking plate as waffle will expand rapidly during cooking. Over filling will cause damage to the locking clip due to confined pressure, and it may eject and cause injury.**
- For cleaning cooking surface, please refer to section “Cleaning and Maintenance”.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR MINI WAFFLE MAKER

- a. Handle locking clip
- b. Plate release clip
- c. Heating indicator
- d. Main unit
- e. Waffle plate
- f. XOXOXO plate
- g. CUTIE plate
- h. BOW plate

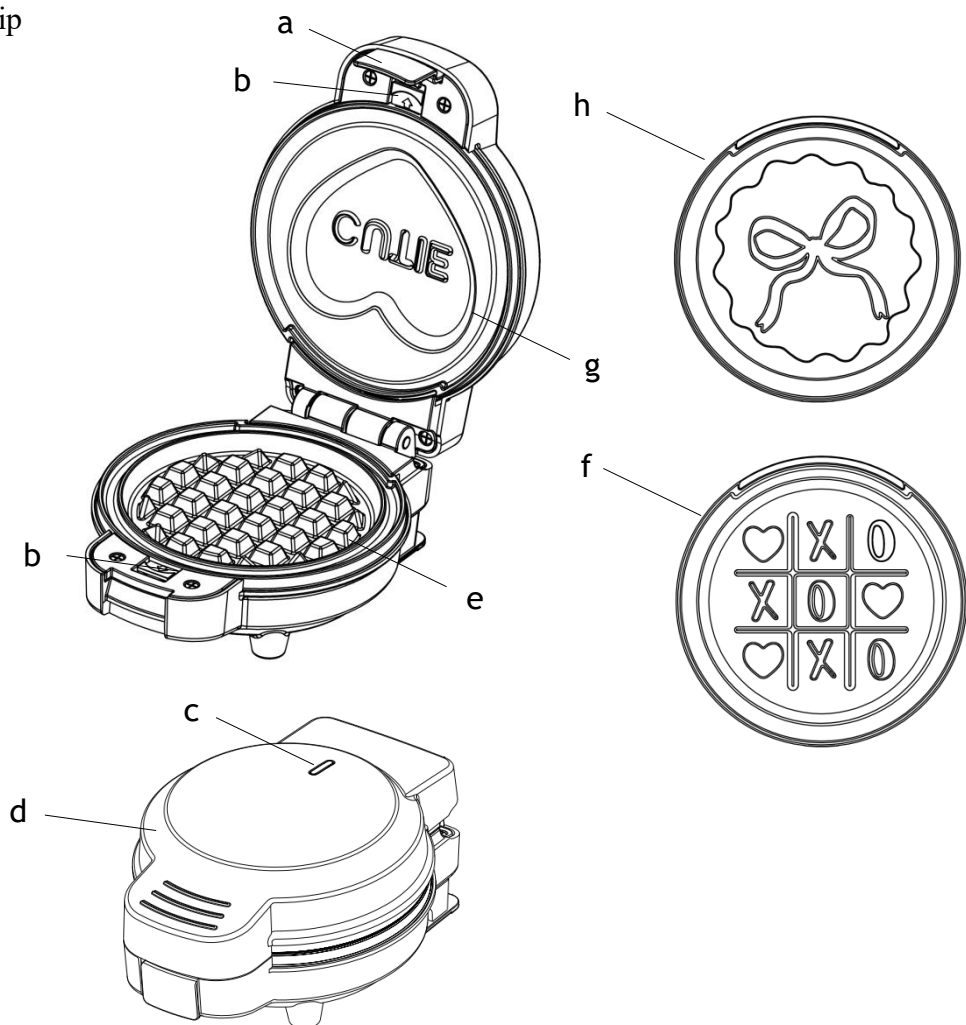

### BEFORE FIRST USE

**IMPORTANT!** Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.

**IMPORTANT!** Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

- Unpack the appliance and check if all parts are there and undamaged. In case of shipping damage or incomplete package, return the product to place of purchase for replacement.
- Clean the inside and outside of the appliance with a damp cloth or sponge. Wipe dry with a soft dry cloth.

**WARNING!** Do not immerse the main unit in water or any other liquid to clean.

- Wash the plates with soapy water. Dry all components thoroughly before use.

**WARNING! User should not overfill the baking plate as waffle will expand rapidly during cooking. Over filling will cause damage to the locking clip due to confined pressure, and it may eject and cause injury.**

- Place the appliance on a flat, heat-resistant stable surface and ensure a minimum of 10cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.
- Push the plate release clip to the direction of the arrow to release the baking plate. Choose the style of baking plate you want and install in the appliance.
- Plug the appliance into an electrical power outlet.
- Note: Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V~ 50-60Hz.
- Allow the appliance to heat up for approximately 5 minutes. Apply a thin coating of cooking oil to the cooking plates and carefully rub it in with a paper towel. You only need to condition the cooking plates when using your waffle maker for the first time.

**WARNING! The cooking plates will get very hot.**

NOTE: On first use there may be a small amount of haze / smoke, and an odour emitted from the appliance. This is perfectly normal and will subside after few minutes of use.

- Unplug the appliance and now it is ready for use.

## HOW TO USE YOUR MINI WAFFLE MAKER

1. Before using the appliance, clean the baking surfaces with a damp cloth. Dry it with paper towel.
2. Close the appliance and plug it into a mains power outlet socket. The red heating indicator lights up, indicating that the mini waffle maker is connected to the mains power and begins heating.
3. It will take approximately 3 minutes to reach the recommended baking temperature. The red heating light will go OFF when the mini waffle maker is ready for use.
4. Open the appliance and brush the baking plates with a small amount of vegetable oil.
5. Fill batter into the bottom baking plate. Ladle just enough batter to fill the lower plate so that the peak area of the mold is covered.
6. Close the appliance. The red heating light will light up when another baking cycle begins. The waffle will be ready in around 3-5 minutes.

NOTE:

- Gently close the lid and ensure to lock the appliance with a click sound. Do not slam the lid down, as it may cause the mixture to come out of the mould.
- Do not open the appliance during the first 2 minutes after filling in the batter. It will cause splitting of the under-baked waffle and make it difficult to remove.

7. Open the appliance and check whether the waffle is sufficiently done. If you prefer a darker one, continue baking until the desired colour is achieved. After baking, open the appliance and remove the waffle from the appliance with a heat-proof synthetic or wooden utensil.
8. If additional baking is required, close the waffle maker to retain heat. Wait until the red heating light goes off again before making more waffles.
9. After using the mini waffle maker, disconnect the power plug from the mains power outlet socket.

## **WARNING!**

**Never use sharp forks or knives to remove the waffle as this would damage the non-stick coating on the baking surface. Use only heat-resistant plastic or wood utensils only.**

**Always unplug the appliance from the mains power outlet socket when not in use.**

## **CLEANING AND MAINTENANCE**

This appliance should be cleaned after each use.

**CAUTION: Do not immerse the mini waffle maker in water or in a dishwasher!**

- Always unplug your mini waffle maker from the mains power supply before cleaning or during maintenance.
- Ensure that your mini waffle maker has completely cooled down before cleaning, as it gets very hot during use.
- Clean the main unit with a damp cloth or soft brush. Wipe dry with a soft dry cloth. Do not use anything abrasive that can scratch or damage the appliance.
- Wash the plates with soapy water. Dry thoroughly before storage.

## **STORAGE**

1. Unplug the mini waffle maker from mains power.
2. Allow the appliance to cool down completely.
3. Clean and dry the appliance.

**WARNING! Do not wrap the power cord around the appliance.**

4. Store the appliance in a clean dry location and out of the reach of children.

## **TECHNICAL SPECIFICATIONS**

Voltage: 220-240V~ 50-60Hz

Power: 410-490W

## SUGGESTED RECIPE

### Ingredients

500g	all - purpose flour
50g	sugar
400ml	milk
5	eggs
100g	butter
5g	baking powder

### DIRECTIONS

Beat the eggs in a mixer until well mixed. Add remaining ingredients and mix until smooth. Leave the mixture for at least half an hour.

Preheat the waffle maker. Use a pastry brush to lightly grease coat the non-stick coating of the baking plates with oil or butter. Pour mixture into waffle maker. Cook until golden brown.

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>