

USER MANUAL

8 IN 1 CANOPY TRIKE

Keycode:43559961



Recommended Age:

For trike mode: 12M-36M

For balance mode: 24M-36M

Max Load for trike: 66.6 lb (30kg)

Max Load for push trike: 66.6lb (30kg)

Please Read this manual carefully before using the product.
In order to avoid dangerous situations, please use this tricycle in
correct way according to this manual.



WARNING: Only assembly by an adult.

WARNING:

1. Always apply the brakes whenever the tricycle is stationary.
2. Do not use this seat with any other models of tricycle.
3. Take care if using the tricycle on stairs or an escalator.
4. Do not park the tricycle on a slope.
5. Never leave the harness buckled when not fitted to a child in the tricycle, as this may pose as a strangulation hazard.

WARNING:

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED
- NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS OLD
- USE THE HARNESS AT ALL TIMES.
- USE THE STRAP TO STOP THE STROLLER ROLLING AWAY

WARNING:

1. An adult must read these instructions carefully before use, otherwise it might compromise the child's safety.
2. Please retain this instruction sheet permanently for future reference.
3. This trike should not be used near open fire or exposed flame.
4. Assembly should be done by an adult.
5. Only loading one child at a time.
6. Do not use spare parts not provided by the manufacturer.
7. Children are not allowed to climb out of the guardrail or stand on the seat.
8. In order to avoid suffocation, please keep the plastic cover (tape) away from the children after open the carton.
9. Adult supervision is required when using this trike.
10. The tricycle is intended for use on flat or gently inclined surfaces and may become unstable on steeper or uneven terrain. Users should be aware of the risk of the tricycle tipping over.
11. The vehicle is not suitable for use as a sleeping place for children.
12. Maximum weight limit is 30kg



There is potential for fingers or parts of the body to be injured when the vehicle is being folded or unfolded, and that due care should be exercised.

WARNING:

1. Adult supervision at all times.
2. Please check if the parts of the tricycle are well connected before the child uses the tricycle.
3. The vehicle is suitable for children aged 1-3 years,.
4. Do not place any load on the tricycle, otherwise, it will affect the stability of the tricycle.
5. Make sure all locking devices are locked before use.
6. It is forbidden to use the tricycle near stairs, thresholds, and steps. It is forbidden to play near heaters and stoves. It is forbidden to use in downtown areas or roads as vehicles.
7. The tricycle must be used in a flat unobstructed location to ensure that it does not tilt during normal use and causes injury.
8. The saddle must be locked in place before use.
9. Protective gear must be used when riding the tricycle.
10. Make sure that parent handle is actively engaged before use.
11. Do not use the parent handle to lift the tricycle whilst in use.

Maintenance:

Please always check and maintain the tricycle, to avoid injury:


1. Please clean the trike body with a dry cloth. If there is dirt on it, clean with water and dry with the cloth.
2. Lubricate the axle and rotating parts regularly, as it will increase the product lifespan.
3. Please regularly check and make sure the screws are not loose and components are not damaged. Please replace damaged screws and components.
4. If you need to dismount the trike for transportation or storage, please make reference to manual instruction.
5. Please make sure the trike handle and saddle junction are tightened.

Parts List


Please check all parts first




Installation Instructions

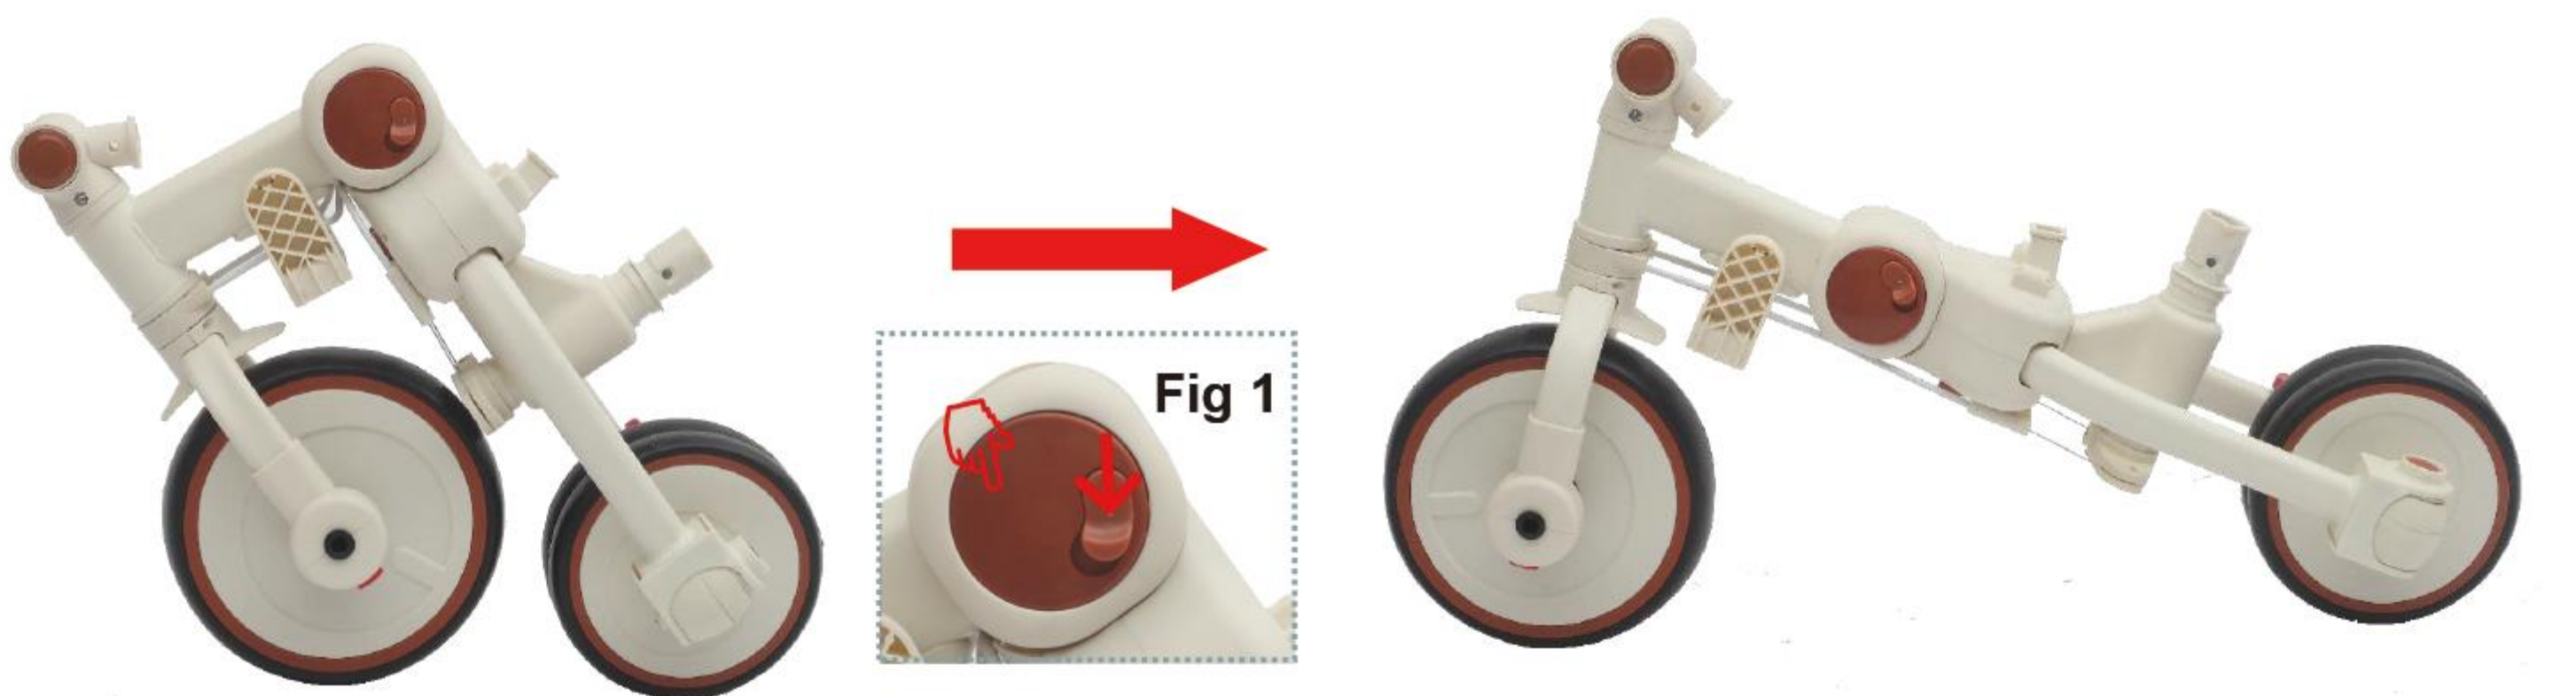

1. Open the frame directly, when fold it, push the brown button and same time press the circle part as Fig1.

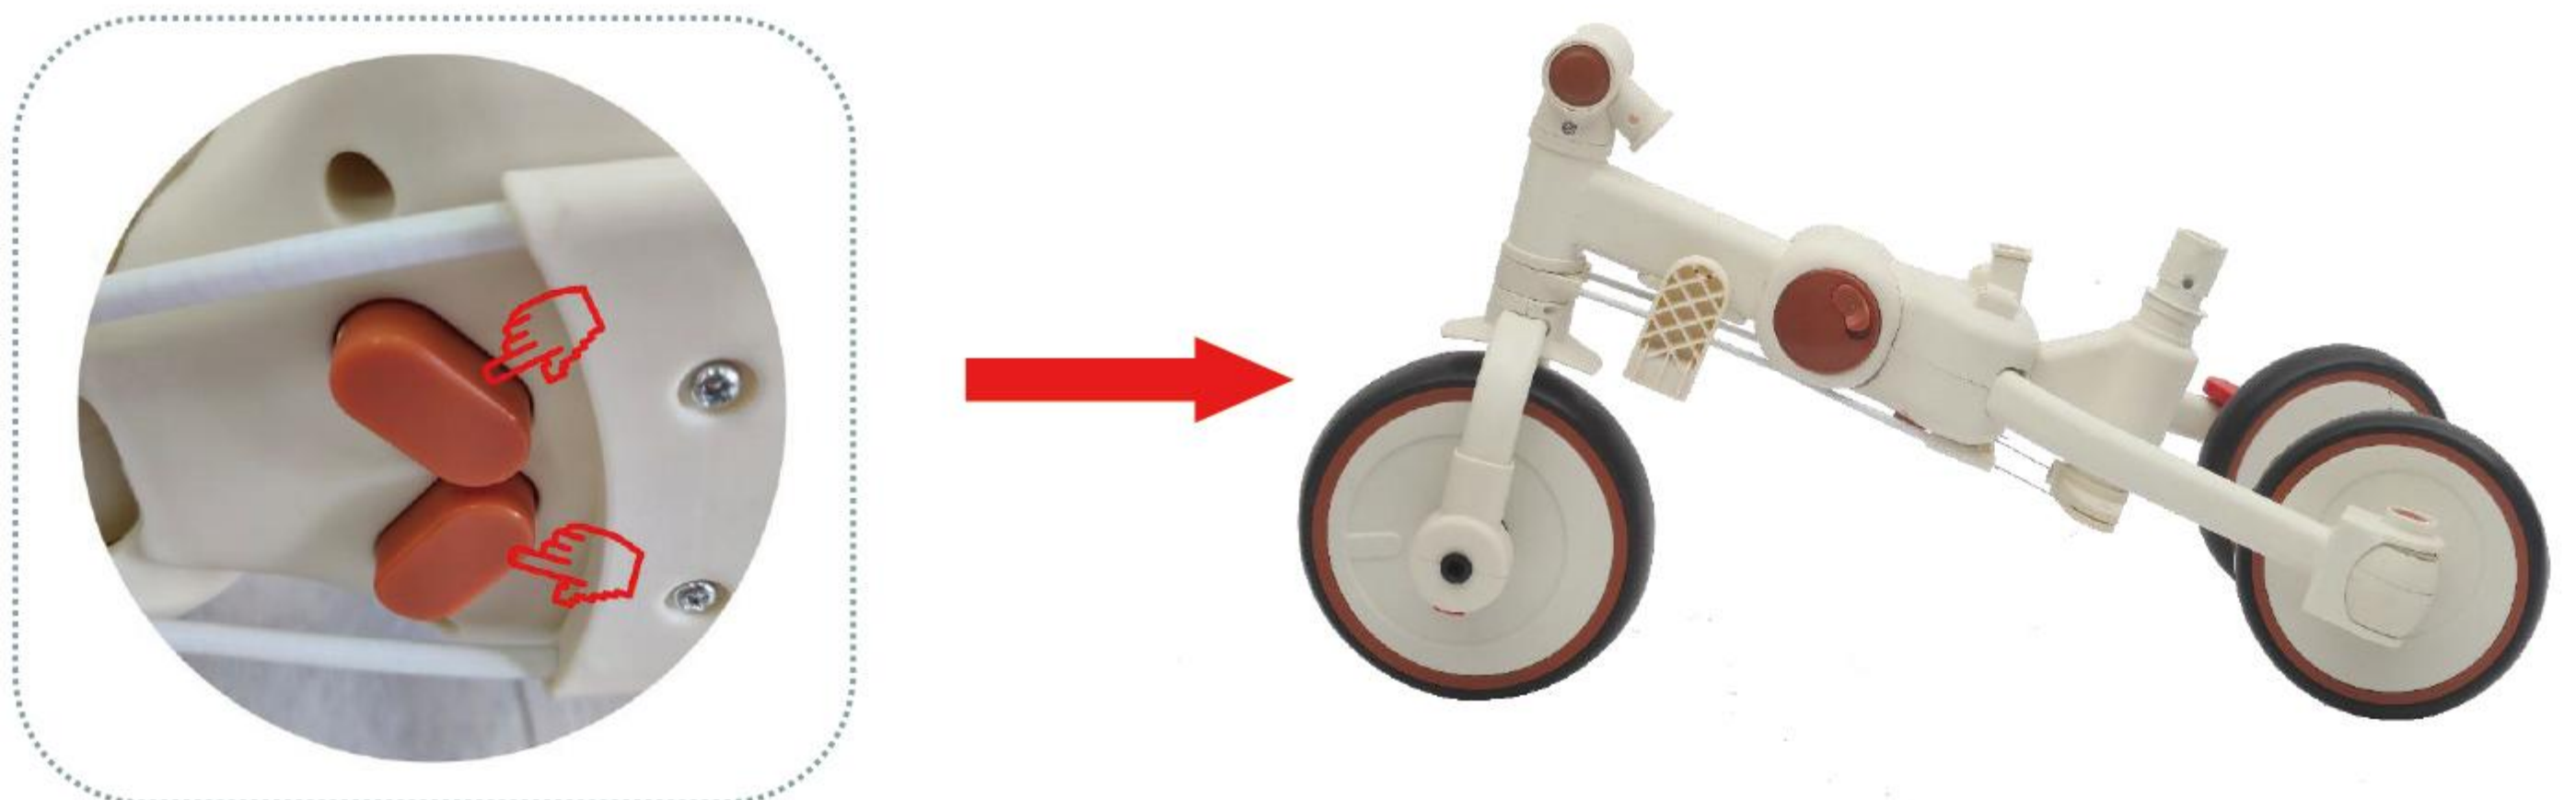

2. Press the buttons at the bottom of frame to unfold the rear forks separately.

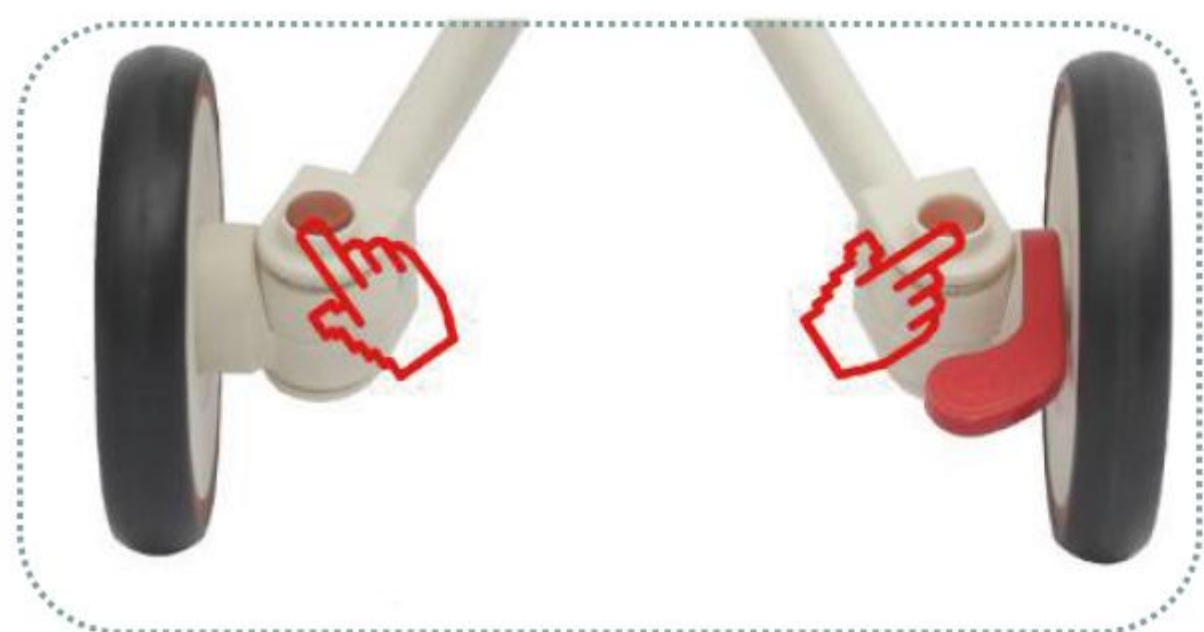


3. Press the buttons as show to rotate wheels outside to unfold them



4. Press the circle button on both sides to unfold the hanldebar bracket



5. Insert the handle bar until the spring bean pops out, and make sure the handle bar can't pull out

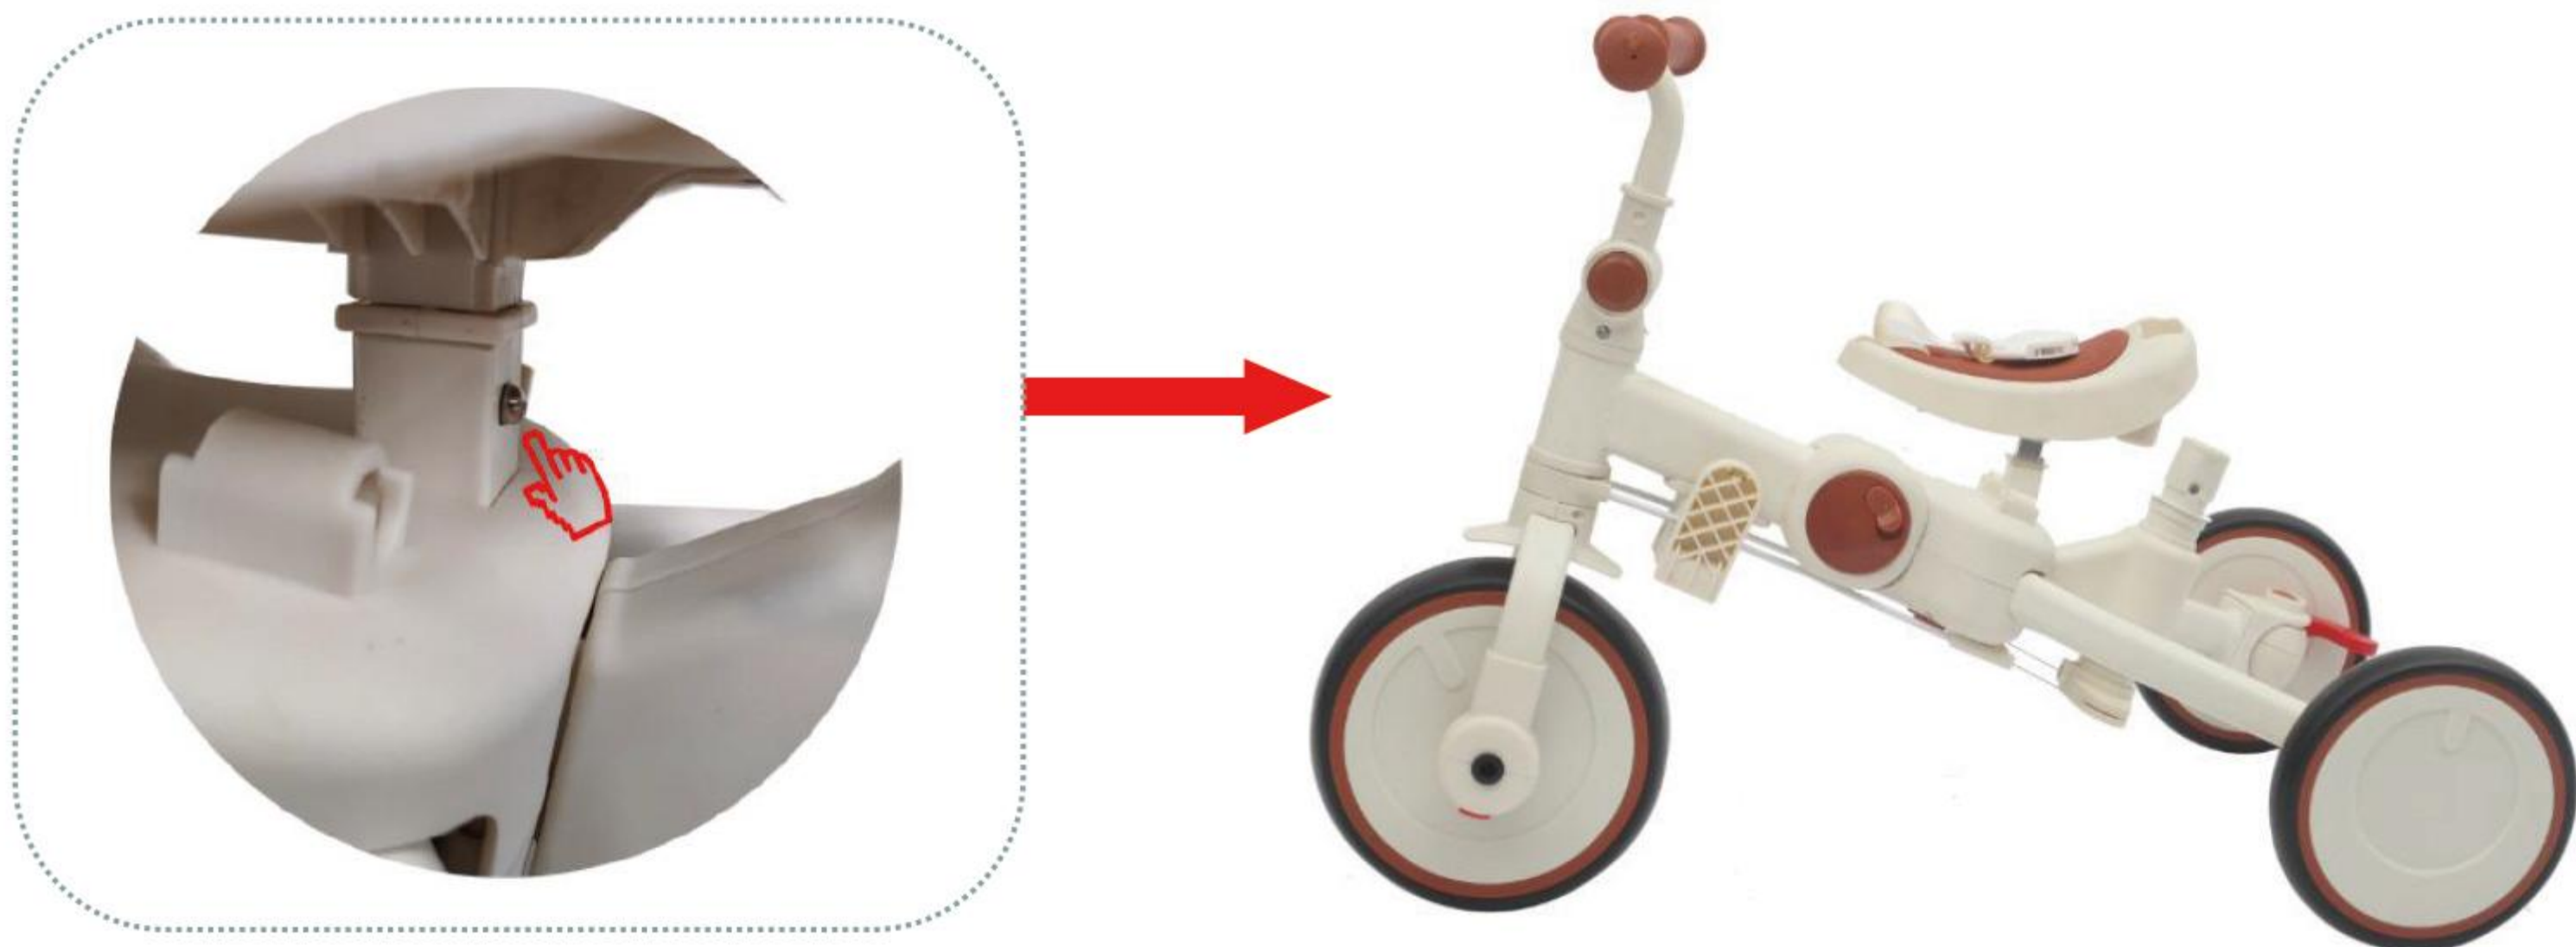

6. Insert the saddle until the bottom spring bean pops out, make sure the seat can't pull out.



Fig A

Press the brown button and insert the bracket until the button pop out.
When remove it, press the button and pull out the bracket.

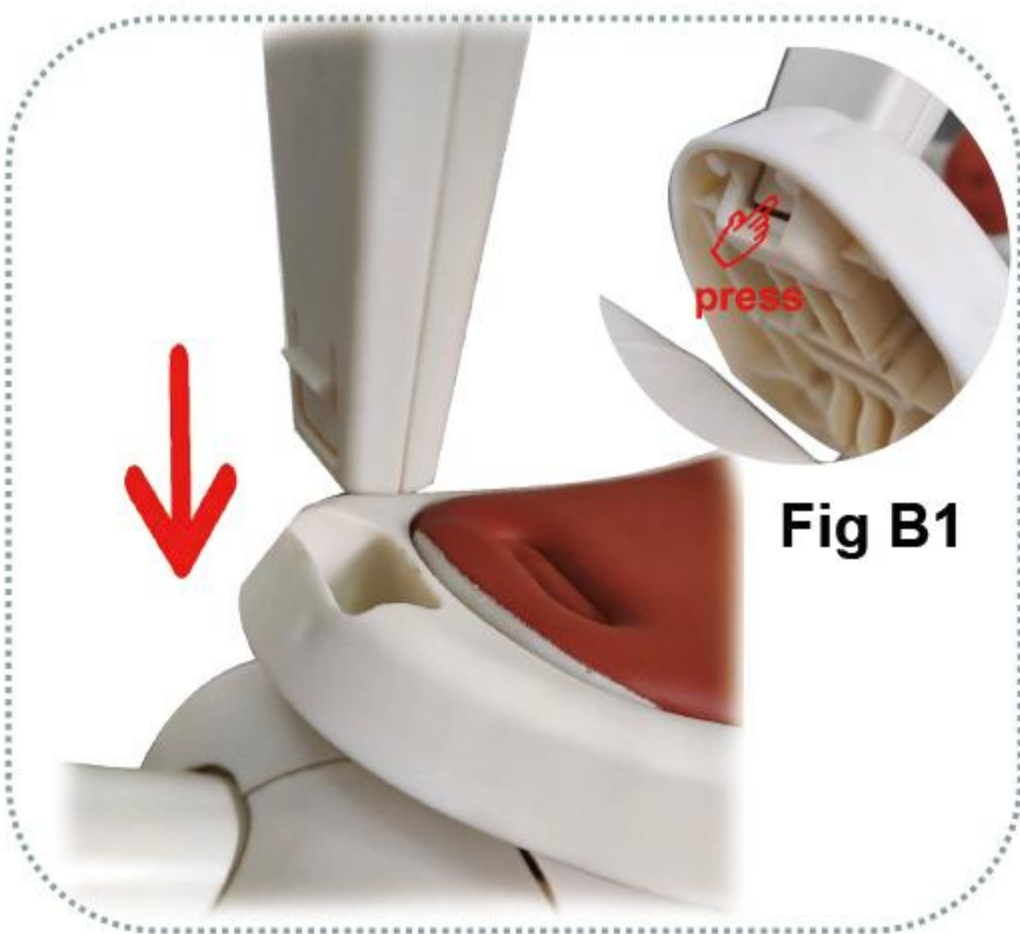


Fig B

Insert the front bracket until "click" sound, make sure it lock well.
When remove it, press the part as Fig B1



Fig C

Press the brown button and insert the end of guardbar.
When remove it, press the button and pull the bracket out.



7. Assemble the guardbar as Fig A-C



Fig D



Fig E

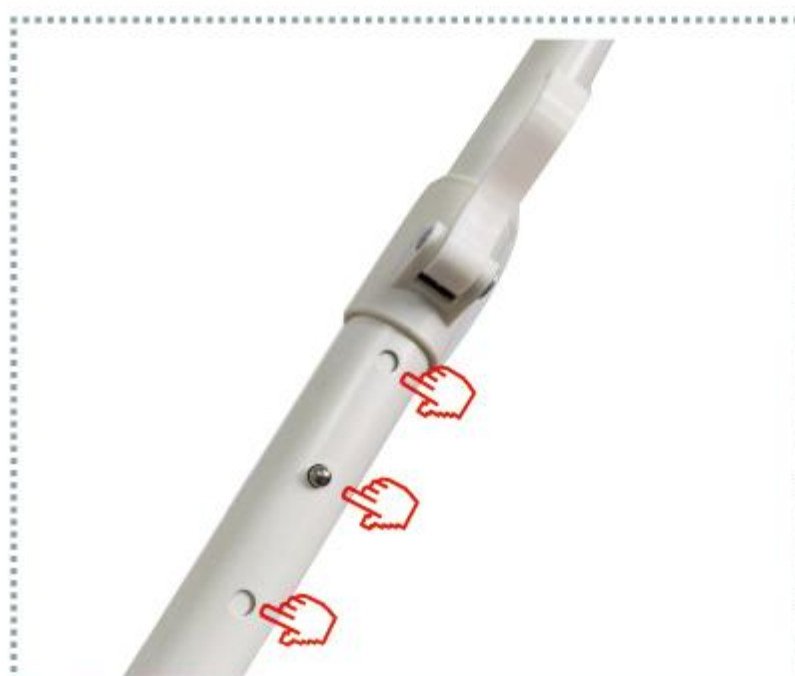


Fig F

8. Insert the canopy as Fig D and E, make sure they are fix well, when you remove the canopy, push the button and pull up the connection part as Fig F, the canopy will be removed.



Fig G



9. Insert the pushbar up until the spring bean(Fig G) pops out, make sure the tube can't pull out, there are three levels to adjust



10. Insert the pushbar up until the spring bean pops out, then lock the buckle well, there are three levels to adjust



Fig1

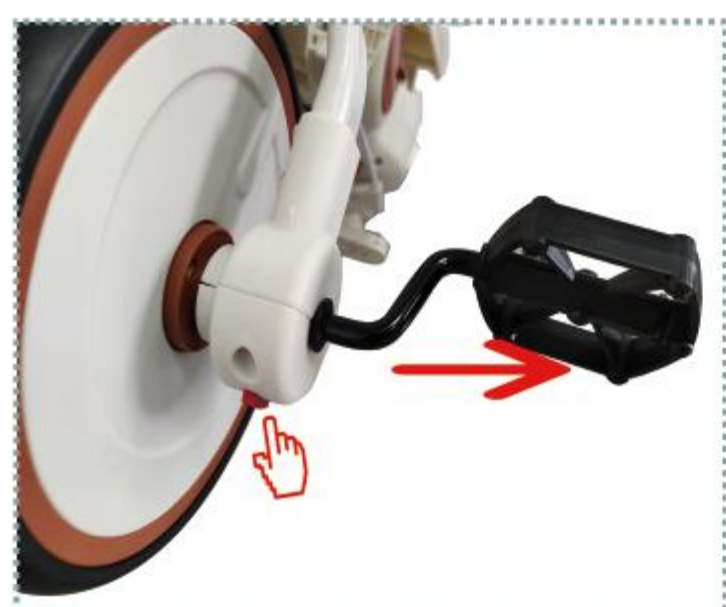


Fig2

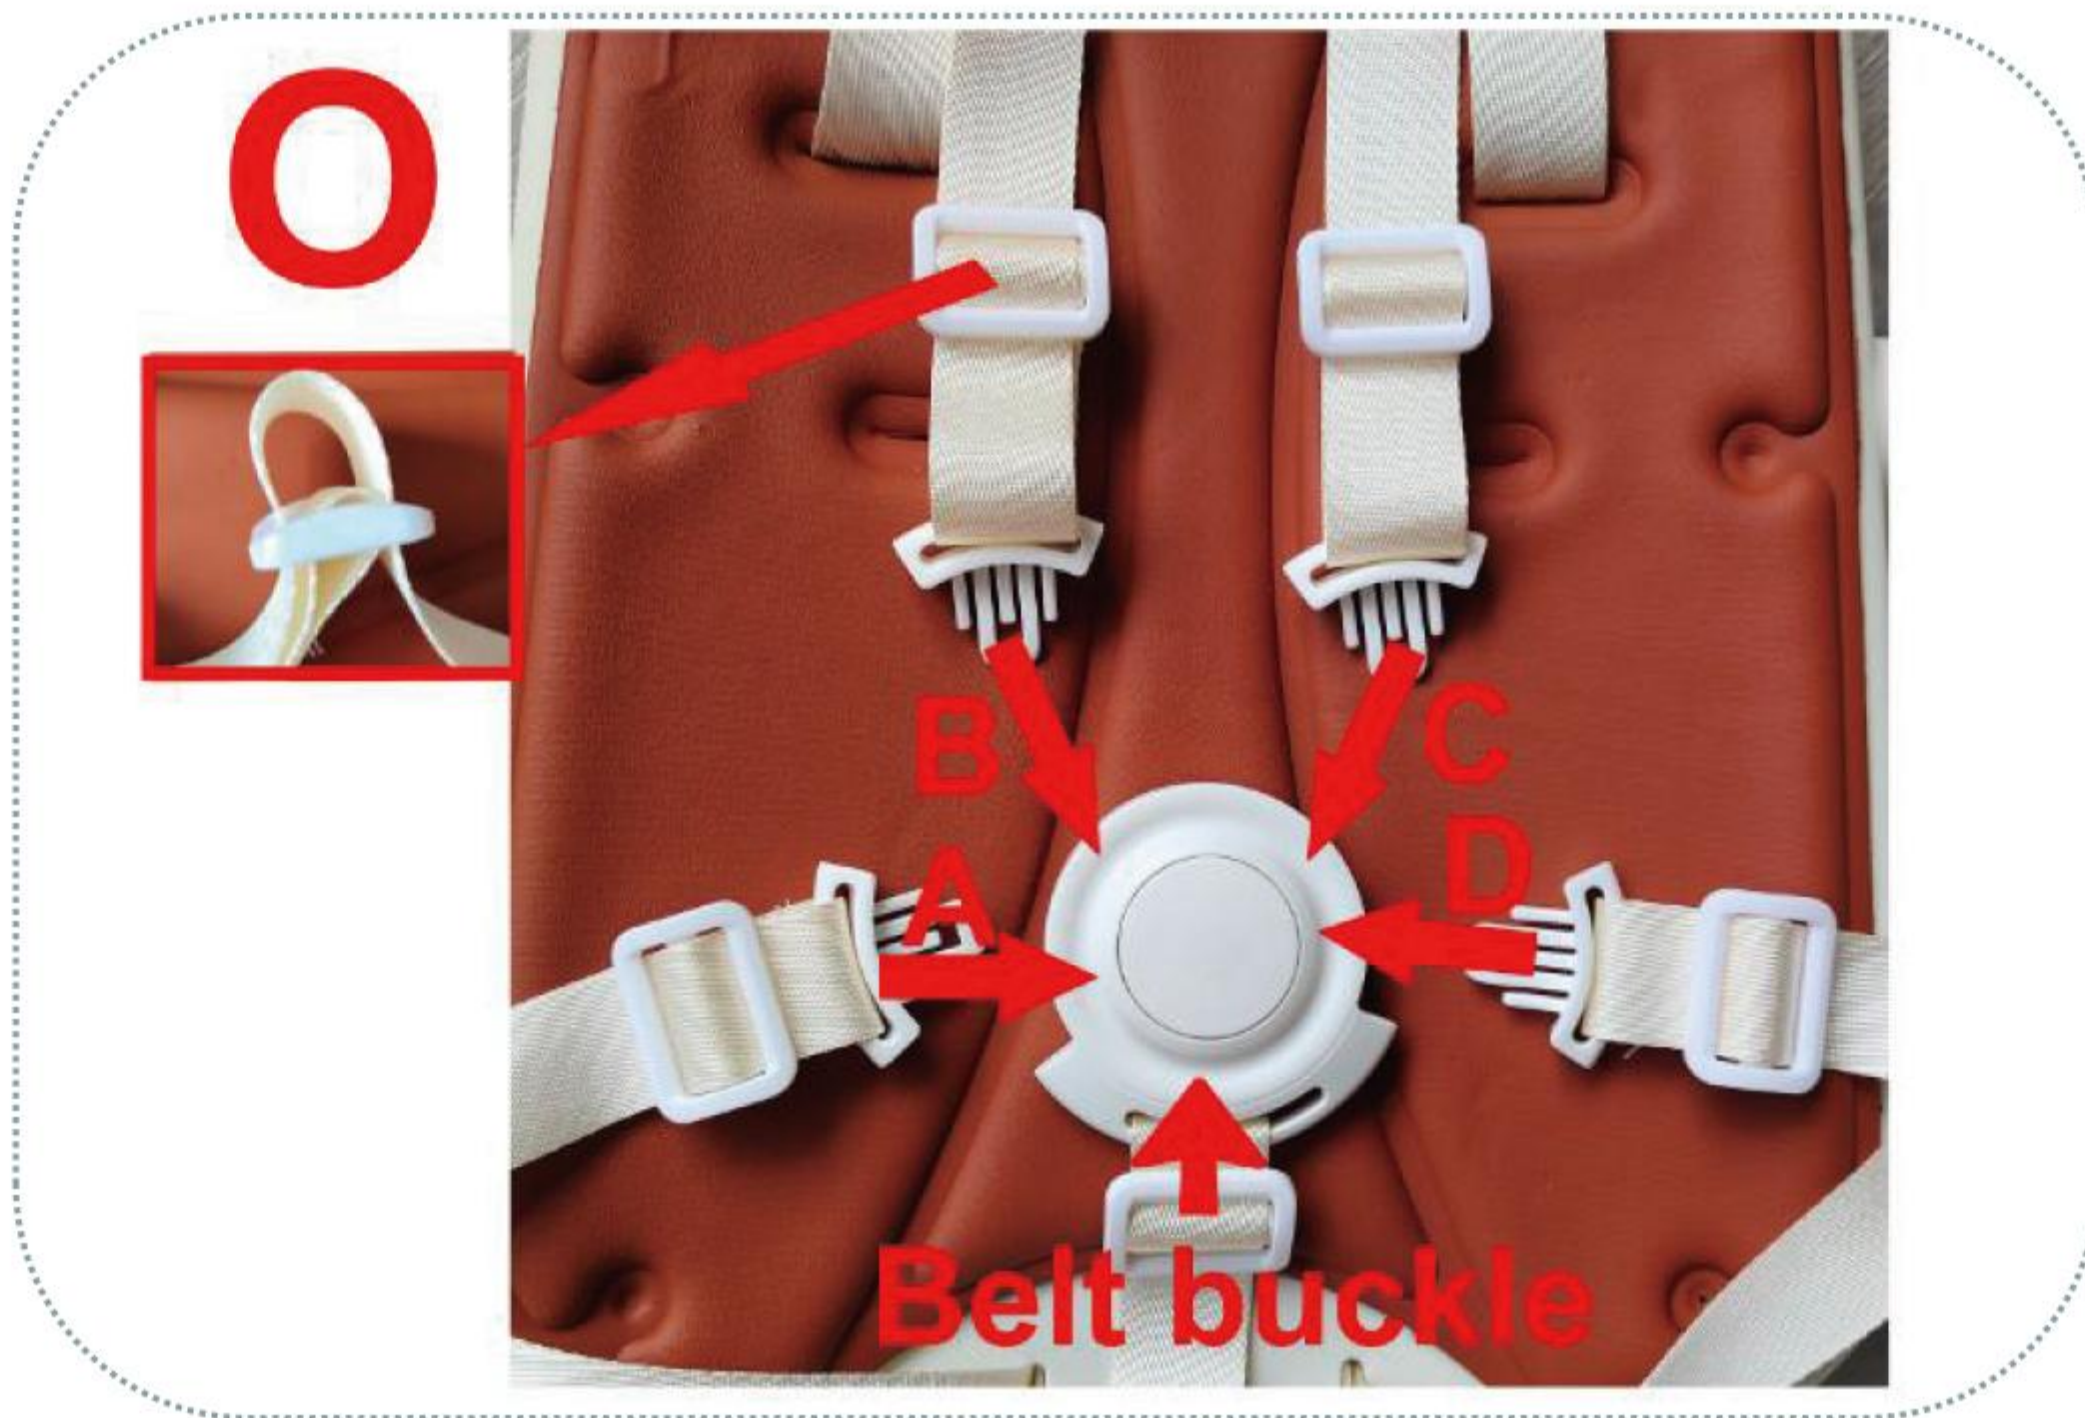


Fig3

11. Insert and rotate the shaft of the foot pads until the red button pops out, make sure the pads can't pull out.
For balance bike configuration, press the red button as Fig2 disassemble foot pad, insert them under the saddle as Fig3,

Safety Belt Operations

Insert ABCD into the safety snap socket, press the belt buckle to release the belts; A and D for waist band belts, Band C for shoulder belts;
For O part, pull the buckle right or left to adjust the belt.



Braking System Operation



Put down the brake device to stop the tricycle, and use foot to pull on it to release brake.

Eight Modes



Canopy trike (12M-18M)



Push trike (12M+)



Push trike (18M+)



Push trike (24M+)



Trike (30M+)



Baby walker (24M+)



Balance Bike (24M-36M)



Fold Mode