


100 mm

anko

Cassette Player Instruction Manual


K: 43598878 | T: 71413235 (Model: JLR-80932)

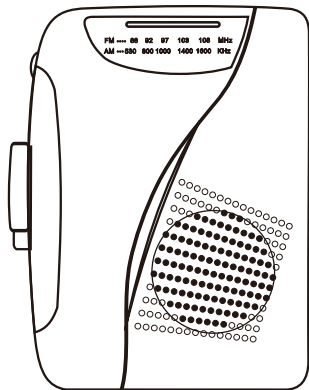

Please read user manual carefully before use
Includes
› Cassette Player
› Earphone
› Manual

Please read the safety instructions carefully before using the product for the first time and keep the instruction for future reference.

Location of Controls:

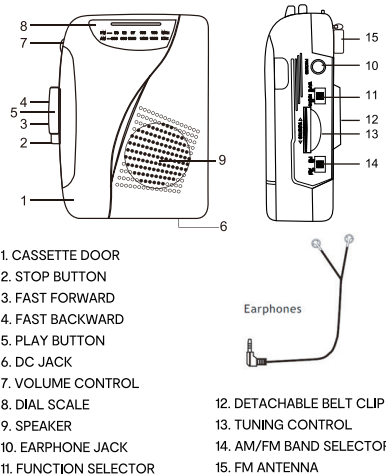

POWER SOURCE

This Cassette Player operates on 2 'AA'(UM-3) batteries, or from an AC/DC adaptor.

Note: Battery and AC/DC adaptor are not included.

A. BATTERY OPERATION

For better performance and longer operating time, we recommend using alkaline-type batteries.

1. Open the BATTERY DOOR by first sliding it downwards and then opening it upwards.
2. Following the polarity diagram on the back cabinet, insert 2 'AA' (UM-3) batteries and close the BATTERY DOOR.


IMPORTANT: Be sure that the batteries are installed correctly. Incorrectly installed batteries may damage the unit.

3. (a) Do not mix old and new batteries.
(b) Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
5. Do not dispose of batteries in fire: batteries may leak or explode.

B. AC ADAPTOR OPERATION (adaptor is not included)

Insert the DC plug into the DC input jack located at the bottom of the unit.

NOTE: Only use an adaptor which has an output voltage rated at 3V DC 600mA and a center negative plug.



RADIO OPERATION

1. Switch the FUNCTION SELECTOR to "RADIO".
2. Switch the BAND SELECTOR to "AM" or "FM" for the desired band.
3. Turn the TUNING KNOB to select the desired radio station.
4. Adjust the VOLUME CONTROL to obtain the desired sound level.
5. To turn the radio off, switch the FUNCTION SELECTOR to "TAPE".

IMPROVING RADIO RECEPTION

1. Adjust the position of the Telescopic FM antenna to improve FM radio reception.
2. When tuning in AM reception, be sure to place the unit in a vertical position. For maximum AM sensitivity, keep turning the unit slowly while keeping it vertical until the best reception is obtained.

CASSETTE PLAYER OPERATION

1. Set the FUNCTION SELECTOR to "TAPE" if required.
2. Open the CASSETTE DOOR and insert a pre-recorded cassette tape with the exposed tape facing upwards then Push cassette door to close the cassette door.
3. Press the PLAY BUTTON and adjust the VOLUME CONTROL to obtain the desired sound level.
4. Press the FAST FORWARD or FAST BACKWARD BUTTON when you wish to rapidly advance or rewind the tape.
5. Press the STOP BUTTON to stop the tape cassette operation.

STANDBY SETTING

In order to preserve the battery life for as long as possible, set the FUNCTION switch to the TAPE position when the unit is not in use.

PRECAUTIONS FOR USE

1. For safety, do not wear headphones while in road traffic.
2. Keep the volume set to a comfortable listening level. Excessive loudness can damage your hearing.


AUTOMATIC STOP

To protect your cassette tapes and prevent unnecessary wear to the pinch roller of the cassette mechanism, this unit is equipped with an Automatic Stop System. When the tape reaches the end, the cassette player will automatically stop playback.


CASSETTE TAPE OPERATING TIPS

1. High quality tapes are recommended to obtain maximum quality reproduction from recordings.
2. Tapes with a playing time of 120 minutes (C-120) are not recommended because they contain thinner and longer tape, which has a greater chance of malfunctioning and jamming, which may damage the cassette mechanism.
3. To obtain good sound reproduction, the head should be cleaned after every 10 to 20 hours of use. It is also recommended that the cassette be kept away from direct sunlight or in hot, humid or dusty places.
4. If there is slack in the tape, remove the slack prior to inserting the cassette. To remove the slack, insert a pencil into the hub and rotate clockwise as shown below:

69 mm

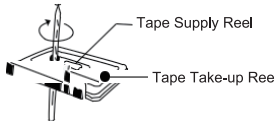

5. A leader tape is provided at the beginning on each cassette. There is no recording on this area, so it is necessary to let the tape run for about five seconds to clear the head.
6. Keep the tape head clean. A dirty head can cause distorted sound or improper tape speed. Depress the PLAY BUTTON and use a small cotton swab with tape head cleaner or alcohol to clean the tape head, capstan, and pinch roller as shown below.



READ THIS IMPORTANT INFORMATION BEFORE USING YOUR EARPHONES

1. Avoid extended play at high volumes: it may impair your hearing.
2. If you experience ringing in your ears, reduce the volume or shut off your unit.
3. Do not use while driving a motorized vehicle. This is dangerous and also illegal in some states.
4. Keep the volume at a reasonable level, even if your headset is an open-air type designed to allow you to hear outside sounds. Please note excessively high volume may still block outside sounds.

SAFETY INFORMATION

1. Do not attempt to disassemble this unit.
2. Make sure that pins or other foreign objects do not get inside the unit.
3. Take care not to drop the unit or subject it to strong shocks.
4. Do not store or operate in excessive heat or cold.

CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise, such as fluorescent lamps or motors.

Troubleshooting Guide

Playback Failure

- › Ensure the cassette tape is fully rewound to the correct starting position.
- › Clean the tape head using a cotton swab moistened with isopropyl alcohol.

Distorted Sound or Abnormal Noise

- › Clean the tape head, pinch roller, and capstan shaft thoroughly.
- › Check the cassette tape for signs of mold, dirt, or physical damage.
- › Set the volume control to a moderate level to avoid overdriving the speaker.

Mechanical Malfunctions

- › In the event of a tape jam or tangling, stop playback immediately.
- › Carefully remove the cassette to avoid damaging the tape or mechanism.
- › Inspect the drive belt for signs of wear, slackness, or misalignment. Replace if necessary.

Specifications

Radio Frequency Range	FM 88-108 MHz AM 530-1600 KHz
Frequency Response	125-6.3 KHz
Maximum Output	80mW
Power Source	Batteries DC 3V (2 x AA)
Accessories	Earphones
Product Dimension	120 x 90 x 45mm

WARNING

- › Do not dispose of unit in fire or water.
- › Never attempt to disassemble and reassemble.
- › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist.
- › Check with your local authority for recycle advice.
- › Keep your device and all accessories out of the reach of children and animals.
- › Small parts may cause choking or serious injury if swallowed.
- › Avoid exposing your device to very cold or very hot temperatures (below 0 °C or above 45 °C).

- › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device.
- › Do not allow your device to get wet-liquids. Liquids can cause serious damage.
- › Do not handle your device with wet hands.
- › Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of battery, that can result in an explosion.
- › Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- › Battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will

bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567