


Activity Gym

Instruction Manual

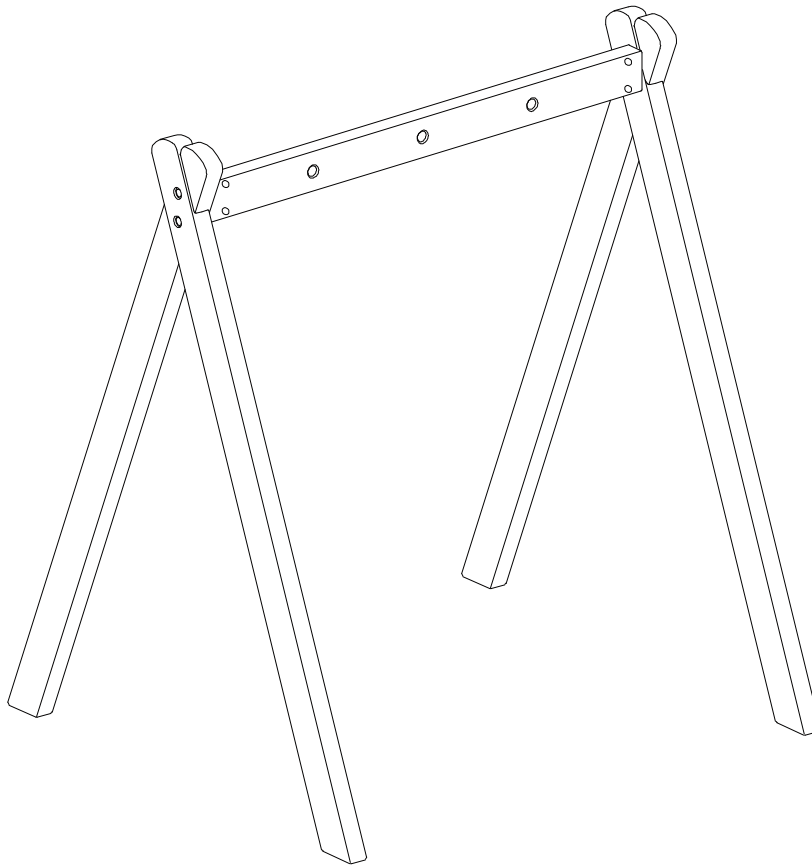

MAXIMUM LOAD WEIGHT



The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Read all instructions BEFORE assembly and USE of product.


**IMPORTANT! RETAIN FOR FUTURE REFERENCE
PLEASE READ CAREFULLY**

ACTIVITY GYM

Instruction Manual

Parts list


Ax 4
M6X60mm
Connecting bolt




Bx4
Φ10X13mm
Barrel nut




Cx1
Allen key




2 x Front leg

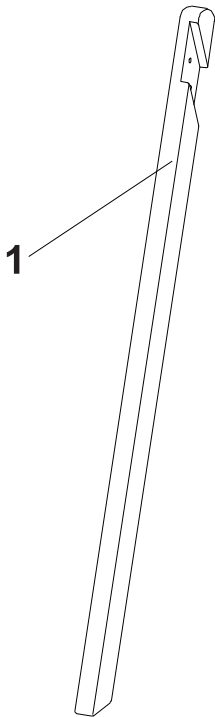

2 x Rear leg

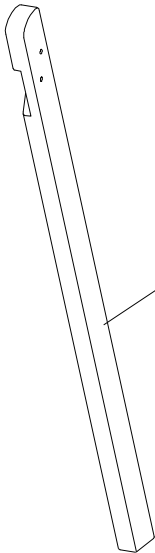


1 x Top rail

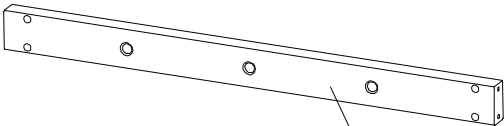


Assembly Instructions

Adult assembly required


Step 1:

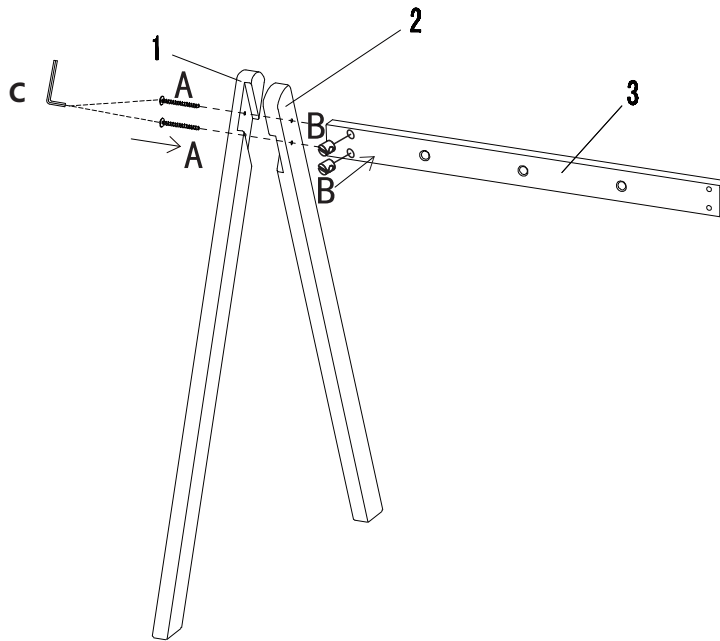

Step 2:

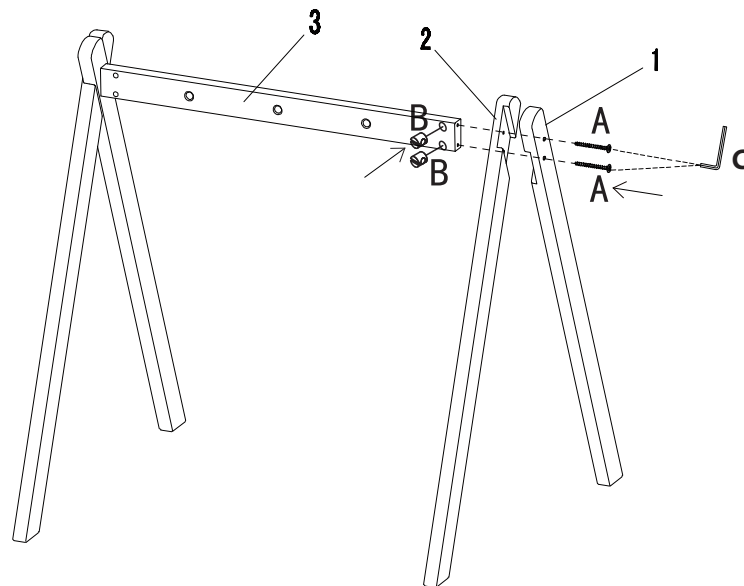

Step 3:

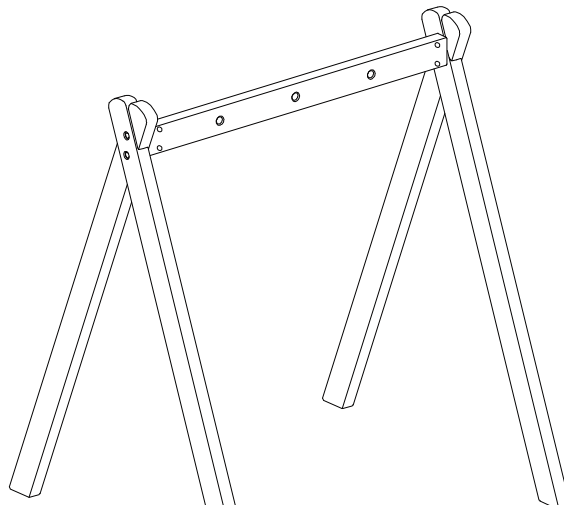

Note: Accommodates 3 hanging toys (not included).

WARNING!

- Always use under competent adult supervision. Never leave the child unattended while using this product.
- Discontinue use immediately when the child can sit up unaided, roll over, push up on hands and knees, or begins to pull themselves up - whichever comes first.
- Intended for use by infants lying on their back. Not suitable for active play, standing, or climbing.
- Ensure the activity gym is placed on a flat, stable, and soft surface (e.g., a playmat or carpeted floor).
- Keep away from hazards such as stairs, heaters, cords, or sharp objects.
- Check that all screws, fasteners, and hanging toys are secure before each use.
- Be aware when adding hanging toys that may pose a strangulation or choking hazard.
- For indoor use only. Always use the product on a flat level floor.

Care and maintenance:

- Wipe the wooden frame with a soft, damp cloth if required and dry thoroughly.
- Do not soak, submerge, or expose wooden components to excessive moisture or direct sunlight.
- Do not use abrasive cleaners, bleach, or harsh chemicals, as these may damage the wood or finishes.
- Regularly inspect the structure, hanging loops, and toy attachments for signs of wear, damage, or splinters. Discontinue use if any component is compromised.
- Store in a dry, well-ventilated area when not in use.
- When moving the activity gym, always lift and place in position. Do not drag the activity gym as damage may result.

Drawings in the manual are for visual purposes only. Actual product may vary slightly.

K: 43-602-728 | T: 71-442-051

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567