

anko

FLAT FOLD HIGH CHAIR INSTRUCTION MANUAL

6-36
months



**IMPORTANT! READ CAREFULLY AND KEEP
FOR FUTURE REFERENCE**

WARNING

Read all instructions **BEFORE** assembly and **USE** of product

IMAGES/ DRAWINGS IN THE MANUAL ARE FOR VISUAL PURPOSES ONLY. ACTUAL PRODUCT MAY VARY SLIGHTLY. THE MANUFACTURER RESERVES THE RIGHT TO CHANGE ANY SPECIFICATION OR FEATURES WITHOUT PRIOR NOTICE.

WARNING

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED — MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS.
- POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.
- ALWAYS USE THE RESTRAINT SYSTEM.
- FALLING HAZARD: PREVENT YOUR CHILD FROM CLIMBING ON THE PRODUCT.
- DO NOT USE THE PRODUCT UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.
- BE AWARE OF THE RISK OF OPEN FIRES AND OTHER SOURCES OF STRONG HEAT IN THE VICINITY OF THE PRODUCT.
- BE AWARE OF THE RISK OF TILTING WHEN YOUR CHILD CAN PUSH THEIR FEET AGAINST A TABLE OR ANY OTHER STRUCTURE.
- Adult assembly required.
- Take care when unpacking and during assembly.
- Dispose of all packing materials carefully after assembly.
- Use only on a flat, even and horizontal floor. Do not elevate the high chair on any structure or table.
- To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords and electrical cords. Position the high chair away from furniture when the high chair is not being used at a table with the tray removed.
- Do not use the high chair until the child can sit up unaided.
- This high chair should be used in an upright position only by children capable of reliably and consistently sitting upright.
- This high chair is intended for children able to sit up unaided and up to 3 years/ 36 months or a maximum weight of 15kg/33.1lb.
- Do not use this high chair for more than one child at a time. Do not leave other children playing unattended near the high chair.
- Keep children away when unfolding and folding the product to avoid injury.
- If the high chair is not working correctly, do not use and seek repair.
- Regularly inspect your high chair. Discontinue use if any part is broken, torn or missing.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.

PARTS LIST:



Seat frame
with footrest x1



U shape tube



Front leg frame
(narrower at top)



Rear leg frame
(wider at top)



Tray x1

ASSEMBLY:

1. Unfold the high chair.



2. Insert the U shape tube into the seat cover.




3. Press the buttons on the seat frame to connect the back frame tube at both sides. Ensure the buttons snap into place with a 'click' sound.



4. Your high chair should now be assembled as shown.



5. Press the buttons on rear leg frame to connect the rear side frame at both sides. Ensure the buttons snap into place with a 'click' sound.

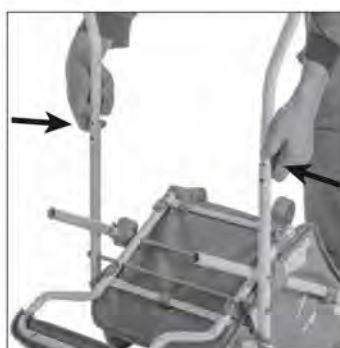

6. Repeat the above for connecting front leg frame to front side frame. Ensure the buttons snap into place with a "click" sound.



7. Connect the crotch strap to the top bar by fastening the two press studs.



TRAY ASSEMBLY:

1. Connect the tray to the covers at both sides. Press the buttons at both sides of tray for connection. Ensure the buttons snap into place with a 'click' sound.



2. Push the tray down firmly to fasten the clips to the underneath of the top bar.



3. The high chair is now ready to use.



TRAY STORAGE:

1. Lift the tray firmly to release the clips from top bar.




HARNESS OPERATION:

1. To secure your child in the harness, push the shoulder strap buckle prongs into the waistband buckle housing.
2. Push the buckle prongs into the buckle housing until they snap into position.
3. Adjust slider (A) for all the straps to ensure the harness snugly fits your child.



4. To release, press the buckle.
5. Repeat for other side.

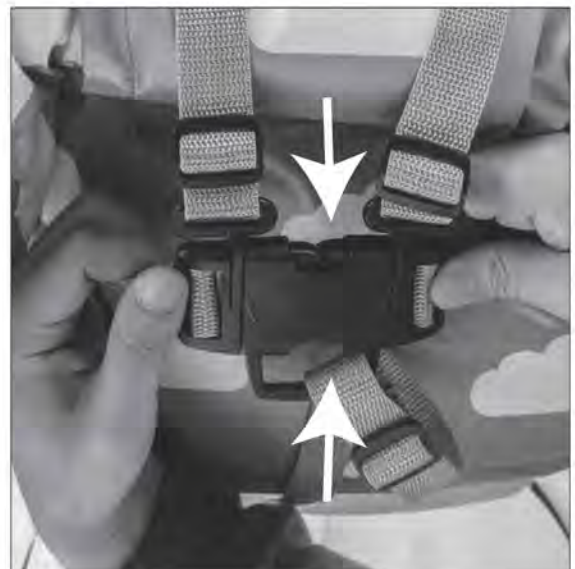

WARNING

USE THIS HARNESS AT ALL TIMES.

TO FOLD THE HIGH CHAIR:

1. Ensure the tray is in storage position.



2. Disassemble the crotch strap by unfastening the two press studs.



WARNING

ENSURE CROTCH STRAP IS RE-ASSEMBLED
BEFORE EACH USE (see assembly instructions)



3. Press the buttons located at both sides of the high chair at the same time and pull to fold.



4. Keep pulling until it folds completely.



CARE AND MAINTENANCE

- All assembly fittings are to be tightened properly. Inspect regularly and retighten as necessary.
- Plastic and metal parts: Wipe with a damp cloth.
- Fabric: Wipe clean with a damp cloth. Do not bleach. Do not iron.
Do not dry clean ☒
- Do not use abrasive pads, bleach or strong household cleaners.
- Avoid direct heat and sunlight.
- Dry thoroughly before storing.
- Always store in a clean and dry place.

Keycode: 42318101

MADE IN CHINA

© KMART AUSTRALIA LIMITED

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

KMART AUSTRALIA - 690 SPRINGVALE ROAD, MULGRAVE, VIC 3170 AUSTRALIA.

KMART NEW ZEALAND - REGIONAL OFFICE C/O KMART PAPATOETOE STORE,
HUNTERS PLAZA, GREAT SOUTH ROAD, PAPATOETOE, AUCKLAND, NEW ZEALAND.

FOR USA: IMPORTED BY ANKO RETAIL INC.

19500 ALDERWOOD MALL PARKWAY LYNNWOOD WA 98036 USA.